



RAZER CLIO


MASTER GUIDE

CONTENTS

1. WHAT'S INSIDE	2
2. WHAT'S NEEDED	3
3. LET'S GET YOU COVERED	3
4. SETTING UP YOUR HEAD CUSHION.....	4
5. USING YOUR HEAD CUSHION.....	7
6. CONFIGURING YOUR RAZER CLIO VIA RAZER SYNAPSE.....	10
7. SAFETY AND MAINTENANCE	23
8. LEGALESE.....	25

1. WHAT'S INSIDE

- Razer Clio

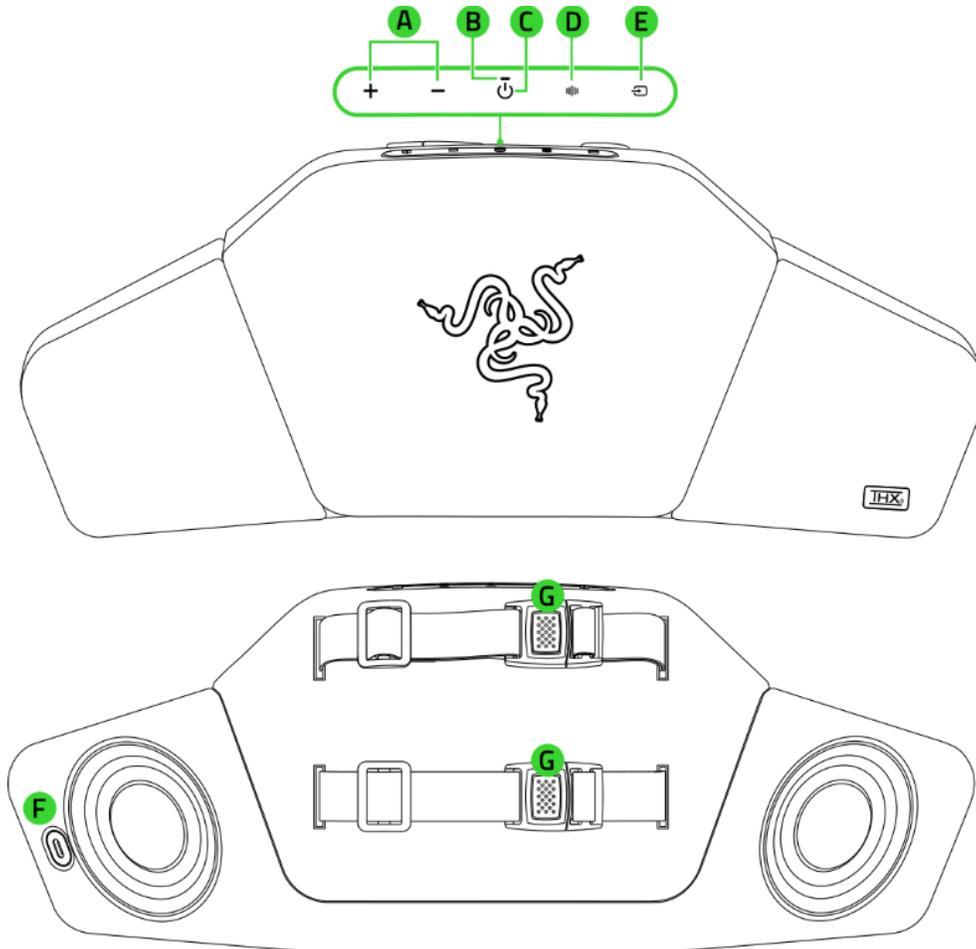

A. Volume control buttons

B. Indicator LED

C. Power button


D. EQ Button

E. Source button

F. Charging port

G. Adjustable chair straps

- USB Type C HyperSpeed Wireless Dongle

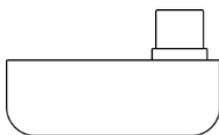

- Important Product Information Guide

2. WHAT'S NEEDED

PRODUCT REQUIREMENTS

- Razer gaming chair*
- PC with a USB Type C Port (for multiple-audio setup)
OR
- Devices with Bluetooth connectivity (as a stand-alone speaker)
- 15W USB Type C charging adapter or a USB Type C port for charging**

RAZER SYNAPSE REQUIREMENTS

- Windows® 10 64-bit (or higher)
- Internet connection for software installation

* Also compatible with other third-party gaming chairs.


** Charging time may vary depending on the power source.

3. LET'S GET YOU COVERED



Register your product and score exclusive benefits

razerid.razer.com/warranty

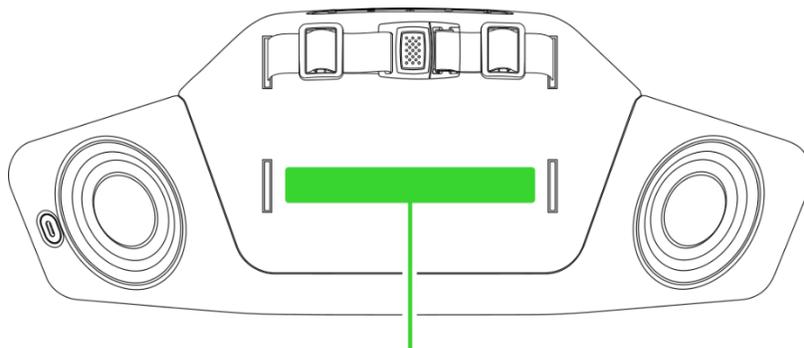


*Your product's serial number
can be found here.*

4. SETTING UP YOUR HEAD CUSHION

ATTACHING YOUR HEAD CUSHION


Strap the head cushion on your gaming chair's backrest.

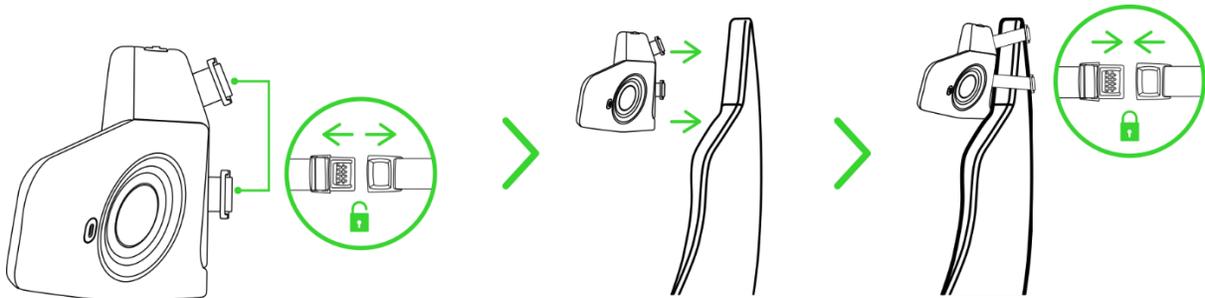

i Make sure the head cushion is securely strapped into your gaming chair.

CHARGING YOUR HEAD CUSHION

Connect the head cushion to a 15W USB Type C charging adapter using a USB Type C to Type C cable and plug it into a power outlet.

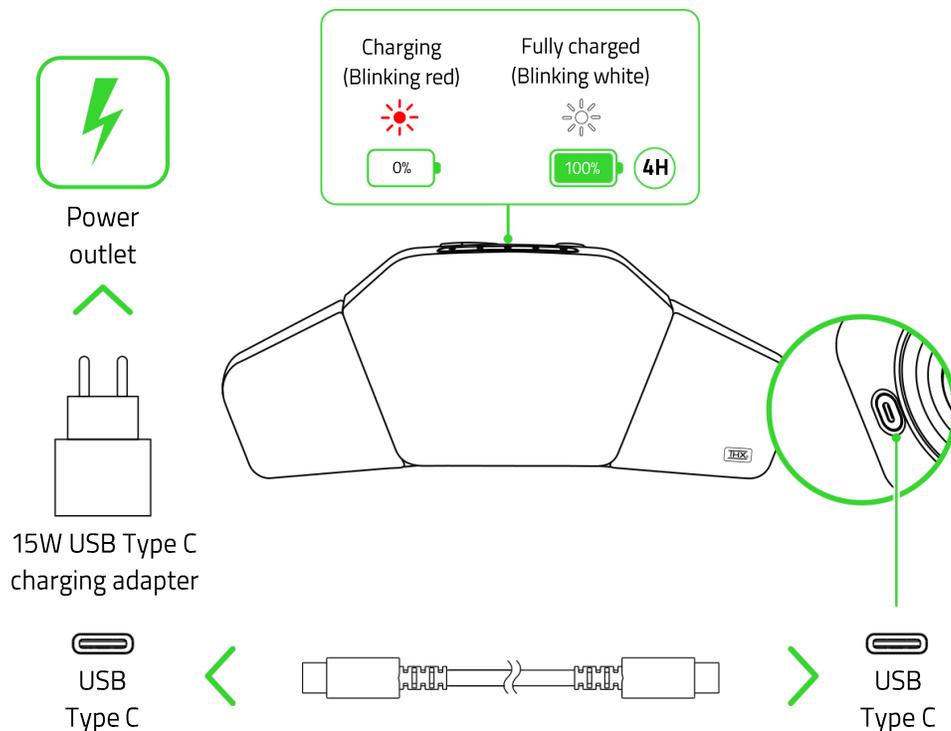


i Charging time may vary depending on the power source. External charger and cable are sold separately. When charging the head cushion, always organize the cable to avoid tripping hazards. Alternatively, detach the head cushion when charging.

CONNECTING TO YOUR HEAD CUSHION


A. RAZER HYPERSPEED WIRELESS MODE (2.4 GHz)

1. Connect the Razer HyperSpeed Wireless Dongle to your PC.

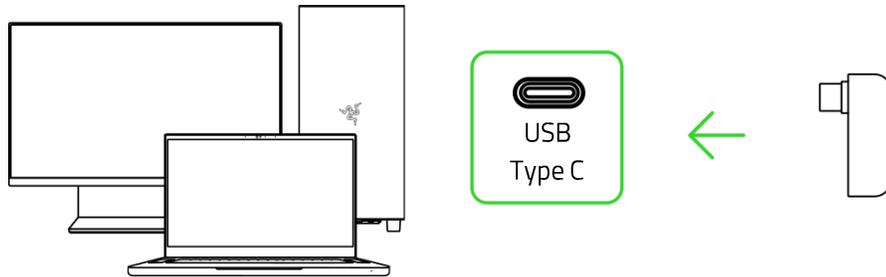

! Install Razer Synapse when prompted, or download the installer from razer.com/synapse.

2. Press the power button to turn on the head cushion.

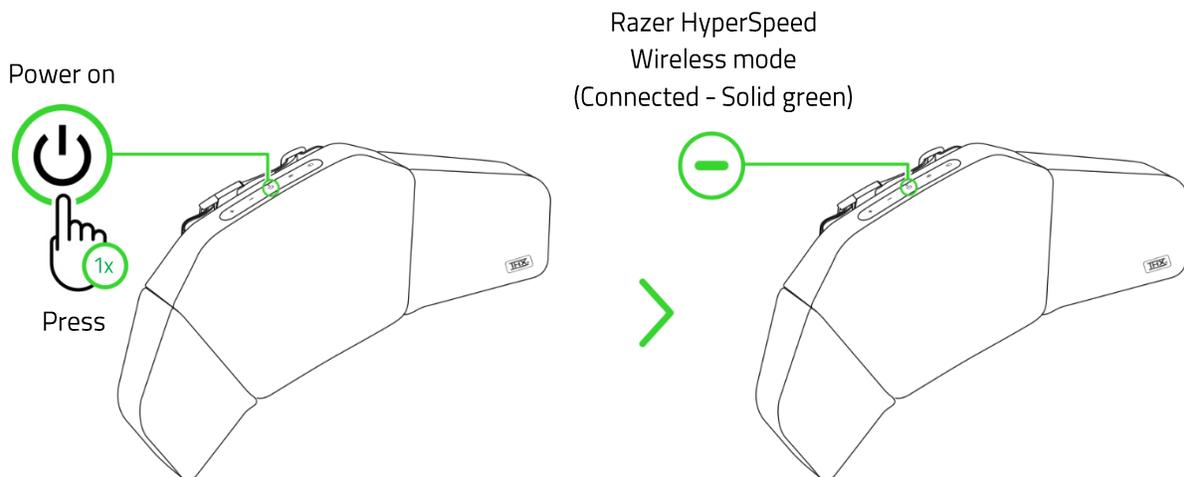

Your head cushion is now ready to use in Razer HyperSpeed Wireless mode (2.4 GHz).


RAZER SYNAPSE (PC)

Customize the audio of your head cushion by customizing equalizer presets or creating your own. Enhance sound details, seamlessly switch between using it as a primary speaker, or transform it into a rear surround speaker to complement your existing soundbar or 2.0/2.1 system.


i Only available on Windows 10 64-bit (or higher). Razer Synapse is accessible only in Razer HyperSpeed Wireless mode.

B. BLUETOOTH MODE


1. While in Razer HyperSpeed Wireless mode, press the Source button to switch the input source to Bluetooth.

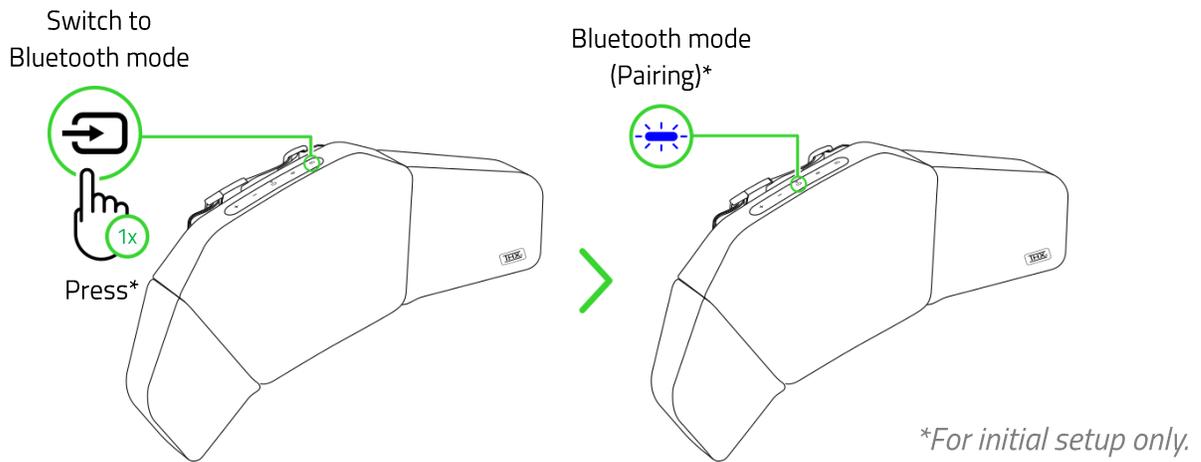

2. Activate Bluetooth on your device and select **Razer Clio BT** from the list of devices found.

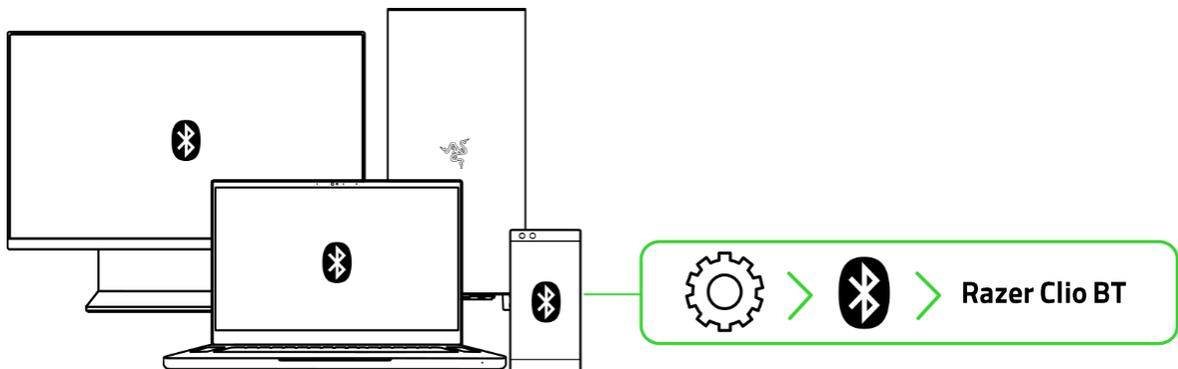

3. Wait until both devices are connected. The indicator LED will briefly show solid blue to indicate that the head cushion is now connected to your device.

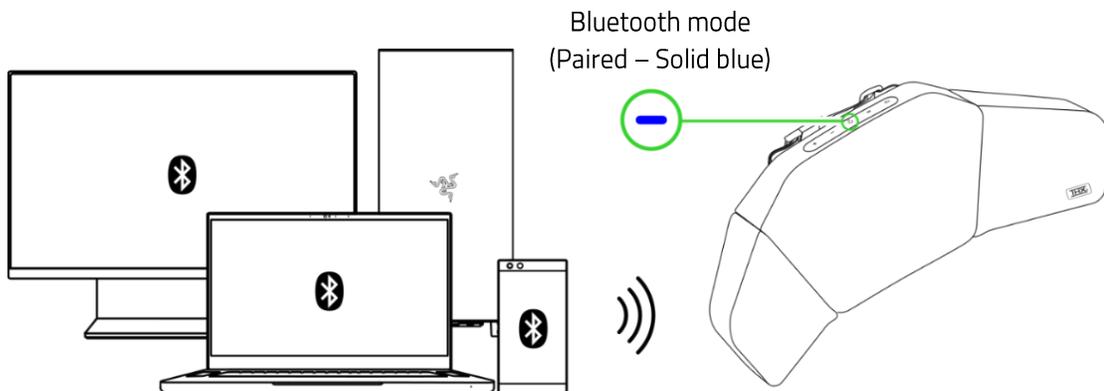


Your head cushion is now ready to use in Bluetooth mode.

5. USING YOUR HEAD CUSHION

LOW BATTERY NOTIFICATION


The indicator LED will blink red to indicate that the head cushion's battery power is less than 8%. This notification will repeat until the battery is drained or until the head cushion is charged.

LOW BATTERY
(Blinking red)

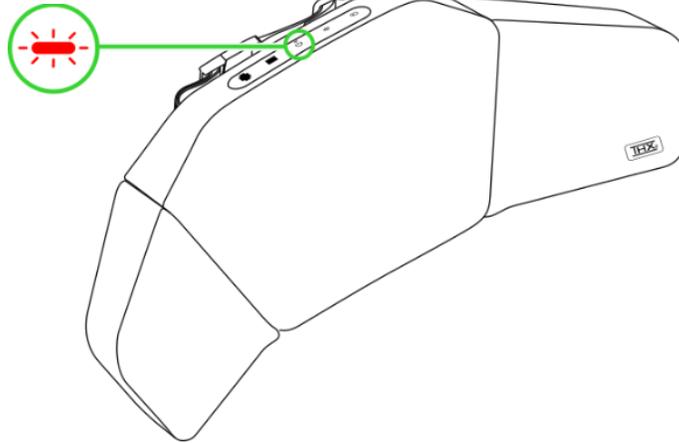

POWER ON / OFF


Power on the head cushion by pressing and holding the Power button until the indicator LED turns on. To power it off, press and hold the Power button again.

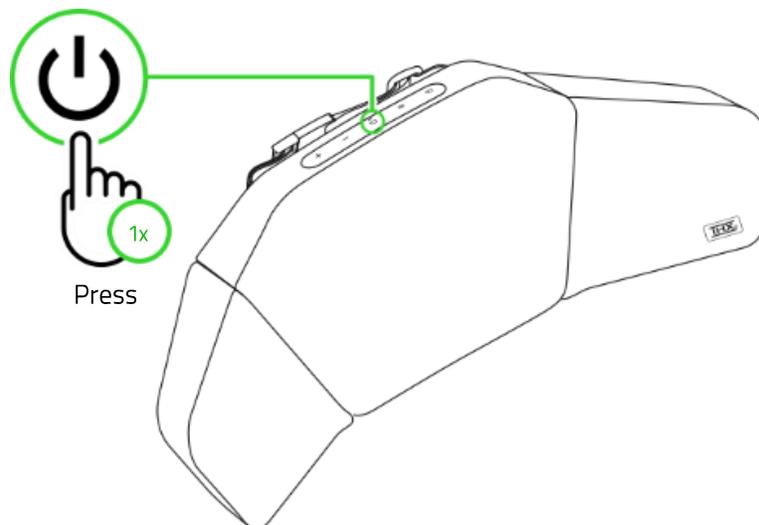

i The indicator LED will display the current audio source upon being powered on.


ADJUSTING THE AUDIO VOLUME

Use the Volume control buttons to increase or decrease the volume of the head cushion.

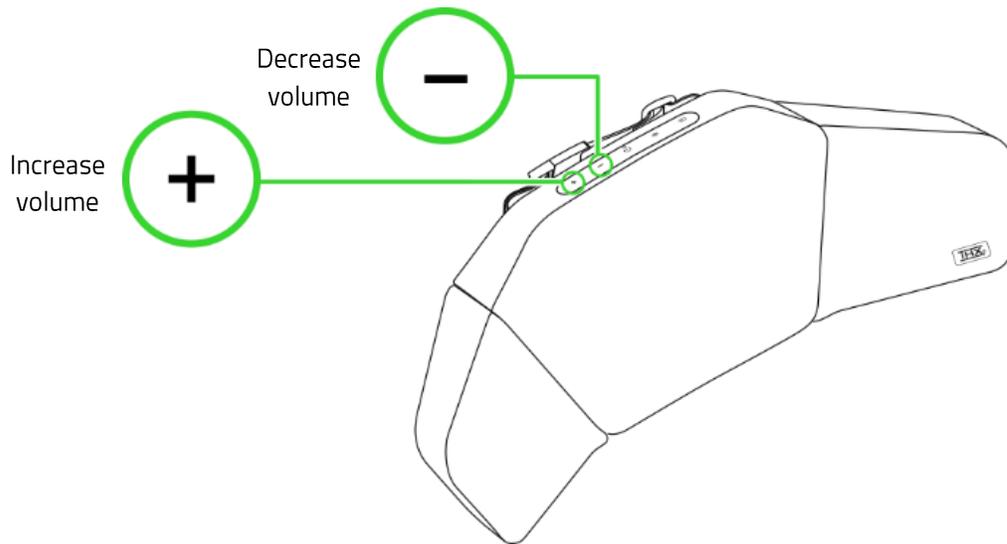

SWITCHING BETWEEN SOURCES


When powered on and connected to any audio source, press the Source button to switch between the wireless dongle and Bluetooth audio source, or vice versa.

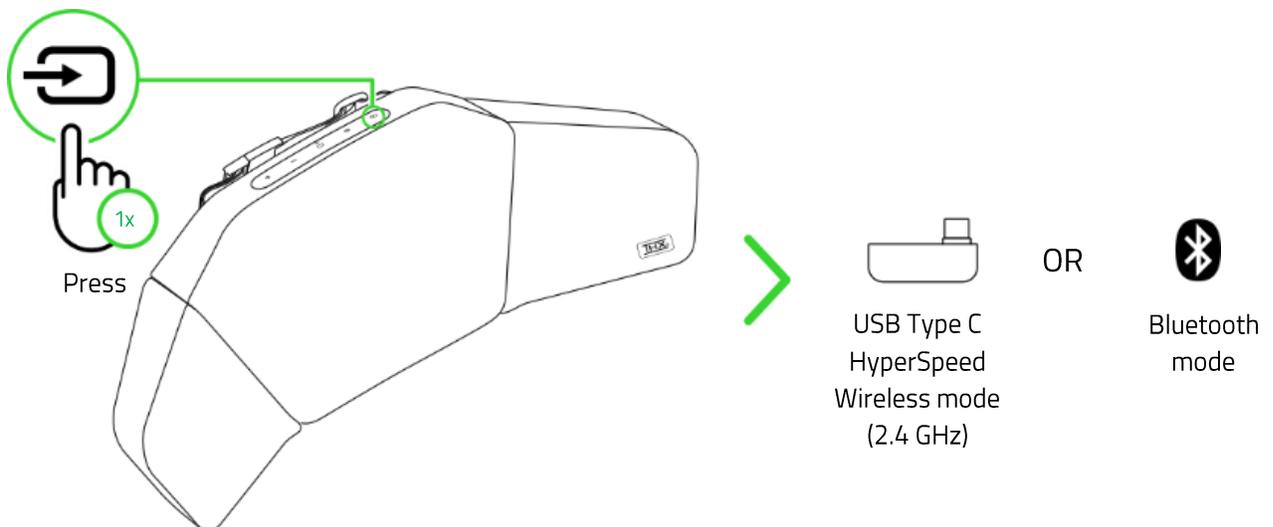

i Using Bluetooth as an audio source will reconnect the head cushion to the last paired device after it has been powered on again. Pairing mode will be activated if no device is found.


ACTIVATING BLUETOOTH PAIRING MODE (FOR NEW DEVICES)

While connected via Bluetooth, press and hold the Source button for 5 seconds to reactivate Bluetooth pairing mode and connect your device to **Razer Clio BT** as needed.

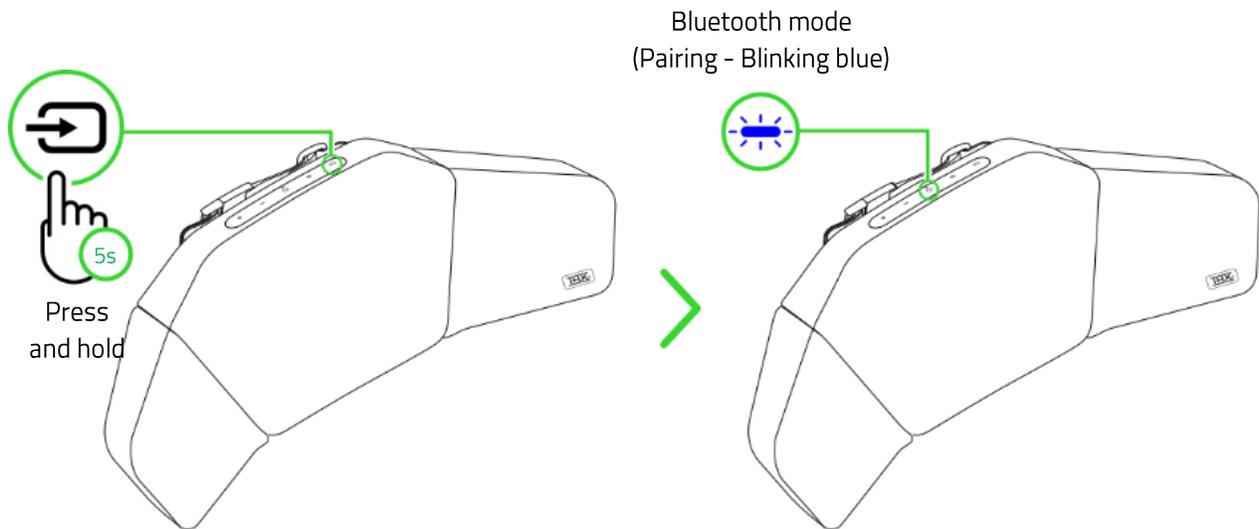

CYCLING THROUGH EQ PRESETS

Press the EQ button to cycle through the Game, Movie, Music, and Custom EQ presets.

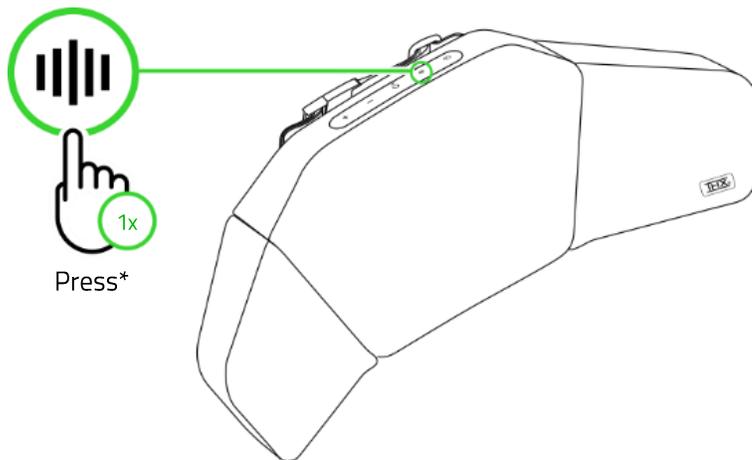

EQ Presets

Game
Movie
Music
Custom

**Repeat to cycle through presets.*

i You can also use the Razer Synapse app to switch between EQ presets. The Custom preset will only be available after being enabled on Razer Synapse.

6. CONFIGURING YOUR RAZER CLIO VIA RAZER SYNAPSE

i *Disclaimer: This guide provides an overview of the New Razer Synapse app and may only partially cover some of the features of your device. The New Razer Synapse requires an Internet connection to install, update, access, and save cloud-based features. Registering for a Razer ID account is recommended but optional. All features listed here are subject to change based on the current version, connected device(s), and supported add-ons.*

SYNAPSE TAB

The Synapse tab is your default tab when you first launch Razer Synapse. Use the following buttons below to navigate the user interface:

— Minimize

Clicking this button will minimize the app to the taskbar while it runs in the background.

☐ Maximize

This button expands the browser window to fill the entire screen. To restore the window to its original size, click the maximize button again.

✕ Close

This button will close all relevant tabs and terminate the application completely.

< Previous Tab

Clicking this button will return you to the last tab you have visited.

> Next Tab

Clicking this button will move you to the next page if you've recently used the Previous Tab button.

🔄 Refresh Tab

This button reloads the current page. Use this if a page isn't displaying correctly or you want to see the latest content.

⬇️ Download Update

If this button appears, that means there are changes to the app. Use this if a page isn't displaying correctly or you want to see the latest content.

☰ More

Clicking this button will open a pop-up so you can easily access your Devices, Modules, and Other Installed Apps tabs.

⚙ Settings

Clicking this button will open the Settings tab, so you can quickly change the settings to this app.

👤 Profile


This button will open a pop-up to access the Log In, Feedback, Rate This Software, Add WiFi Device, and Exit options.

❓ Info

Hovering over this button will pop up an additional information about a feature or function.


Dashboard

The Dashboard subtab is an overview of your Razer Synapse, where you can access all your Razer devices, modules, and online services.

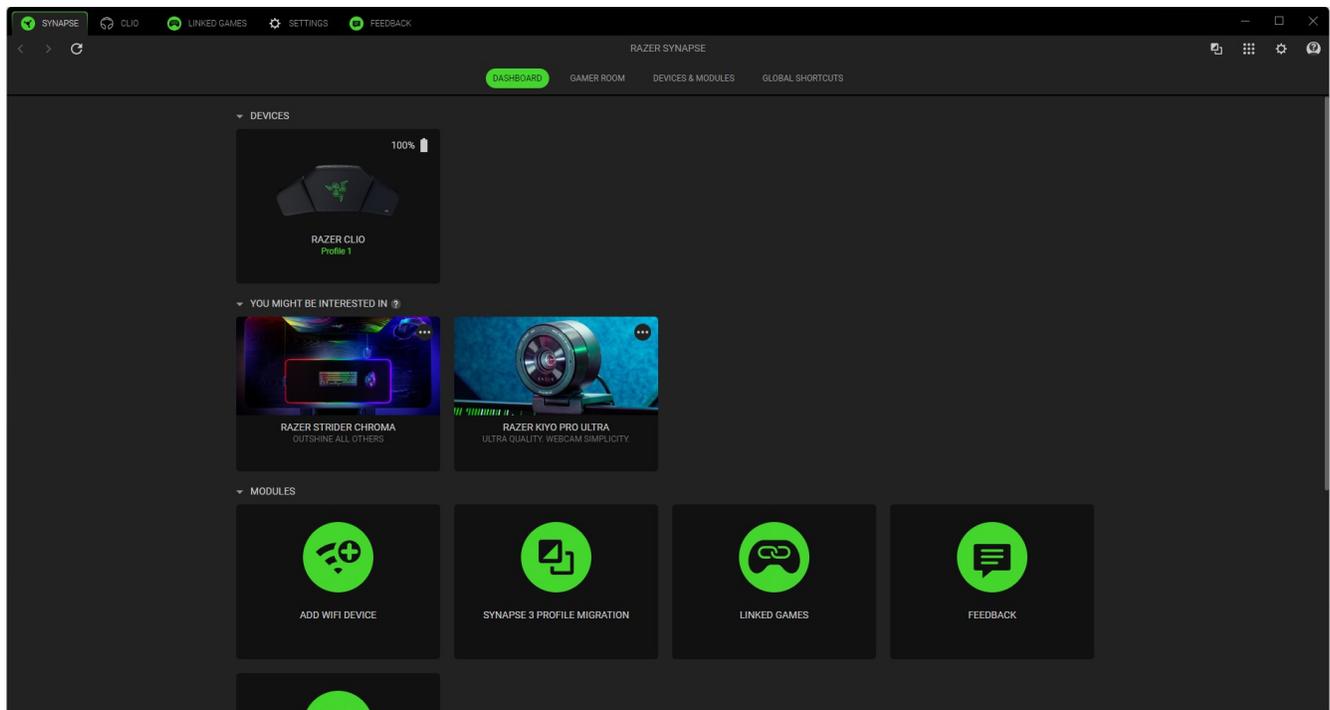

Gamer Room

The Gamer Room subtab shows all devices with the Razer Aether Light feature. From here, you can view and manage your Gamer Room-supported devices.

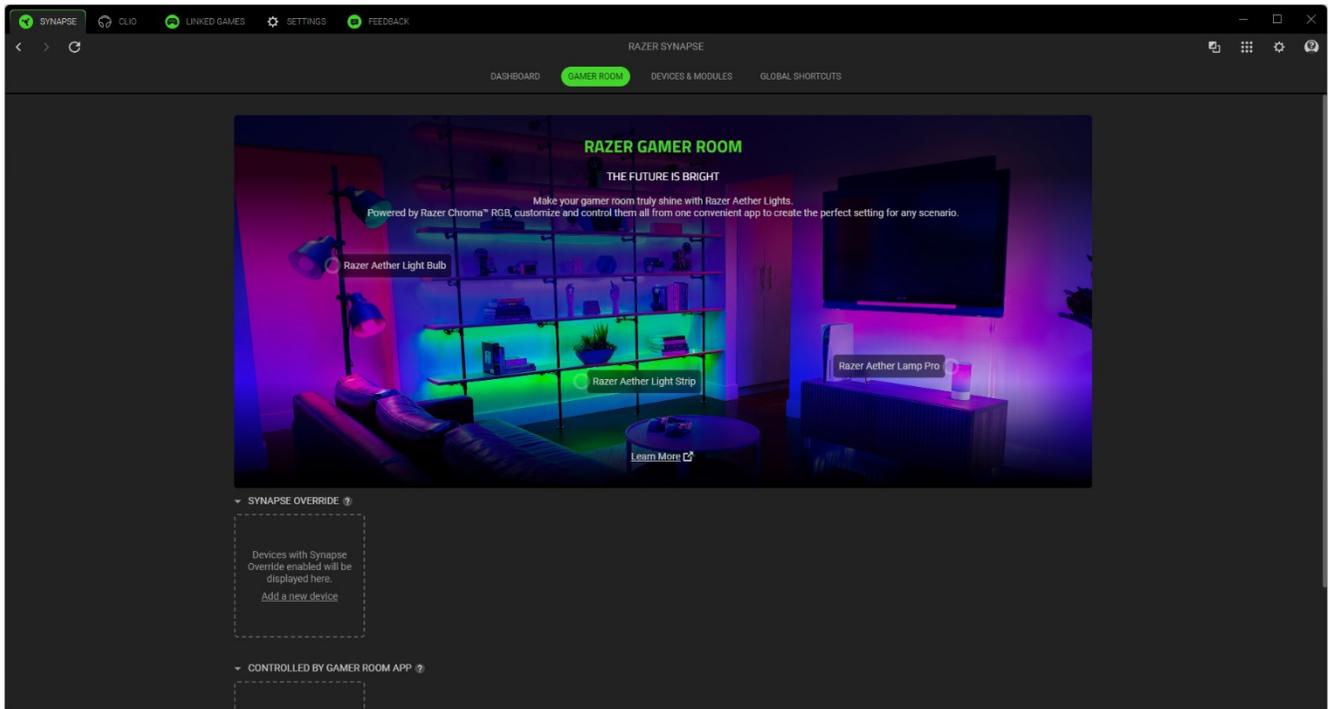

Synapse Override


This section allows you to select and customize your device's lighting and make it react to Chroma-enabled games and Chroma Connect apps using Razer Synapse.

Controlled By Gamer Room App

This section displays all supported devices controlled remotely by the Gamer Room app.

Devices & Modules


The Modules subtab displays all installed and available modules for installation.

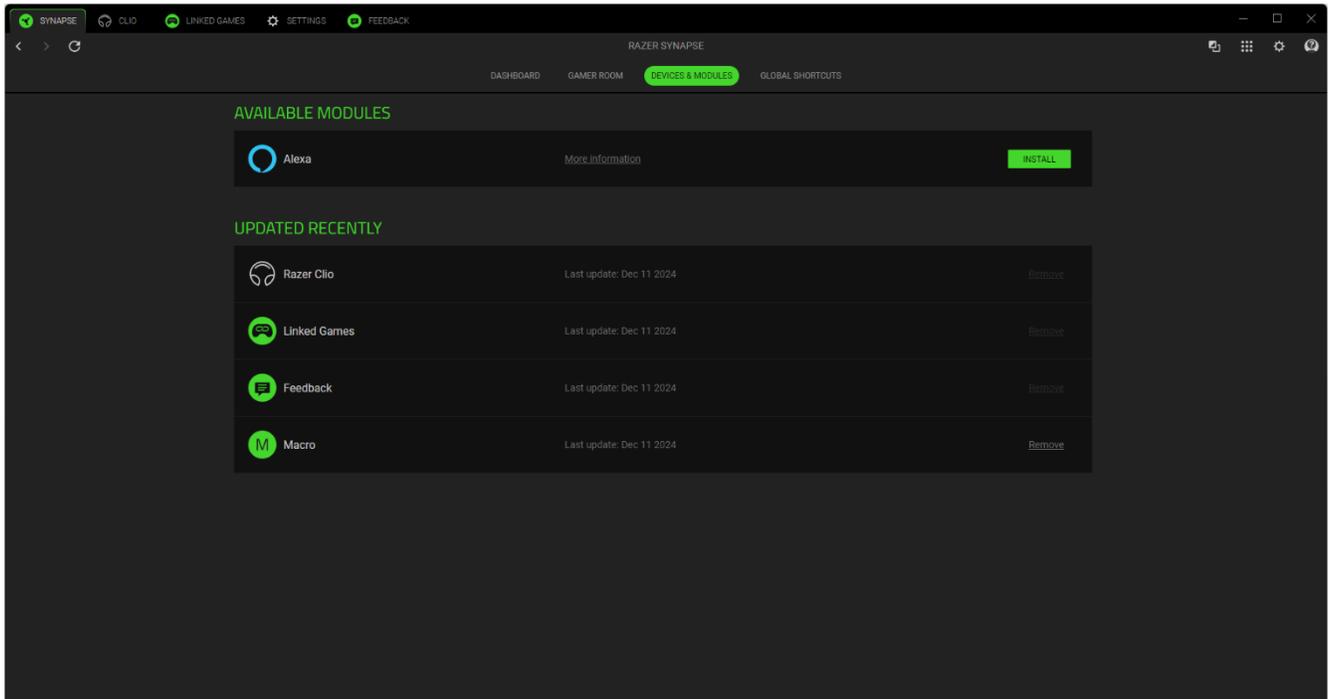

Global Shortcuts

Bind operations or Razer Synapse functions to custom key-combinations from any Razer Synapse-enabled device inputs, which apply across all device profiles.

 *Only Razer Synapse-enabled device inputs will be recognized.*

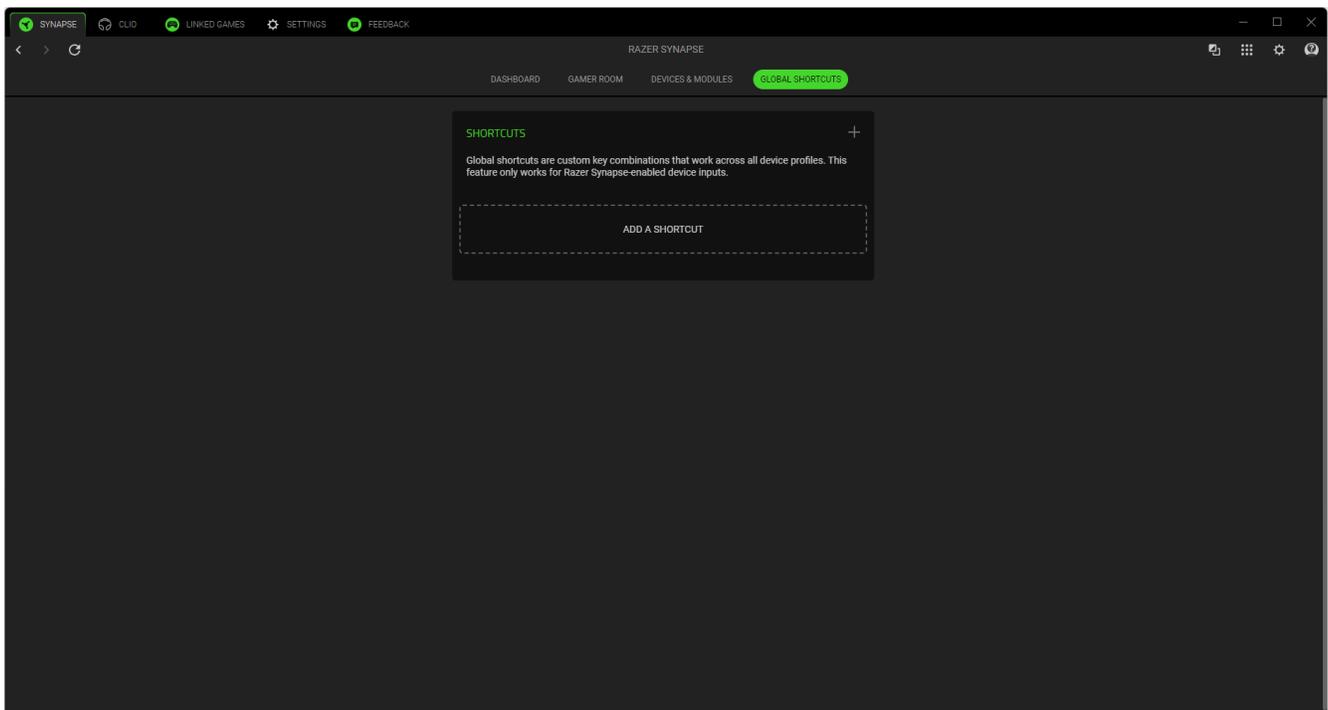

CLIO

The CLIO tab is the main tab for your head cushion. You can adjust your device settings from here, such as its overall volume, equalizer preferences, speaker mode, and power consumption. Any changes under this tab will be saved automatically to your local system and cloud storage. Use the following buttons below to access your profile options:

▾ Profiles Dropdown Bar


Clicking this dropdown bar will display all the profiles for this device so you can quickly change profiles.

⋮ Miscellaneous

Clicking this button will open a pop-up with options related to your current profile.

Sound

The Sound subtab is for adjusting and modifying your device's audio settings.

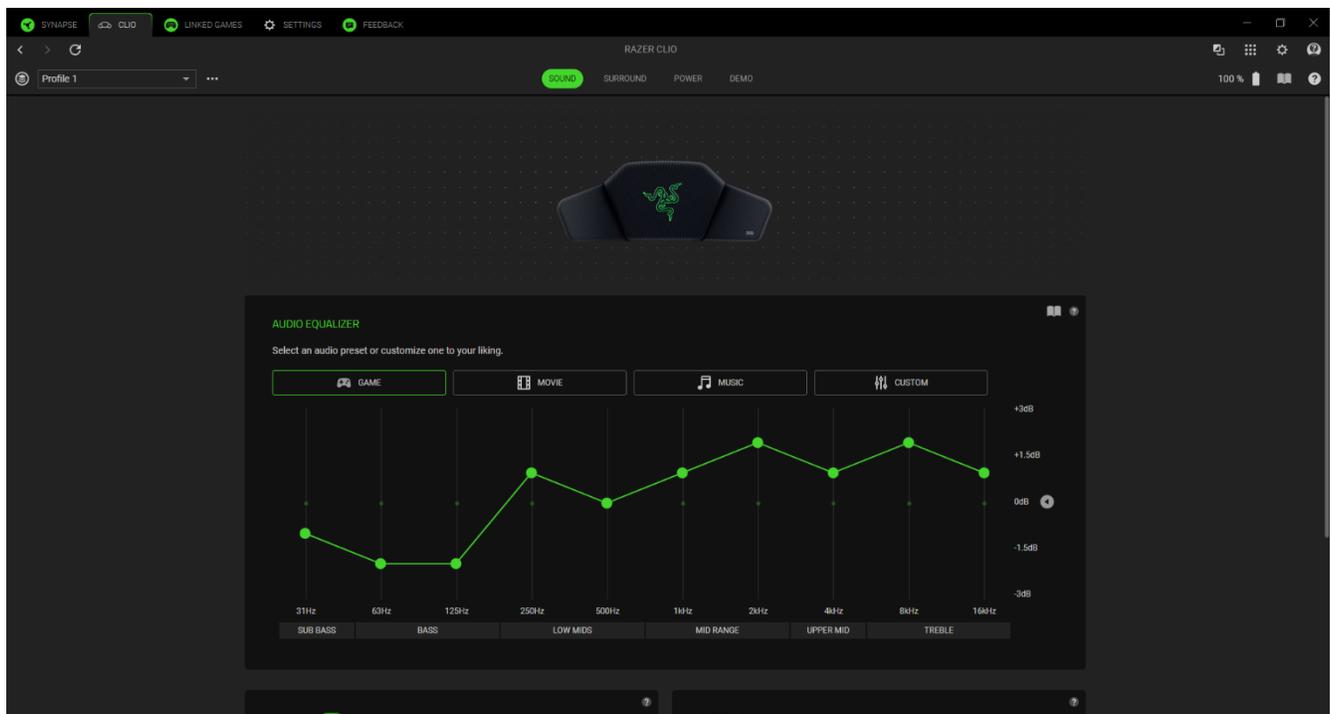

Profile

Profile is a data storage system that keeps all your Razer device's settings. By default, the profile name is based on your system's name. Clicking the dropdown bar (▾) will display all profiles for this device so you can quickly switch between them. To add, import, rename, duplicate, export, or delete a profile, press the profile's corresponding Miscellaneous button (⋮).

Audio equalizer

Select any available equalizer preset created for the best audio experience designed for gaming immersion, movie viewing, or enjoying your favorite music. Manually adjusting any equalizer preset will automatically set it to custom.

Volume

Adjust the audio volume of the device. You can also adjust the system's overall volume or individual application volumes using the Windows volume mixer.

Input Source


Change the audio source of your device.

Sound Properties

Launch the Windows Sound Properties window to manage system sound settings, such as playback and recording device configurations, sound schemes, and default communications activity.

Surround

Combine your Razer Clio with additional speakers, positioning them as rear speakers for a complete surround sound setup.

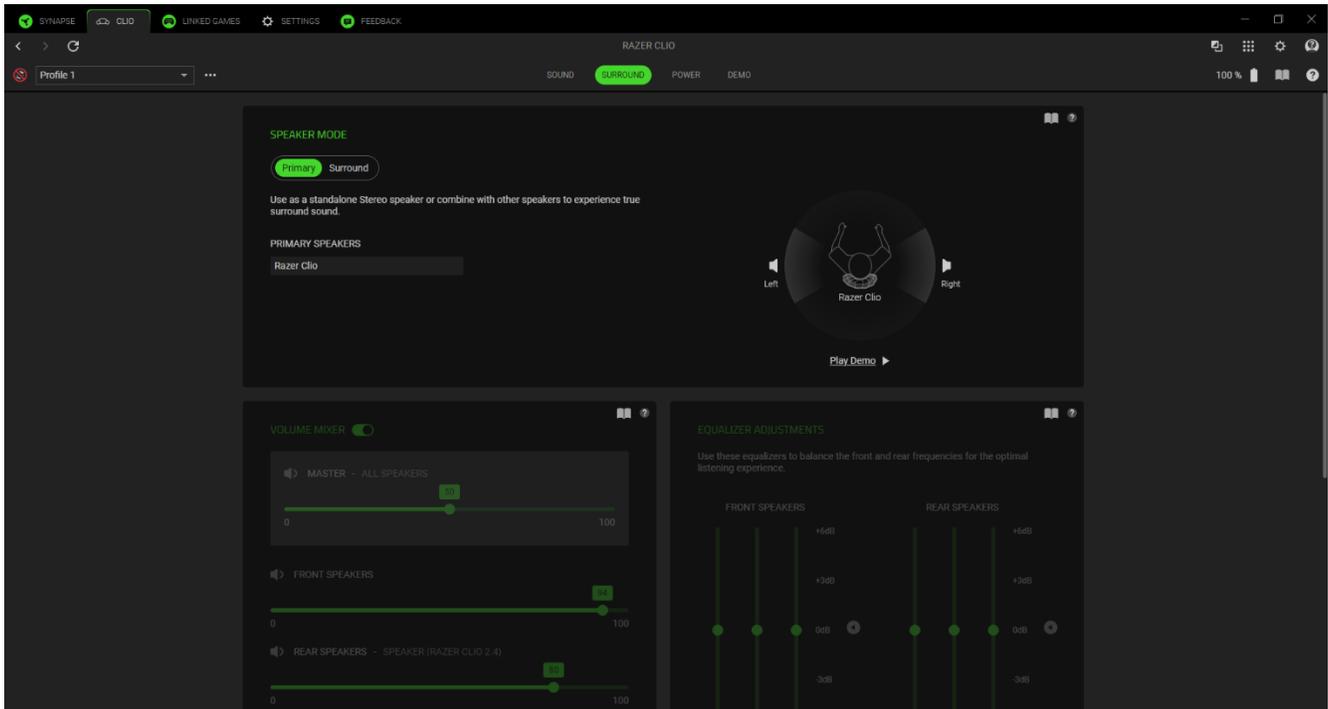

Primary

Set your Razer device as a standalone stereo speaker.

Surround

When enabled, your Razer device will seamlessly function as rear speakers, enhancing the overall audio experience with your preferred front speakers. For this mode to take effect, please select front speakers when prompted.

Volume Mixer

Adjust the overall volume of your sound system, or fine-tune the individual volumes of the front and rear speakers as needed.

Equalizer Adjustments


Balance the front and rear speakers' frequencies for audio clarity.

Time Alignment

Adjust the audio output delay on the front or rear speakers to achieve perfectly synchronized sound.


Power

For wireless devices, the Power subtab allows you to manage your device's energy consumption when running on batteries.

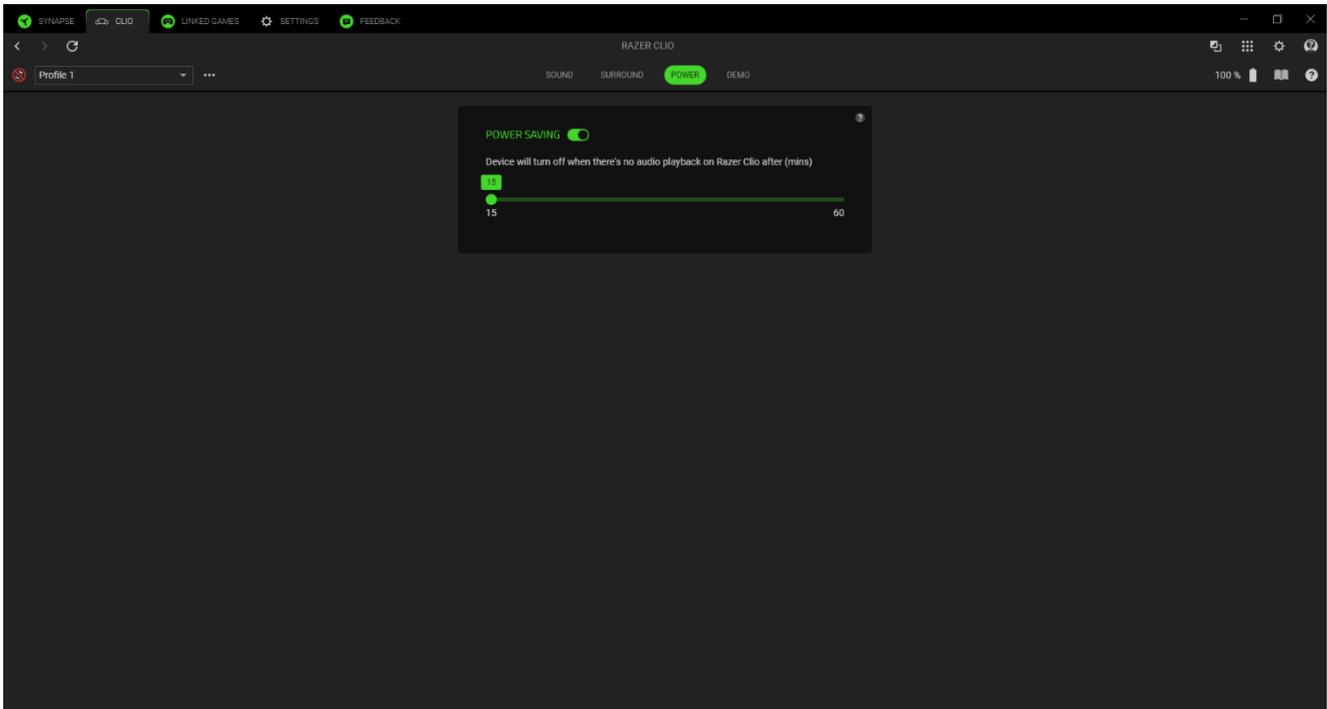

Demo

Explore all your customizations and enhancements in the Demo subtab.

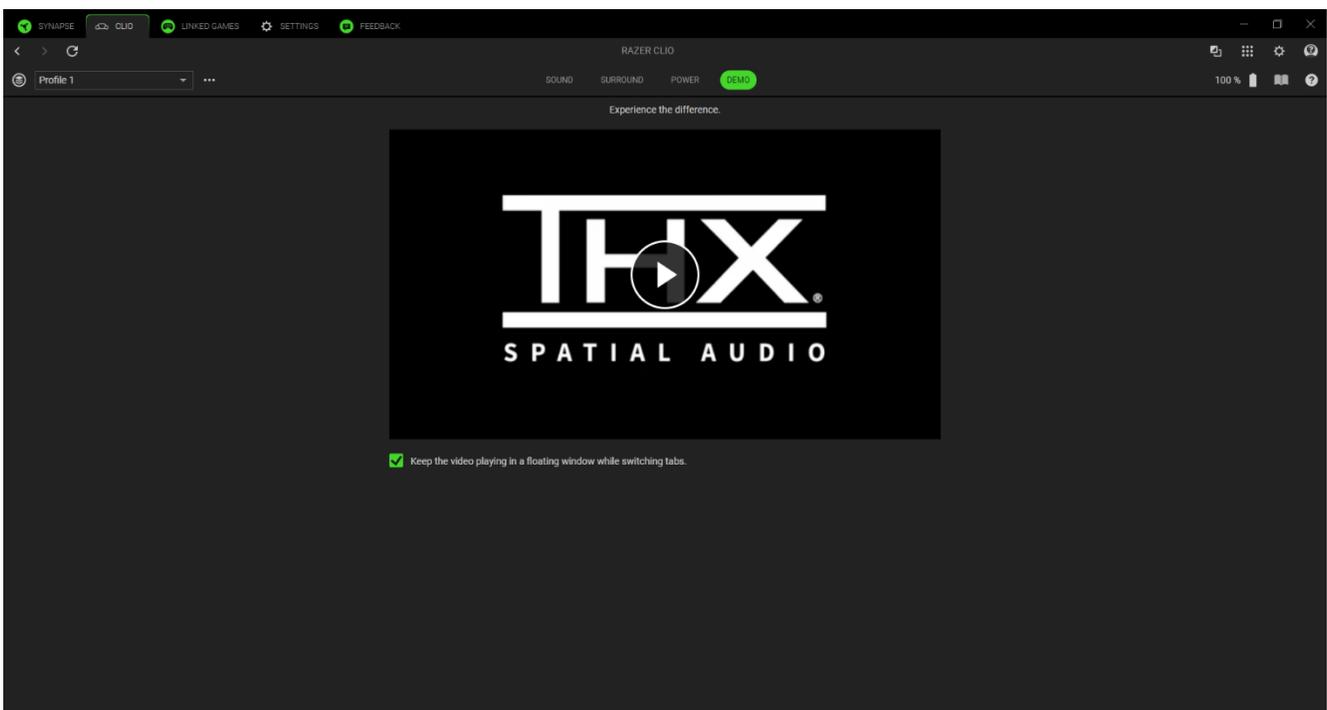


LINKED GAMES

The Linked Games tab allows you to add apps, view peripherals linked to apps, or search for listed apps.

Games


The Games subtab enables you to link apps to your peripherals. You can also sort apps based on alphabetical order, last played, or most played. Apps will still be listed here, even if not linked to a Razer device. To add an app that is not listed on the screen, you can use the Add button (+) to search for it manually or use the Scan button (🔍) to search for it automatically. Click the Search button (🔍) to look for a specific game or program from the list.

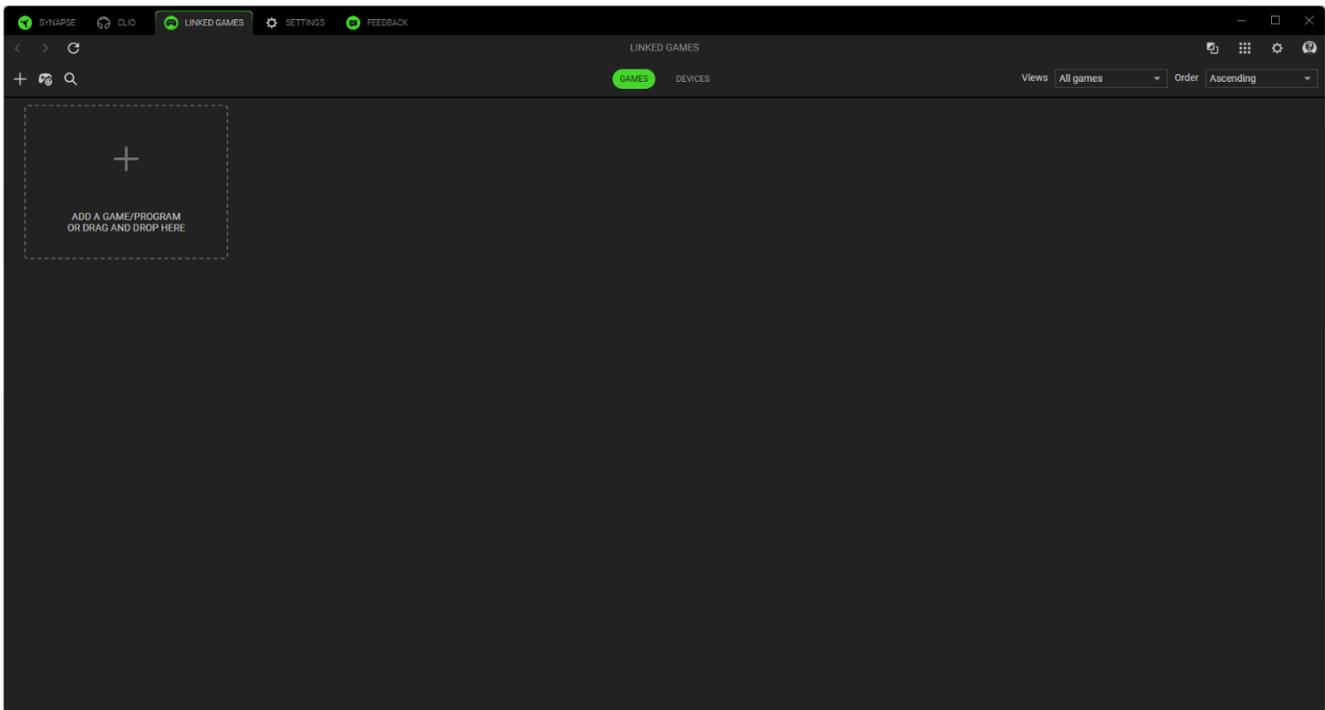

To link an app to your Razer device, click on it from the list and select a device and its profile. This will automatically set your device to the selected profile whenever you launch the app.

Devices

The Devices subtab lets you view your peripherals and determine which apps are linked to them. By selecting a device, you can see a list of linked apps, add new apps, or remove linked apps. You can filter these apps by using the Views and Order dropdown list. To add an app not listed on your peripheral, you can drag and drop the executable file inside the box or use the Add button (+) to open the search window. While inside the search window, you can click the Refresh button (↻) to rescan installed apps, the Search button (🔍) to look for a specific game or program from the list, or the Browse link to search for the app manually.

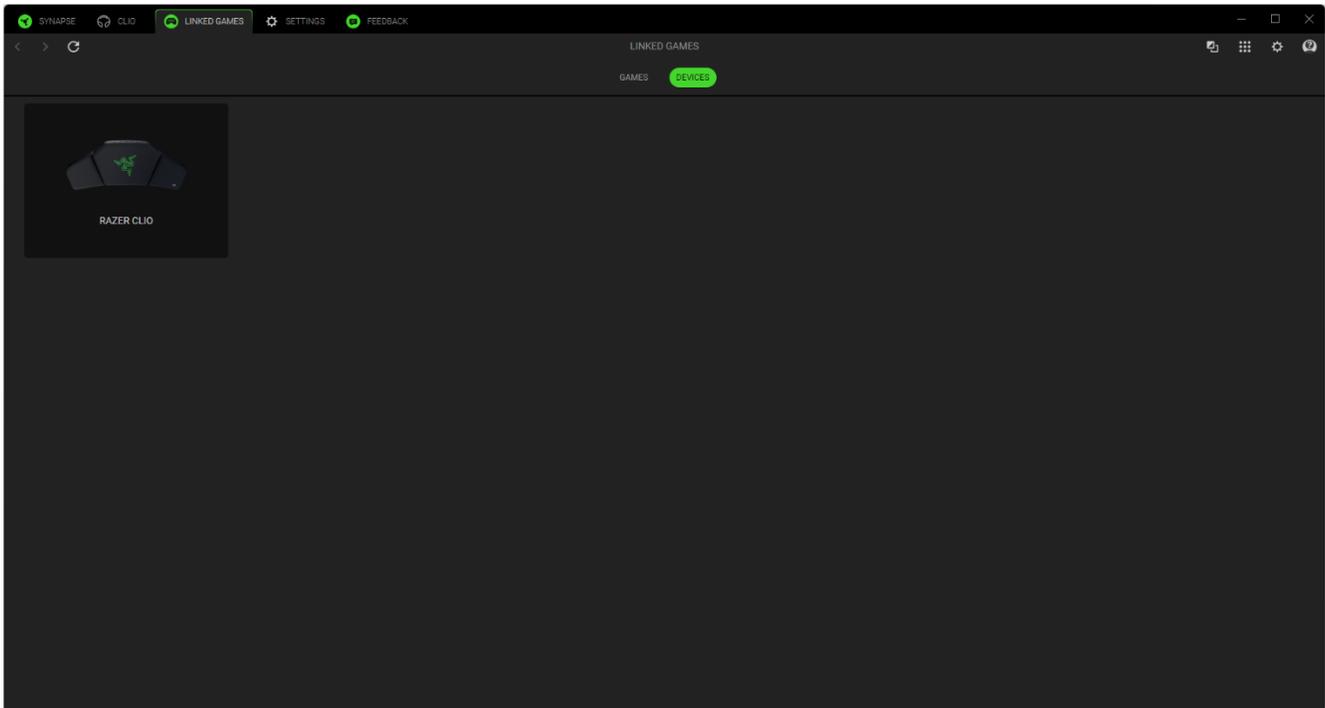


To link an app to your Razer device, click the tick box at the top left corner of the app while inside the search box. This will automatically set your device to the selected profile whenever you launch the app.

SETTINGS

The Settings tab, accessible by clicking the Settings button (⚙️), enables you to configure numerous options as listed below:

Synapse

The Synapse subtab is where you can find options that are specific to the app.

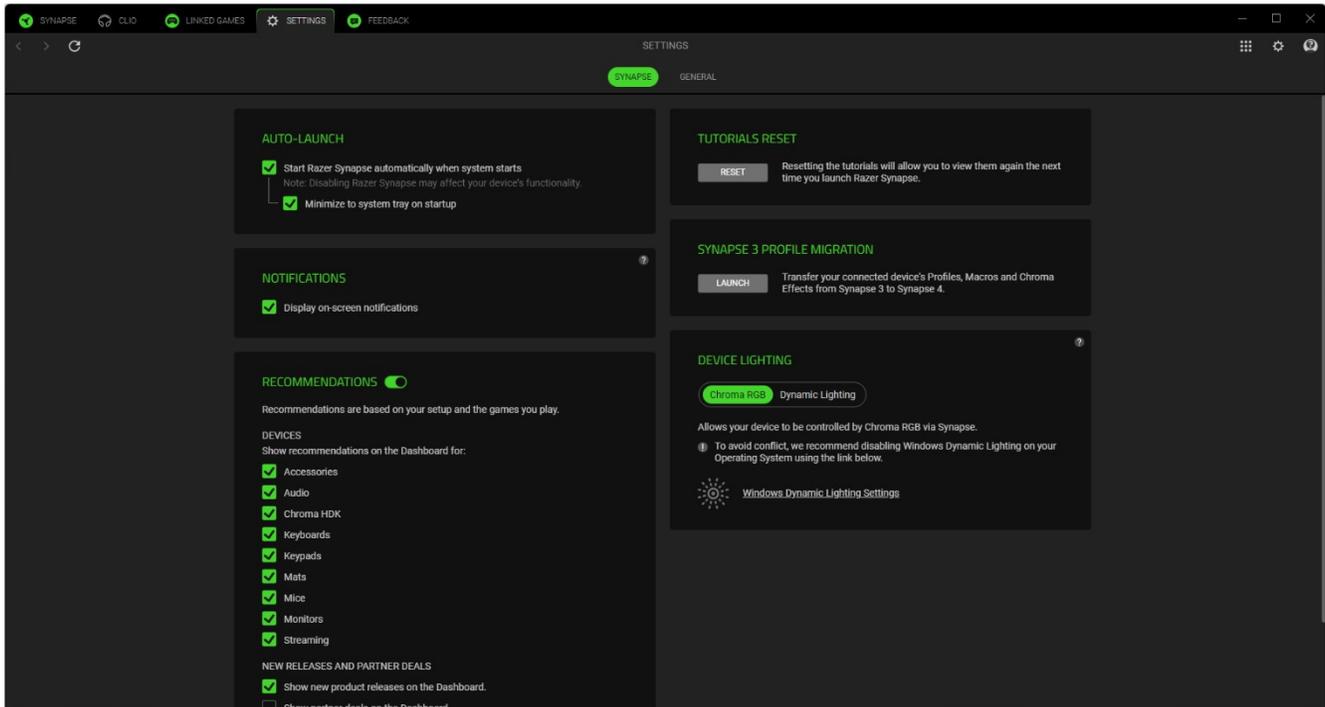

Auto Launch

The Auto Launch option allows you to configure the startup behavior the app.

Notifications

The Notifications option allows the app to display on-screen notifications even if you run full-screen apps.

Recommendations

Recommendations enable us to show the latest products and features on your Dashboard based on your installed devices and linked games.

Tutorials Reset

Selecting the Reset button will reactivate all tutorials that help you acquaint yourself with Razer Synapse's features.

Synapse 3 Profile Migration


This function lets you transfer all your device's Profiles, Macros, and Chroma Effects from Synapse 3 to the new Synapse.

Device Lighting

This option lets you choose which app will control the lighting effects on your device.

General

The General subtab is the section where you can access miscellaneous options for your app, as well as find additional information about the software.

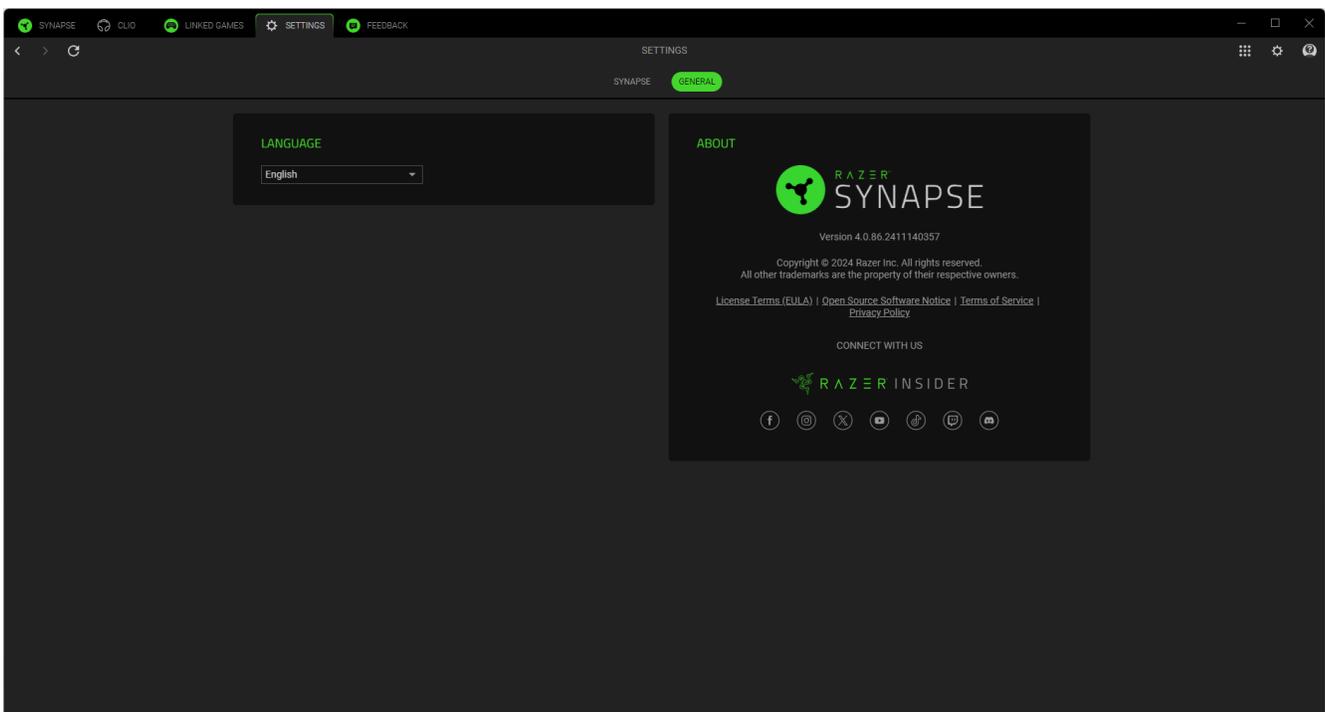

Language


This option lets you change the display language of Razer Synapse.

About

The About section shows the current software version, displays the copyright statement, and provides relevant links for Razer's terms of use. You may also use this option to access Razer's social communities quickly.

FEEDBACK

Help us improve Razer Synapse by giving your comments, suggestions, and problems with the software. You can contact us directly using this tab and even earn rewards for reporting bugs.

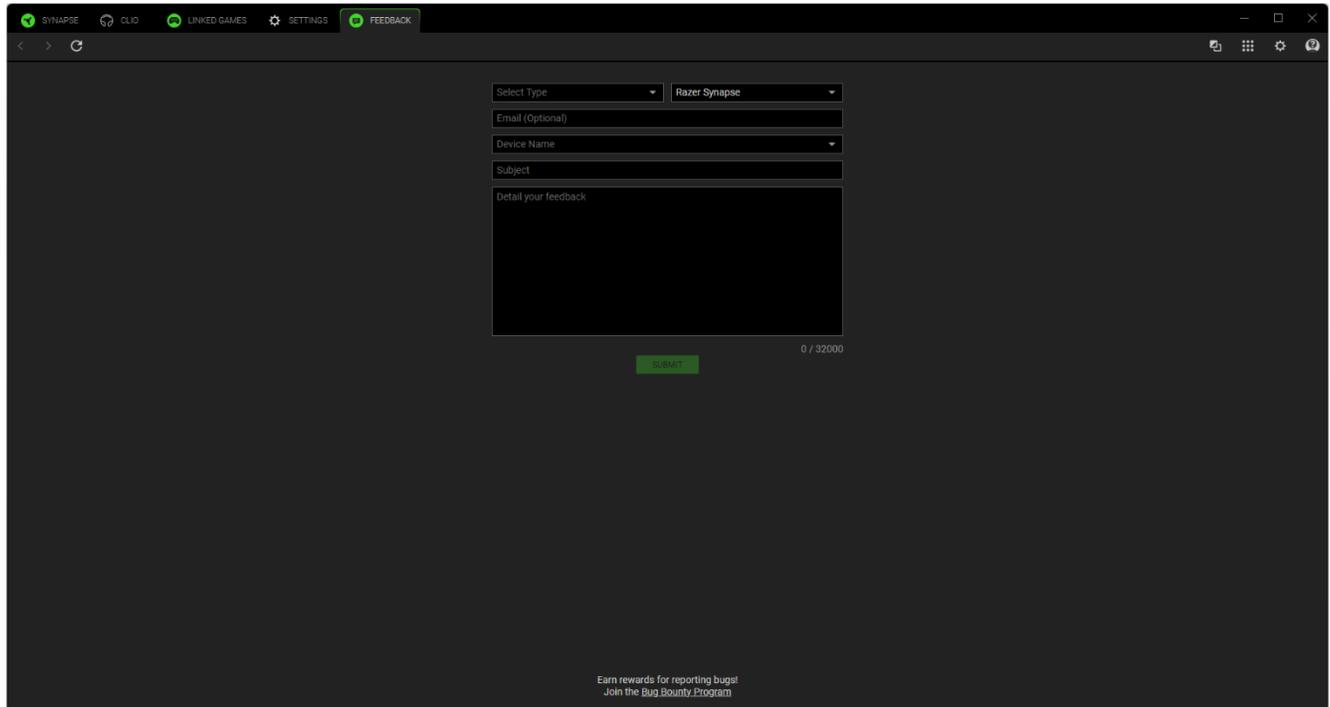

The screenshot shows the Razer Synapse Feedback form interface. At the top, there is a navigation bar with icons for SYNAPSE, CLIO, LINKED GAMES, SETTINGS, and FEEDBACK. The FEEDBACK tab is active. The form contains the following fields:

- Select Type: Razer Synapse
- Email (Optional):
- Device Name:
- Subject:
- Detail your feedback:

At the bottom right of the form, there is a character count: 0 / 32000. Below the form is a green SUBMIT button. At the bottom of the screen, there is a small text prompt: "Earn rewards for reporting bugs! Join the Bug Bounty Program".

7. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

To achieve maximum safety while using your Razer Clio, we suggest that you adopt the following guidelines:

- Should you need help operating the Razer Clio properly and troubleshooting does not work, contact the Razer hotline or go to support.razer.com for assistance.
- Don't disassemble, drop, or subject the head cushion to undue pressure. Don't operate it under abnormal current loads. Doing so will void your warranty.
- Don't use the head cushion with wet hands or body.
- To prevent the head cushion's color from fading and upholstery from drying, avoid exposure to high heat such as a radiator or a fireplace, and keep out of direct sunlight.
- Always make sure the head cushion is strapped tightly and correctly propped up against your gaming chair.
- To prevent damage to the upholstery, keep the head cushion away from sharp objects or pets with claws and teeth.
- If you experience any physical discomfort while using the head cushion, please consult a qualified medical doctor immediately.
- Listening to excessively loud volumes over extended periods can damage your hearing. Furthermore, legislation of certain countries permits a maximum sound level of 86db to affect your hearing for 8 hours a day. We, therefore, recommend that you reduce the volume to a comfortable level when listening for prolonged periods. Please take good care of your hearing.
- Use caution when operating the head cushion to avoid electrical shock or damage, such as powering it off and unplugging it when not in use and/or during thunderstorms, ensuring that your hands are dry before using (and handling) the device, keeping it away from any source of liquid and/or heat source, and using all other reasonable precautions needed under the circumstances.

MAINTENANCE

The Razer Clio requires minimum maintenance to keep it in optimum condition. Constant exposure to friction, skin, and bodily fluids can degrade the materials over time. We recommend that you clean the head cushion once a month using a soft or microfiber cloth with a bit of warm water to prevent sweat and dirt buildup. Immediately clean up spills to avoid stains and completely air dry

before using the head cushion again. Don't use soap, harsh cleaning agents, or abrasives to avoid damaging the head cushion.

BATTERY WARNING

The Razer Clio contains a Li-ion rechargeable battery. In general, the life expectancy of such batteries is dependent upon usage. If you suspect that the Li-ion rechargeable battery inside the Razer Clio may be drained (has a low charge), try charging it.

Caution: Don't open, mutilate, or expose to conducting materials (metal), moisture, liquid, fire, or heat. Doing so may cause batteries to leak or explode, resulting in personal injury. Battery life varies with usage.

8. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2025 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, and "For Gamers. By Gamers." are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks are the property of their respective owners.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Razer is under license.

THX and the THX Logo are the property of THX Ltd., registered in the U.S. and other countries.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Clio (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit razer.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.