XIAOMI Smart Air Fryer 5.5L User Manual - 01
Xiaomi Smart Heißluft-Fritteuse 5.5 l Bedienungsanleitung - 12
Manuale utente Xiaomi Smart Air Fryer 5.5L - 23
Manuel d'utilisation de Xiaomi Smart Air Fryer 5.5L - 34
Manual de usuario de la Xiaomi Smart Air Fryer 5.5L - 45
Руководство пользователя аэрогрилем Xiaomi Smart Air Fryer 5.5L - 56
Instrukcja obsługi Wielofunkcyjna frytkownica Xiaomi Smart Air Fryer 5.5 l - 67
دليل مستخدم مقلاة Xiaomi الهوائية الذكية 5.5 لتر - 78
Xiaomi Akıllı Hava Fritözü 5.5L Kullanım Kılavuzu - 89
Nồi chiên không dầu thông minh Xiaomi 5.5L Hướng dẫn sử dụng - 100
Panduan Pengguna Xiaomi Smart Air Fryer 5.5L - 111
Посібник користувача розумної фритюрниці Xiaomi Smart Air Fryer 5.5L - 122
Xiaomi 5.5л ухаалаг агаарсалгуур гаргах аргаар хийсгэгч - 133

Read this manual carefully before use, and retain it for future reference.
Intended for indoor use only. Use only as described in this manual. For household use only.
Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

Safety Instructions

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Please keep the air fryer and the power cord out of the reach of children aged under 8.
- For household use only.
- If the power cord is damaged or broken, it must be replaced by the manufacturer or after-sales service department to avoid safety hazards.
- The temperature of the accessible surface may rise while the air fryer is working.
- The surface will heat up easily while the air fryer is in use.
- The air fryer should not be operated via an external timer or a separate remote control.
- Do not block the air fryer's air inlet and outlet, nor the heat dissipation vents during use to avoid affecting its normal heat dissipation.
- Any non-professionally trained technicians should not modify the internal wiring of the air fryer.
- Do not use charcoal or other similar fuel sources to heat the basket, frying plate, or grill.
- Do not place the basket on any other heat sources, such as an induction cooker or gas stove.
- Do not plug or unplug the power cord with wet hands to avoid the risk of an electrical shock.
- Do not use a power cord with loose connection or poor contact.
- Do not let the power cord pass through sharp objects to avoid damage to the power cord.

- Do not use the air fryer to store any items, especially flammable, explosive, or corrosive items.
- Do not excessively pinch, bend, twist, or place heavy objects on the power cord to prevent from exposing or breaking its core.
- Stop using the air fryer immediately and unplug it from the power source if it doesn't function normally or malfunctions.
- The air fryer cannot be started without the basket being in place.
- Do not touch the basket directly with your hands during or right after use to avoid getting scalded.
- Do not allow children to get close to or play with the cling wrap and packaging to avoid suffocation accidents.
- Do not use any plastic utensils or normal paper wrapping materials to wrap food for cooking.
- Do not drop this air fryer or bump it against hard objects to avoid damage or malfunction.
- Do not insert any wires or other objects into any of the openings of the air fryer to avoid an electrical shock or injury.
- The normal operating altitude range of this product is 0-2000 meters.
- Keep a distance of 30 cm or more between the air outlet and other devices during use.
- Do not move or shake the air fryer during use.
- Do not insert any foreign objects into the safety switch to avoid causing any danger.
- When placing the air fryer in a kitchen cabinet, etc., please ensure that it is well ventilated.
- Please be sure to unplug the air fryer before cleaning or repairing it.
- This product must be used on a level, heat-resistant surface to avoid damage to the product or accidents.
- Ensure that the silicone parts of the air fryer do not come into contact with ethanol or solutions that contain more than 50% of alcohol.
- Please ensure that the electrical outlet the air fryer is plugged into is well grounded to avoid an electrical shock or other safety hazards.

Product Overview

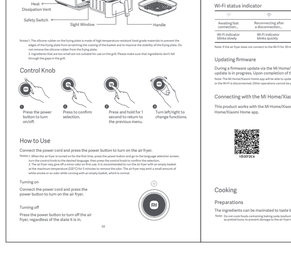

Notes1: The silicone rubber on the frying plate is made of high temperature resistant food-grade materials to prevent the edges of the frying plate from scratching the coating of the nonstick pan to improve the stability of the frying plate. It is a normal phenomenon that it is slightly deformed.
Note2: Ingredients that are too small are not suitable for use on the grill. Please make sure that ingredients don't fall through the grill.

Control Knob

- Only use a grounded electrical outlet with a rated current of 10 A to avoid the risk of fire and other potential hazards.

⚠ CAUTION: Hot surfaces.

Setting Wi-Fi

- Resetting Wi-Fi:
  Press the control knob to enter "Reset Wi-Fi" while in the "Wi-Fi" screen, then press the control knob to select Yes to reset the Wi-Fi, or turn the control knob to select No to abandon resetting the Wi-Fi.
- Enabling/Disabling Wi-Fi:
  Press the control knob to enter "Enable/Disable Wi-Fi" while in the "Wi-Fi" screen, then press the control knob to select Yes to enable or disable the Wi-Fi, or turn the control knob to select No to abandon the change.

Wi-Fi status indicator

Awaiting Not Connected	Reconnecting after Disconnection	Connecting	Updating...
Wi-Fi indicator blinks slowly	Wi-Fi indicator blinks quickly	Wi-Fi indicator stays on	Wi-Fi indicator blinks quickly

Note: If the air fryer is in the "Off" state, the Wi-Fi indicator will turn off.

Updating firmware

Updating firmware update via the Mi Home/Xiaomi Home app, the display shows that an update is in progress. Upon completion of the update, the air fryer will restart automatically.
Note: The Mi Home/Xiaomi Home app will be able to update the firmware online as the air fryer is in display to turn off, or the Wi-Fi is connected. Other operations can be performed when the firmware update is in progress.

Connecting with the Mi Home/Xiaomi Home app

This product works with the Mi Home/Xiaomi Home app". Control your device with Mi Home/Xiaomi Home app.

- Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search for "Mi Home/Xiaomi Home" in the app store to download and install the app.
- Open the Mi Home/Xiaomi Home app. Tap "+" on the upper right, and then follow the instructions to add your device.

*The app is referred as Xiaomi Home app in Europe (except Russia) and Mainland China, and as Mi Home app in other regions.
*Note: The version of the app might have been updated, please follow the instructions to add the device.

How to Use

Connect the power cord and press the power button to turn on the air fryer.

Turning on
Connect the power cord and press the power button to turn on the air fryer.

Turning off
Press the power button to turn off the air fryer, regardless of the state it is in.

Start cooking

1. Place the air fryer on a stable, level surface and ensure that there is air circulation around the air fryer.

2. Place the frying plate at the bottom of the air fryer and put the prepared food onto the frying plate. Slide the basket into the air fryer along the guide rails. This will ensure the best cooking results without the need to turn over the food.
Note: 1. Overstuffing the air fryer with ingredients might interfere with the hot air flow inside it, which could affect the cooking results. Please refer to the recipe table and start over if the food is cooked to your liking.
2. If there are more ingredients, use the grilling plate instead of a basket.

3. When the basket is completely pushed into the air fryer, turn the control knob to select the cooking function, temperature and time. Alternatively, you can tap the cooking temperature or time (minutes or hours) accordingly. Then press the control knob to confirm settings and start cooking.
Note:
1. Cooking time and temperature can be set in advance during the cooking process. Temperature can be adjusted in increments of 5 °C, and time can be adjusted in increments of 1 minute. Adjustments can be made while the air fryer is in standby or paused, and changes will be saved automatically.
2. Preheat the air fryer for 3 minutes before adding the cooking ingredients.
3. Shake the cooking ingredients halfway through cooking to ensure even cooking and prevent burnt spots.

4. When the air fryer's basket is pulled out during cooking, the countdown will stop and cooking will pause. Parameter adjustments are not allowed in this state. Placing the basket back allows the cooking function to resume, and cooking continues.
Note: For cooking more than 800 g of food, it is preferred to flip the ingredients halfway through without pulled out.

5. Once the cooking countdown ends, the air fryer will give off a long beep to indicate the completion of cooking. Carefully take out the basket and use tongs to remove the food.

Other Operations

1. Language settings

- Turn on the air fryer, go to settings, and press the control knob to enter the language selection screen.
- Turn the control knob to the desired language and press it to confirm.

2. Manual mode

- When the air fryer is turned on, press the control knob to enter the manual mode, then turn the control knob to the desired cooking temperature, press the control knob to set the time and turn the control knob to the desired cooking time, and finally press the control knob to start the manual cooking program.

3. Temperature/time adjustment

- The temperature can be adjusted between 40°C and 220°C. The time can be adjusted between 0 to 24 hours.
- The cooking temperature is adjusted by 5°C for each turn of the control knob, and the cooking time is adjusted by 1 minute for each turn of the control knob. If the cooking temperature is between 40°C and 220°C, the adjustable cooking time is 24 hours. If the cooking temperature is > 80°C, the adjustable cooking time is 24 hours. If the cooking temperature is < 80°C, the adjustable cooking time is 24 hours. The cooking temperature and time can be adjusted during the cooking process, and the speed at which the control knob is turned. When the adjusted time range is < 60 minutes, turning the control knob quickly will adjust the time by 5 minutes, while turning the control knob slowly will adjust the time by 1 minute. When the adjusted time range is > 60 minutes, turning the control knob quickly will adjust the time by 30 minutes, while turning the control knob slowly will adjust the time by 5 minutes.

4. Scheduled cooking

- Press the control knob to select the schedule function, turn the control knob to select the scheduled recipe, then set the cooking temperature/time and scheduled time. The air fryer will start cooking at a proper time to ensure that the cooking is completed within the scheduled time, and then enter the keep-warm state or finish cooking once done.
Note:
1. The scheduled time must be longer than the cooking time, but less than 24 hours.
2. The scheduled time refers to the total time period which the cooking process is expected to be completed.
3. The actual start time of the cooking process is automatically calculated based on the scheduled time.
4. The scheduled function is not supported in Langen, Brasilien, and Mexiko models.

5. Keep-warm function

- The keep-warm function is enabled by default. This function can be enabled or disabled by navigating to settings > thermostat settings and pressing the control knob on the display. Alternatively, tap the keep-warm icon on the display for 1 second to disable the keep-warm mode once it is enabled.
- The keep-warm function is set to last for 30 minutes at a temperature of 80°C. If the air fryer's basket is pulled out while this function is enabled, both the function and its timer will pause momentarily. The air fryer will resume keep-warming when the basket is pushed back in. However, if the basket is pulled out for more than 30 seconds, the keep-warm function will be disabled, and the air fryer will return to its default settings.

6. Pause/cancel cooking

- When the air fryer is in cooking mode, press the control knob to pause cooking. When the air fryer is cooking or paused, press and hold the control knob for 1 second to enter the shutdown mode. Alternatively, tap the cancel icon on the display for 1 second to cancel cooking.
Note: During cooking, the temperature sensor in the air fryer's cavity will be exposed and prone to numbness with time during operation. The sensor is not a fire sensor, and the numbness will not affect cooking effect. Once the adjustment is completed, press the control knob to confirm the new parameters.

7. Cloud recipe mode

- When a cloud recipe is selected and executed using the Mi Home/Xiaomi Home app, the air fryer will cook automatically according to the recipe. After cooking, the air fryer will enter the manual mode screen.
Note: 1. Cloud recipe function is available when executing cloud recipes.
2. The cloud recipe function is not supported in Langen, Brasilien, and Mexiko models.
3. The air fryer is in the cooking/scheduled/keep-warm mode. 2. The air fryer's basket has been pulled out.

8. Defat mode

- The defat mode enables an increase in fat release from fried while cooking without oil, resulting in healthier and tastier fried food.
- This mode is specifically suitable for items such as chicken wings, beef steak, and lamb chops, but not intended for other recipes or cloud recipes/custom recipes.
- Adjustments to the cooking time and temperature are permissible in the schedule alpha function, only for cooking time, not the cooking mode or temperature, can be adjusted during cooking.

9. Error message

- Upon the air fryer detects an error, the display will show "E1" or "E2", and the air fryer will emit three brief beeps.

Cleaning & Maintenance

Unplug the power cord before cleaning and maintaining the air fryer, and wait for it to cool down to a safe temperature before proceeding. Please remove the basket from the air fryer before cleaning the air fryer.

- Surface of the air fryer:
  The surface of the air fryer can be wiped with a dry, soft cloth or a sponge moistened with a neutral cleaning agent.
- Grill:
  Remove stains from the inside of the air fryer, apply a suitable amount of detergent to the grill plate to be surface and let it sit for about 10 minutes, then use a soft sponge moistened with water to wipe away the detergent residue.
- Basket:
  Clean the air fryer after each use. The basket's non-stick coating is fragile and prone to scratches, so do not use any sharp objects or metal utensils to clean it as they may damage the coating. Frying oil can be reused.
  Use a soft, cotton cloth or sponge moistened with neutral detergent to wipe it clean, then rinse with water and let it dry before reinstalling it.
- Frying plate:
  The frying plate's non-stick coating is fragile and prone to scratches, so do not use any sharp objects or metal utensils to clean it as they may damage the coating.
  Use a soft, cotton cloth or sponge moistened with neutral detergent to wipe it clean, then rinse with water and let it dry before reinstalling it.

Cleaning Precautions

1. After using the air fryer, please unplug the power plug in time. Do not place the air fryer near a source of fire and do not immerse it in water. Do not place the power plug directly on the air fryer to prevent the plug from scalding the surface.
2. Cleaning and maintenance should only be done after the air fryer has cooled down.
3. Do not use abrasive cleaning tools or strong chemicals or detergents.
4. The frying plate's non-stick coating is fragile and prone to scratches.

Maintenance Tips

- Only professionally trained and qualified technicians should repair the air fryer.
- Disassemble and reassemble the air fryer without permission to avoid adverse consequences.
- When the air fryer malfunctions, please refer to Troubleshooting before contacting the after-sales service team.
- If the issue persists, please unplug the power cord to disconnect it and contact the after-sales service team.

Troubleshooting

Issue	Possible Causes	Solutions
The air fryer doesn't function.	The air fryer is not connected to a power source.	Plug the power cord into a grounded electrical outlet.
	The basket is not pushed into place.	Pull out the basket and push it back into place.
Display shows E1.	The sensor has a broken circuit.	Contact the after-sales service team.
Display shows E2.	The sensor has a short circuit.	Contact the after-sales service team.
The fan doesn't rotate.	The fan blade is stuck.	Contact the after-sales service team.
	The motor is damaged or other components have failure.	Contact the after-sales service team.
White smoke is coming out.	Cooking oily ingredients	When you fry ingredients containing some fat, there will be a little white smoke. This is normal.
	The air fryer still contains residue from the previous cooking program.	Ensure that you clean the air fryer after each cooking.
Can't insert the basket into the air fryer smoothly.	Too many ingredients in the basket.	Fry the ingredients in the basket in batches.
	The basket is not properly inserted.	Properly insert the basket.
The schedule function doesn't function as requested.	The scheduled time is too short.	The scheduled time should be longer than the cooking time.
	The scheduled time exceeds 24 hours.	The scheduled time should be within 24 hours.
Wi-Fi can't be connected.	The Mi Home/Xiaomi Home app is not latest version.	Update the Mi Home/Xiaomi Home app to the latest version.
	The Wi-Fi signal is weak.	Move to a location where the Wi-Fi signal is strong.
Unable to connect the air fryer.	Wi-Fi cannot be connected.	Check whether the Wi-Fi is connected normally or reset the Wi-Fi to a network.

Electrical Diagram

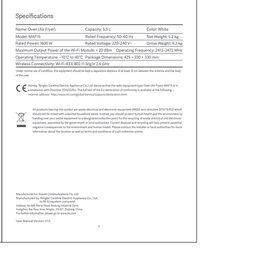

Specifications

Name: Oven Air Fryer
Model: MAF15
Power: 1500 W
Maximum Output Power of the Wi-Fi Module: < 20 dBm
Rated Voltage: 220-240V~
Rated Frequency: 50-60 Hz
Net Weight: 5.2 kg
Gross Weight: 6.2 kg
Rated Capacity: 5.5 L
Color: White
Operating Temperature: 10 °C to 40 °C
Operating Frequency: 2412-2472 MHz
Dimensions: 320 × 320 × 330 mm
Dimensions (with accessories): 425 × 320 × 330 mm

Cooking temperature range: 40 °C to 220 °C
Cooking time range: 0 to 24 hours
Temperature accuracy: ±5 °C
Wi-Fi frequency: 2412-2472 MHz
Wi-Fi authentication: WPA-PSK/WPA2-PSK
Cybersecurity: WPA2-PSK
Wireless Wi-Fi: IEEE 802.11 b/g/n 2.4 GHz
Bluetooth version: Bluetooth 5.0 BLE
Bluetooth frequency: 2402-2480 MHz
Bluetooth transmitter power: < 10 dBm

Lesen Sie diese Bedienungsanleitung vor der Verwendung sorgfältig durch und bewahren Sie sie auf, um jederzeitig die Informationen nachlesen zu können.
Verwenden Sie das Gerät nur wie in der Bedienungsanleitung beschrieben. Nur für den Haushalt.
Abbildungen des Produkts, des Zubehörs und der Benutzeroberfläche in der Bedienungsanleitung dienen nur als Referenz. Die tatsächlichen Produkte und Funktionen können aufgrund von Produktverbesserungen variieren.

Sicherheitshinweise

- Dieses Gerät ist für Kinder ab einem Alter von 8 Jahren und Personen geeignet, die körperlich, sensorisch oder geistig behindert sind oder nicht über ausreichend Erfahrung oder Kenntnisse verfügen, wenn sie eine Beaufsichtigung oder Anweisung zur sicheren Nutzung des Geräts erhalten haben und wissen, welche Gefahren auftreten können. Kinder dürfen nicht mit dem Gerät spielen. Die Reinigung und Wartung dürfen nicht von Kindern durchgeführt werden, sowie sie nicht älter als 8 Jahre alt sind und beaufsichtigt werden.
- Bitte bewahren Sie die Heißluftfritteuse und das Stromkabel außerhalb der Reichweite von Kindern unter 8 Jahren auf.
- Nur für den Betrieb im Haushalt.
- Wenn das Stromkabel beschädigt oder gebrochen ist, muss es durch den Hersteller oder den Kundendienst ersetzt werden, um Sicherheitsgefährdungen zu vermeiden.
- Die Temperatur der zugänglichen Oberfläche kann ansteigen, während die Heißluftfritteuse arbeitet.
- Die Oberfläche erwärmt sich schnell, während die Heißluft-Fritteuse in Betrieb ist.
- Die Heißluft-Fritteuse sollte nicht über eine externe Zeitschaltuhr oder eine separate Fernbedienung betrieben werden.
- Blockieren Sie während der Verwendung weder den Luftein- und -auslass der Heißluft-Fritteuse noch die Wärmeabführungen, um die normale Wärmeabgabe nicht zu beeinträchtigen.
- Die interne Verkabelung der Heißluft-Fritteuse darf von nicht fachlich geschulten Technikern nicht verändert werden.
- Verwenden Sie keine Holzkohle oder ähnliche Brennstoffe zum Erhitzen des Korbs, der Fritteriplatte oder des Grills.
- Stellen Sie den Korb nicht auf andere Wärmequellen, wie z. B. einen Induktionskorb oder Gasherd.

- Stecken Sie den Stecker des Stromkabels nicht mit nassen Händen ein oder ziehen Sie den Stecker nicht ab, um das Risiko eines Stromschlags zu vermeiden.
- Verwenden Sie kein Stromkabel mit einem losen Anschluss oder schlechten Kontakt.
- Lassen Sie das Stromkabel nicht über scharfe Gegenstände laufen, um eine Beschädigung des Stromkabels zu vermeiden.
- Verwenden Sie die Heißluft-Fritteuse nicht zur Aufbewahrung von Gegenständen, insbesondere von brennbaren, explosiven oder ätzenden Gegenständen.
- Achten Sie darauf, dass Sie das Stromkabel nicht übermäßig einklemmen, knicken, verdrehen oder mit schweren Gegenständen belasten, um zu vermeiden, dass der Kern freigelegt wird oder bricht.
- Stellen Sie die Verwendung der Heißluft-Fritteuse sofort ein und ziehen Sie den Stecker von der Stromquelle ab, wenn sie nicht normal funktioniert oder Fehlfunktionen aufweist.
- Die Heißluft-Fritteuse kann nicht gestartet werden, wenn der Korb nicht eingesetzt ist.
- Berühren Sie den Korb während oder direkt nach der Verwendung nicht direkt mit den Händen, damit sie sich nicht verbrühen.
- Erteilen Sie Kindern keine Erlaubnis, in die Nähe der Frischhaltefolie oder Verpackung zu kommen oder damit zu spielen, um Erstickungsunfälle zu vermeiden.
- Verwenden Sie keine Plastikutensilien oder normales Papier zum Einwickeln von Lebensmitteln für das Garen.
- Lassen Sie die Heißluft-Fritteuse nicht fallen und stoßen Sie sie nicht gegen harte Gegenstände, um Schäden oder Fehlfunktionen zu vermeiden.
- Stecken Sie keine Stifte, Drähte oder andere Gegenstände in die Öffnungen der Heißluft-Fritteuse, um einen Stromschlag oder Verletzungen zu vermeiden.
- Verwenden Sie kein Zubehör, das nicht vom Hersteller empfohlen wird.
- Der normale Betriebshöhenbereich dieses Produkts beträgt 0 bis 2000 Meter.
- Halten Sie bei der Verwendung einen Abstand von 30 cm oder mehr zwischen dem Luftauslass und anderen Geräten ein.
- Bewegen oder schütteln Sie die Heißluft-Fritteuse nicht während des Betriebes.

Produktübersicht

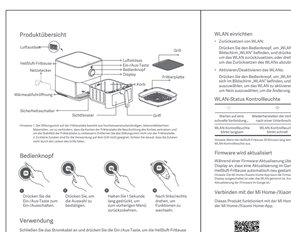

Bedienkopf

Verwendung

Schließen Sie die Stromkabel an und drücken Sie die Ein-/Aus-Taste, um die Heißluft-Fritteuse einzuschalten.

Einschalten
Schließen Sie das Stromkabel an und drücken Sie die Ein-/Aus-Taste, um die Heißluft-Fritteuse einzuschalten.

Ausschalten
Drücken Sie die Ein-/Aus-Taste, um die Heißluft-Fritteuse auszuschalten, unabhängig davon, in welchem Zustand sie sich befindet.

WLAN einrichten

- Zurücksetzen von WLAN:
  Drücken Sie den Bedienknopf, um „WLAN zurücksetzen" auszuwählen, während Sie sich im Bildschirm „WLAN" befinden, und drücken Sie dann den Bedienknopf, um Ja auszuwählen, oder drehen Sie den Bedienknopf, um auszuwählen, dass Sie den Vorgang nicht ausführen.
- Aktivieren/Deaktivieren des WLANs:
  Drücken Sie den Bedienknopf, um „WLAN aktivieren/deaktivieren" auszuwählen, während Sie sich im Bildschirm „WLAN" befinden, und drücken Sie dann den Bedienknopf, um Ja auszuwählen, oder drehen Sie den Bedienknopf, um auszuwählen, dass Sie den Vorgang nicht ausführen.

Firmware wird aktualisiert

Wenn eine Firmware-Aktualisierung über die Mi Home/Xiaomi Home App vorliegt, das Display an, dass eine Aktualisierung im Gange ist. Nach Abschluss der Aktualisierung wird die Heißluft-Fritteuse automatisch neu gestartet.
Hinweis: Die Mi Home/Xiaomi Home App kann die Firmware online aktualisieren, wenn die Heißluft-Fritteuse im Display ausgeschaltet ist oder das WLAN verbunden ist. Andere Vorgänge können während des Firmware-Aktualisierungsvorgangs ausgeführt werden.

Verbinden mit der Mi Home/Xiaomi Home App

Dieses Produkt unterstützt die Mi Home/Xiaomi App". Steuern Sie Ihr Gerät mit der Mi Home/Xiaomi App.

- Scannen Sie den QR-Code, um die App herunterzuladen und zu installieren. Wenn die App bereits installiert ist, werden Sie zur Verbindungseinrichtungsseite geleitet. Alternativ, suchen Sie im App Store nach „Mi Home/Xiaomi Home" suchen, um die App herunterzuladen und zu installieren.
- Öffnen Sie die Mi Home/Xiaomi Home App. Tippen Sie auf das „+" oben rechts und folgen Sie den Anweisungen, um Ihr Gerät hinzuzufügen.

*Die App wird in Europa (außer Russland) und Mainland China als Xiaomi Home App und in anderen Regionen als Mi Home App bezeichnet.
*Hinweis: Die Version der App wurde möglicherweise aktualisiert, bitte folgen Sie den Anweisungen zum Hinzufügen des Geräts.

How to Use

Connect the power cord and press the power button to turn on the air fryer.

Turning on
Connect the power cord and press the power button to turn on the air fryer.

Turning off
Press the power button to turn off the air fryer, regardless of the state it is in.

Garen starten

1. Stellen Sie Fritteuse auf ein stabiles, ebene Fläche und stellen Sie sicher, dass eine Luftzirkulation um die Heißluft-Fritteuse besteht.

2. Legen Sie die Frittierplatte auf den Boden der Heißluft-Fritteuse und gleiten Sie die Frittierplatte entlang der Führungsschienen in die Heißluft-Fritteuse. Dadurch wird sichergestellt, dass die Zutaten auf der Frittierplatte liegen bleiben und ein optimales Garergebnis erzielt wird, ohne dass sie umgedreht werden müssen.
Hinweis: 1. Wenn die Heißluft-Fritteuse mit Zutaten überfüllt ist, kann dies die Luftzirkulation im Inneren beeinträchtigen, was das Garergebnis beeinflussen kann. Bitten Sie Ihr Rezept und beginnen Sie erneut, wenn das Gericht nach Ihrem Geschmack gegrillt ist.
2. Wenn Sie mehr Zutaten garen wollen, verwenden Sie den Grill, um die Zutaten in Portionen zu garen.

3. Wenn der Korb vollständig in die Heißluft-Fritteuse geschoben ist, drehen Sie den Bedienknopf, um das entsprechende Rezept auszuwählen und die Parameter (wie Menge der Zutaten, Garzeit und Temperatur) anzupassen. Alternativ können Sie auf die Garzeit oder Temperatur tippen und dann den Bedienknopf, um die Einstellungen zu bestätigen und den Garvorgang zu starten.
Hinweis:
1. Die Garzeit und die Temperatur können bei laufendem Garvorgang jederzeit eingestellt werden, wobei die Temperatur in 5 °C-Schritten und die Garzeit in 1-Minuten-Schritten angepasst werden kann. Anpassungen können im Standby- oder Pausenmodus vorgenommen werden, und die Änderungen werden automatisch gespeichert.
2. Vorheizen Sie die Heißluft-Fritteuse vor dem Hinzufügen der Garzutaten für 3 Minuten.
3. Schütteln Sie die Garzutaten nach der Hälfte der Garzeit, um ein gleichmäßiges Garergebnis zu erzielen und Brandflecken zu vermeiden.

4. Wenn der Korb während des Garvorgangs herausgezogen wird, stoppen der Countdown und das Garen wird unterbrochen. Parameteranpassungen sind in diesem Zustand nicht zulässig. Sobald der Korb wieder in die Heißluft-Fritteuse eingesetzt wird, setzen der Garvorgang und der Countdown fort.
Hinweis: Bei Lebensmitteln mit einem Gesamtgewicht von mehr als 800 g wird empfohlen, die Zutaten während des Garvorgangs umzudrehen, ohne den Korb vollständig herauszuziehen.

5. Nach Ablauf des Countdowns gibt die Heißluft-Fritteuse ein langes Signal ab, um anzuzeigen, dass der Garvorgang beendet ist. Nehmen Sie den Korb vorsichtig heraus und verwenden Sie Zangen, um das Gericht herauszunehmen.

Andere Vorgänge

1. Spracheinstellungen

- Schalten Sie die Heißluft-Fritteuse ein, gehen Sie zu Einstellungen und drücken Sie den Bedienknopf, um die Sprachauswahl zu aktivieren.
- Drehen Sie den Bedienknopf auf die gewünschte Sprache und drücken Sie ihn zur Bestätigung.

2. Manueller Modus

- Wenn die Heißluft-Fritteuse eingeschaltet ist, drücken Sie den Bedienknopf, um in den manuellen Modus zu gelangen, drehen Sie den Bedienknopf, um die Gartemperatur einzustellen, drücken Sie den Bedienknopf, um die Zeit einzustellen und drehen Sie den Bedienknopf, um die Garzeit einzustellen, und drücken Sie schließlich den Bedienknopf, um den manuellen Garvorgang zu starten.

3. Temperatur-/Zeit-Verstellen

- Die Temperatur kann zwischen 40 °C und 220 °C verstellt werden. Die Zeit kann zwischen 0 und 24 Stunden eingestellt werden.
- Die Temperatur wird bei jeder Drehung des Bedienknopfs um 5 °C geändert. Die Garzeit wird bei jeder Drehung des Bedienknopfs um 1 Minute geändert. Wenn die Temperatur zwischen 40 °C und 220 °C liegt, beträgt die einstellbare Garzeit 24 Stunden. Wenn die Temperatur > 80 °C ist, beträgt die einstellbare Garzeit 24 Stunden. Wenn die Temperatur < 80 °C ist, beträgt die einstellbare Garzeit 24 Stunden.
- Achten Sie beim Verstellen der Garzeit oder der gegarten Fertigstellungsart auf die Geschwindigkeit, mit der der Bedienknopf gedreht wird. Wenn der eingestellte Zeitbereich < 60 Minuten ist, drehen Sie den Knopf schnell, um die Zeit um 5 Minuten zu verstellen, oder langsam, um die Zeit um 1 Minute zu verstellen. Wenn der eingestellte Zeitbereich > 60 Minuten ist, drehen Sie den Knopf schnell, um die Zeit um 30 Minuten zu verstellen, oder langsam, um die Zeit um 5 Minuten zu verstellen.

4. Geplantes Garen

- Drücken Sie den Bedienknopf, um die Zeitplan-Funktion auszuwählen, drehen Sie den Bedienknopf, um das gewünschte Rezept auszuwählen, und stellen Sie dann die Gartemperatur/Garzeit und die gewünschte Uhrzeit ein. Die Heißluft-Fritteuse startet den Garvorgang zu einem geeigneten Zeitpunkt, um sicherzustellen, dass das Garvorgang innerhalb der eingestellten Zeit abgeschlossen ist, und ruft dann den Status Warmhalten auf oder beendet den Garvorgang nach dem Ablauf.
Hinweis:
1. Die eingestellte Zeit muss länger als die Garzeit sein, aber weniger als 24 Stunden.
2. Die geplante Zeit bezieht sich auf den Gesamtzeitraum, innerhalb dessen der Garvorgang voraussichtlich abgeschlossen sein soll.
3. Die tatsächliche Startzeit des Garvorgangs wird automatisch berechnet.
4. Die geplante Funktion wird in den Modellen für Langen, Brasilien und Mexiko nicht unterstützt.

5. Warmhalte-Funktion

- Die Warmhalte-Funktion ist standardmäßig aktiviert. Diese Funktion kann aktiviert oder deaktiviert werden, indem Sie zu Einstellungen > Thermostatfunktion navigieren und den Bedienknopf auf dem Display drücken. Um die Warmhaltefunktion zu deaktivieren, halten Sie das Warmhaltesymbol auf dem Bildschirm für 1 Sekunde gedrückt.
- Die Warmhaltefunktion ist auf eine Dauer von 30 Minuten bei einer Temperatur von 80 °C eingestellt. Wenn die Korb der Heißluft-Fritteuse herausgezogen wird, während diese Funktion aktiviert ist, sind sowohl die Funktion als auch ihr Timer vorübergehend pausiert. Wenn der Heißluft-Fritteuse innerhalb von 1 Minute wieder eingesetzt wird, werden die Funktion und der Timer an der Stelle fortgesetzt, an der sie unterbrochen wurden. Wenn der Heißluft-Fritteuse innerhalb von 1 Minute wieder eingesetzt wird, werden die Funktion und der Timer an der Stelle fortgesetzt, an der sie unterbrochen wurden. Wenn der Korb jedoch für mehr als 30 Sekunden herausgezogen wird, wird die Warmhaltefunktion deaktiviert und kann nicht wieder fortgesetzt werden. Die Heißluft-Fritteuse kehrt dann zu ihren Standardeinstellungen zurück.

6. Garen unterbrechen/abbrechen

- Wenn die Heißluft-Fritteuse in Garmodus befindet, drücken Sie den Bedienknopf, um den Garvorgang zu pausieren. Wenn die Heißluft-Fritteuse garen oder pausiert ist, halten Sie den Bedienknopf mindestens 1 Sekunde lang gedrückt, um den Ausschaltmodus zu aktivieren. Alternativ können Sie das Abbrechen-Symbol auf dem Bildschirm für 1 Sekunde gedrückt halten, um den Garvorgang abzubrechen.
Hinweis: Während des Garvorgangs können die Sensoren im Inneren der Heißluft-Fritteuse allmählich Taubheit aufweisen. Der Sensor ist kein Feuersensor, und die Taubheit beeinflusst die Garergebnisse nicht. Sobald die Einstellung abgeschlossen ist, drücken Sie den Bedienknopf, um die neuen Parameter zu bestätigen.

7. Cloud-Rezept-Modus

- Wenn ein Cloud-Rezept ausgewählt und über die Mi Home/Xiaomi App ausgeführt wird, garen die Heißluft-Fritteuse automatisch gemäß dem Rezept. Nach dem Kochen wird die Heißluft-Fritteuse in den manuellen Modus wechseln.
Hinweis: 1. Die Cloud-Rezeptfunktion ist bei der Ausführung von Cloud-Rezepten verfügbar.
2. Die Cloud-Rezeptfunktion wird in den Modellen für Langen, Brasilien und Mexiko nicht unterstützt.
3. Die Heißluft-Fritteuse befindet sich im Garen / Zeitplan / Warmhaltemodus.
2. Der Korb der Heißluft-Fritteuse ist herausgezogen.

8. Entfetten-Modus

- Der Entfetten-Modus ermöglicht es, beim Frittieren ohne Öl mehr Fett aus den Lebensmitteln freizusetzen, was zu einer Reduzierung der Fettaufnahme führt.
- Dieser Modus ist speziell für Artikel wie Hähnchenflügel, Rindersteaks und Lammkoteletts, aber nicht für andere Rezepte oder Cloud-Rezepte/ Benutzerdefinierte Rezepte vorgesehen.
- Die Anpassungen der Garzeit und -temperatur sind im Zeitplan-Alpha-Modus zulässig, nur für die Garzeit, nicht für den Garmodus oder die Temperatur, kann während des Garens geändert werden.

9. Fehlermeldung

- Wenn die Heißluft-Fritteuse einen Fehler erkennt, wird auf dem Display „E1" oder „E2" angezeigt, und die Heißluft-Fritteuse gibt drei kurze Signaltöne ab.

Reinigung und Wartung

Ziehen Sie den Stecker des Stromkabels ab, bevor Sie die Heißluft-Fritteuse reinigen und warten, und warten Sie, bis sie sich abkühlt, bevor Sie fortfahren. Entfernen Sie den Korb der Heißluft-Fritteuse, bevor Sie die Heißluft-Fritteuse reinigen.

- Oberfläche der Heißluft-Fritteuse:
  Die Oberfläche der Heißluft-Fritteuse kann mit einem trockenen, weichen Tuch oder einem mit einem neutralen Reinigungsmittel angefeuchteten Schwamm abgewischt werden.
- Innenraum:
  Entfernen Sie aus dem Innenraum der Heißluft-Fritteuse zu entfernen, tragen Sie eine geeignete Menge Reinigungsmittel auf die