


TAKE RACING TO THE NEXT LEVEL

RACING COCKPIT FOLDABLE

INSTRUCTION MANUAL

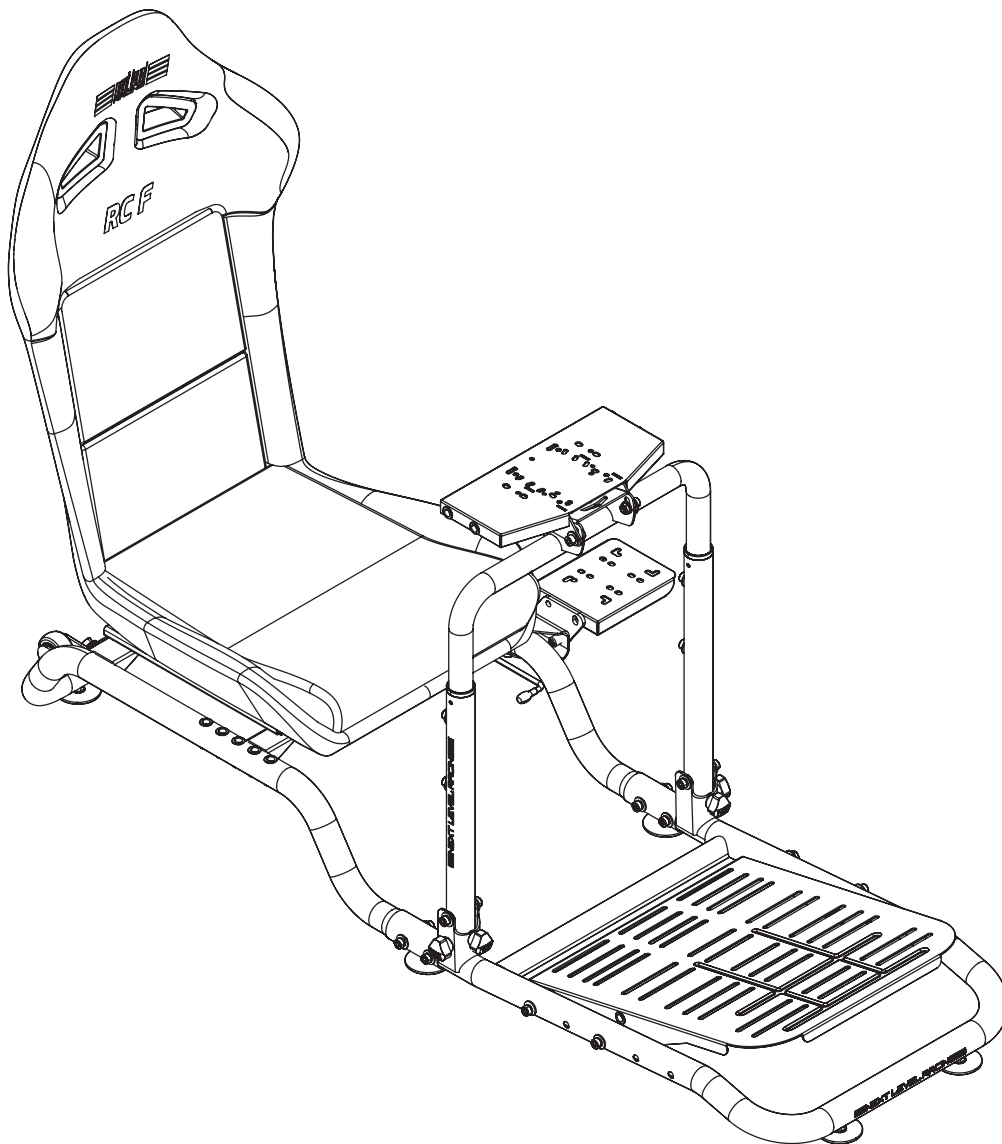

next level®
RACING



YOUR SIM RACING JOURNEY STARTS HERE

We know you're eager to start racing! Take your time with the instructions and follow this guide to assemble your product. You'll be setting yourself up for success by following the instruction booklet to fully optimize your product.



**ASSEMBLY
VIDEO**

bit.ly/nlrbuild



**FOLLOW
US**



@next_level_racing



@nextlevelracingOfficial



@nextlvlracing



Next Level Racing



support@nextlevelracing.com

**TAKE RACING
TO THE NEXT LEVEL®**

NEXTLEVELRACING.COM





support@nextlevelracing.com

PRE-RACE CHECKS

WARNING

- Please do not use power tools for assembly as over tightening can damage parts.
- If you require further support, consult the installation video or contact us at support@nextlevelracing.com
- Do not force parts together.
- Avoid cross threading bolts.
- Beware of sharp edges.
- Do not use the seating if any part is broken, torn, or missing.
- Make sure all assembly fittings are securely tightened and check them regularly for safety and stability.
- Seats are designed for simulators and esports, not for road use or in vehicle.




If you require any support with
your product please contact our friendly team at:
support@nextlevelracing.com



WARNING

CHOKING HAZARD - Small parts
not for children under 3 years or any
individuals who have a tendency to
place inedible objects in their mouths.

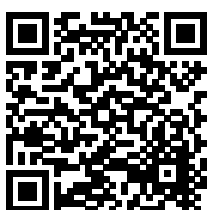

**ASSEMBLY
VIDEO**

bit.ly/nlrbuild

NLR-R017 RC FOLDABLE SIMULATOR COCKPIT

NLR-R017 INSTRUCTIONS

Date of Document: April, 2026

Manufactured by:

Next Level Racing Simulations PTY LTD

21-23 Upton Street,
Bundall, QLD, 4217
Australia





Video Instruction: bit.ly/nlrbuild

VERTICAL STORAGE SAFETY WARNING

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, DEATH, OR PROPERTY DAMAGE.

ADULT SUPERVISION REQUIRED: Vertical storage must be performed by a responsible adult only. Do not allow children or unsupervised persons to store cockpit.

Secure the Perimeter: Store the cockpit vertically only in low-traffic areas. Never store near children's play areas or walkways.

CHILD SAFETY: Never allow children to climb, hang, or play on the cockpit when stored vertically. Serious crush injuries or death may occur if the frame tips.

Weight Distribution: Before lifting, ensure the seat and wheel deck are fully folded. Confirm that all pedal plate adjustment bolts are securely tightened to prevent any movement or directional sliding during vertical transition.

Engage Safety Straps: Both the seat and wheel deck must be secured using the provided safety straps before moving the frame into a vertical position. Do not store the cockpit vertically if safety straps are damaged, missing, or not fully engaged.

Surface Requirements: Store only on flat, level, and solid flooring. Do not store on thick rugs, carpet, or uneven surfaces that may cause the base to slide or "kick out."


Wall Anchoring: Use of the provided safety tether is strongly recommended whenever the cockpit is stored vertically.

STUD MOUNTING MANDATORY: The wall bracket must be secured directly into a solid wooden wall stud or a masonry/brick wall. Do NOT use drywall anchors, toggle bolts, or plasterboard-only fixings. Drywall alone cannot support the dynamic load if the frame begins to tip.

HARDWARE VALIDATION: When mounting to brick, concrete, or metal studs, consult a qualified professional to select appropriate heavy-duty fasteners.

Equipment Check: Ensure all cables, pedals, and accessories are secured and do not create trip, snagging, or pull hazards while the cockpit is stored vertically.

HEIGHT REQUIREMENT: Install the wall bracket at the height specified in this manual (typically above the frame's centre of gravity) to prevent pivot-over or pull-out.

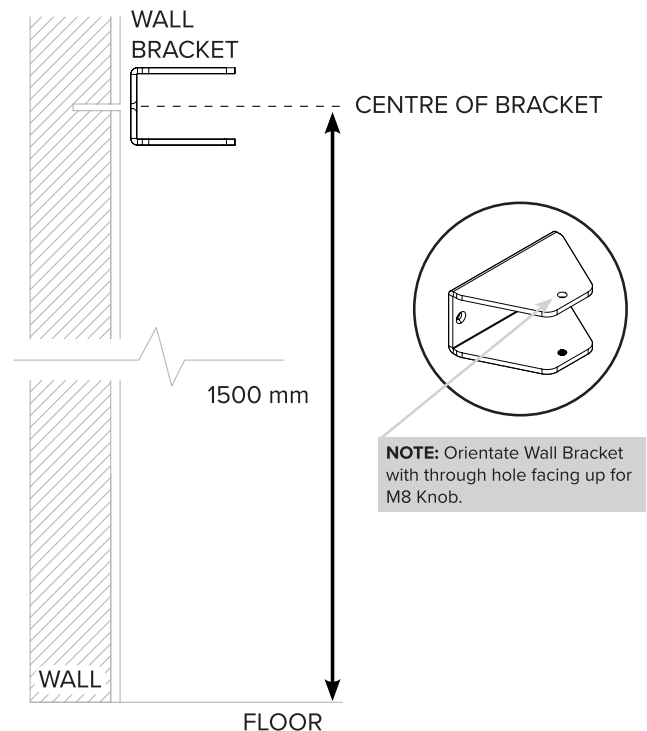

Disclaimer: The provided wall bracket is a safety aid for lateral restraint only and is not intended to support any suspended or dead load of the cockpit, nor does it replace correct setup, locking mechanisms, or safety-strap engagement.

When installed, the cockpit must remain fully supported by the floor, with the wall bracket used solely to limit lateral movement. Improper installation, use on unsuitable or non-load-bearing wall structures, or failure to follow these instructions may result in serious injury or property damage. The user is responsible for ensuring that the mounting surface and fastening hardware are structurally adequate.




support@nextlevelracing.com


IN THE BOX:

*NOT TO SCALE


NOTE: Some Items Come with Rust Resistant Coating

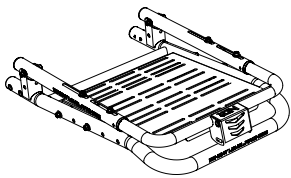


1 x FRONT FRAME AND PEDAL PLATE

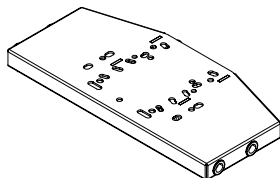


1 x WHEEL PLATE

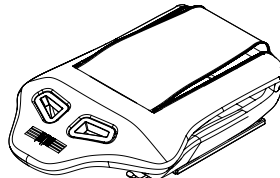


1 x SEAT

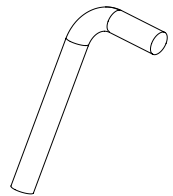


2 x PINS

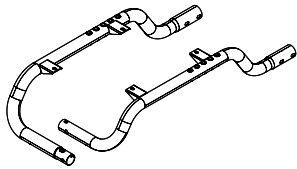


1 x LEFT SEAT FRAME
1 x RIGHT SEAT FRAME

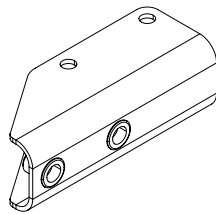


1 x SHIFTER FRAME BRACKET

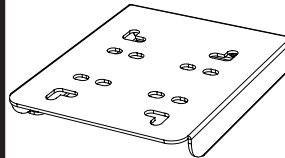


1 x SHIFTER PLATE

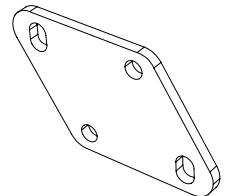


1 x SHIFTER PLATE BRACKET




26 x M8 20mm WASHERS

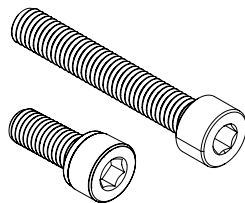


25 x M8 20mm SOCKET HEAD BOLTS
1 x M8 50mm SOCKET HEAD BOLT




7 x M8 FLANGE NUTS

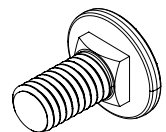


4 x M8 16mm SQUARE NECK BOLT

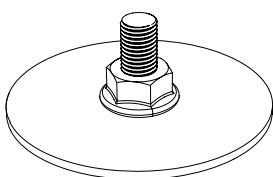


6 x LEVELING FEET

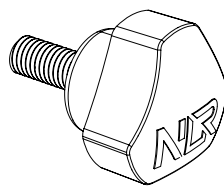

4 x M8 20mm KNOBS

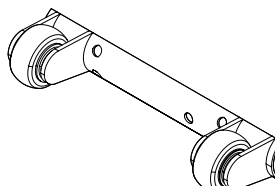


REAR WHEELS

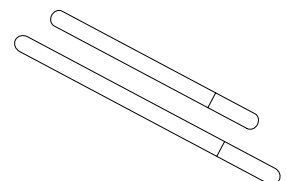

4 x (10mm x 220mm) CABLE MGMT STRIP
2 X (10mm x 380mm) CABLE MGMT STRIP




Video Instruction: bit.ly/nlrbuild

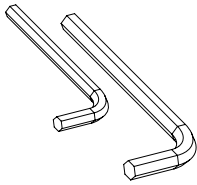


1 x 5mm ALLEN KEY (for M6 Bolts)
1 x 6mm ALLEN KEY (for M8 Bolts)




1 x 13mm WRENCH

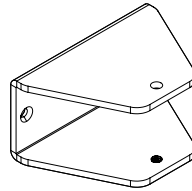

1 x WALL BRACKET (screws not included)




1 X M8 55mm KNOB

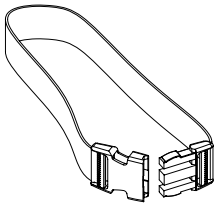


2 X STRAPS (IMAGE INDICATIVE)

ELECTRONICS HARDWARE




12 x M6 13mm WASHERS

ELECTRONICS HARDWARE



12 x M6 16mm SOCKET HEAD BOLTS

FOR MOUNTING
CLAMPING WHEELBASES



2 X WHEEL CLAMP SPACERS




support@nextlevelracing.com

MOUNTING LOCATIONS

WHEEL PLATE

● Asetek	La Prima / Forte / Invicta	● Simagic	Alpha Mini / Alpha /
● Cammus	C5 / C12		Alpha EVO Sport / Alpha EVO /
● Fanatec	CSL DD / GT DD Pro / CS DD / DD /		Alpha EVO Pro
	DD1 / DD2 / Podium Series	● Simucube	Bottom Mount / 3 Sport / 3 Pro /
● Hori	Racing Wheel Playstation / Xbox /		3 Ultimate
	Nintendo (bolted)	● SimXperience	Accuforce Pro V2
● Hori	Force Feedback Racing Wheel	— Thrustmaster	T98 (clamped)
● Logitech	RS50	● Thrustmaster	T248 / T300 / TX / T-GT II /
● Logitech	G25 / G27 / G29 / G920 / G923 /		TS-PC Racer
	G PRO	● Thrustmaster	T598 / T818
● Moza	R3	● Turtle Beach	Velocity One
● Moza	R5	● Turtle Beach	KD3
● Moza	R9 / R12 / R16 / R21 / R21 Ultra /	○ VNM	Premier
	R25 Ultra	● VRS Racing	DFP15
● PXN	VD4 / VD6 / VD10		

Recommended up to 13Nm

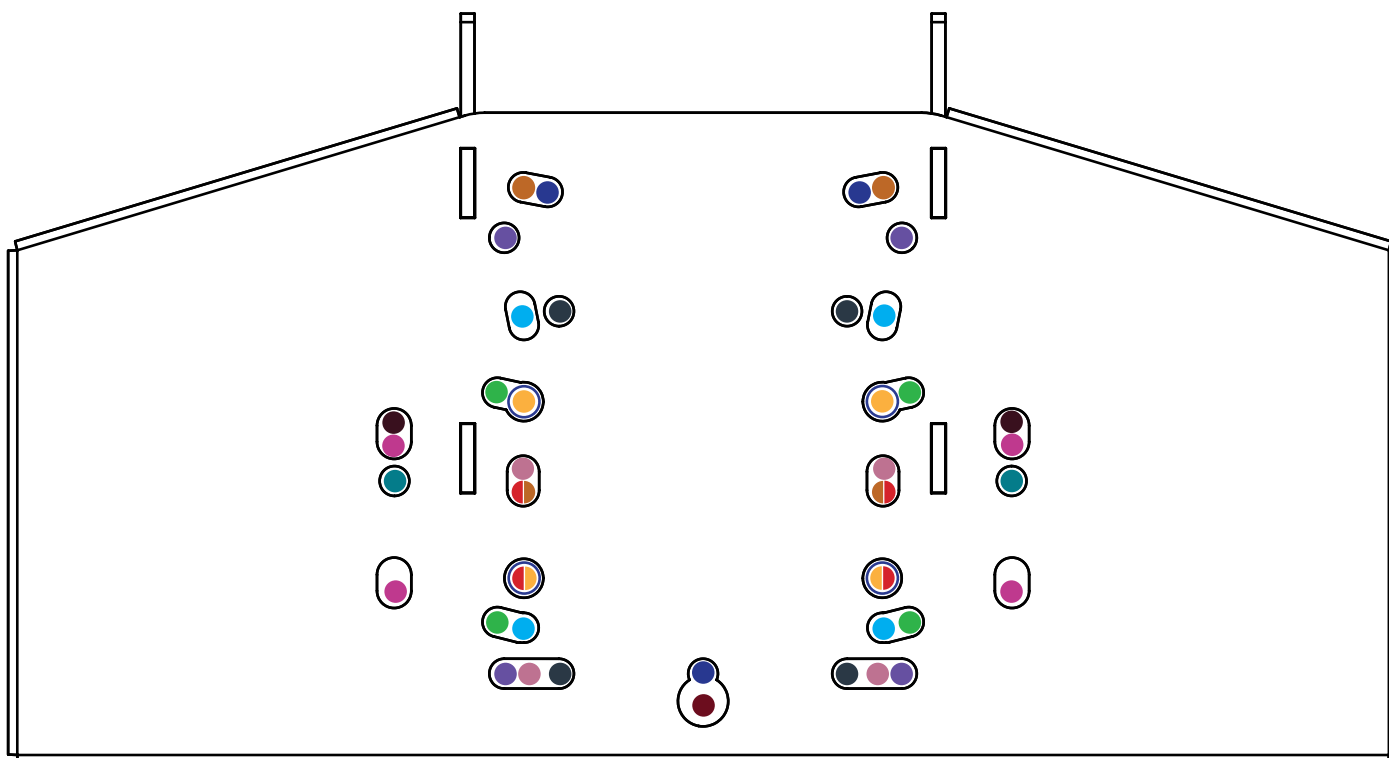

NOT TO SCALE




Video Instruction: bit.ly/nlrbuild

MOUNTING LOCATIONS

PEDAL PLATE


● Asetek	La Prima / Forte / Invicta	● PXN	V99
● Fanatec	CSL / CSL Elite V2 / ClubSport V3	● Simagic	P500
● Heusinkveld	Sprint / Ultimate (Baseplate)	● Thrustmaster	Raceline Pedals III & LTE
● Logitech G	RS	● Thrustmaster	T3PA
● Logitech G	Series / G Pro	● Thrustmaster	T300RS
● Moza	SR-P LITE / SR-P / SR-P 2/ CR-P /	● Thrustmaster	TLCM / T3PM
	CR-P 2	● Turtle Beach	Velocity One / KD3
● PXN	A3	● VNM	Lite / V1 (2 & 3 Pedals)

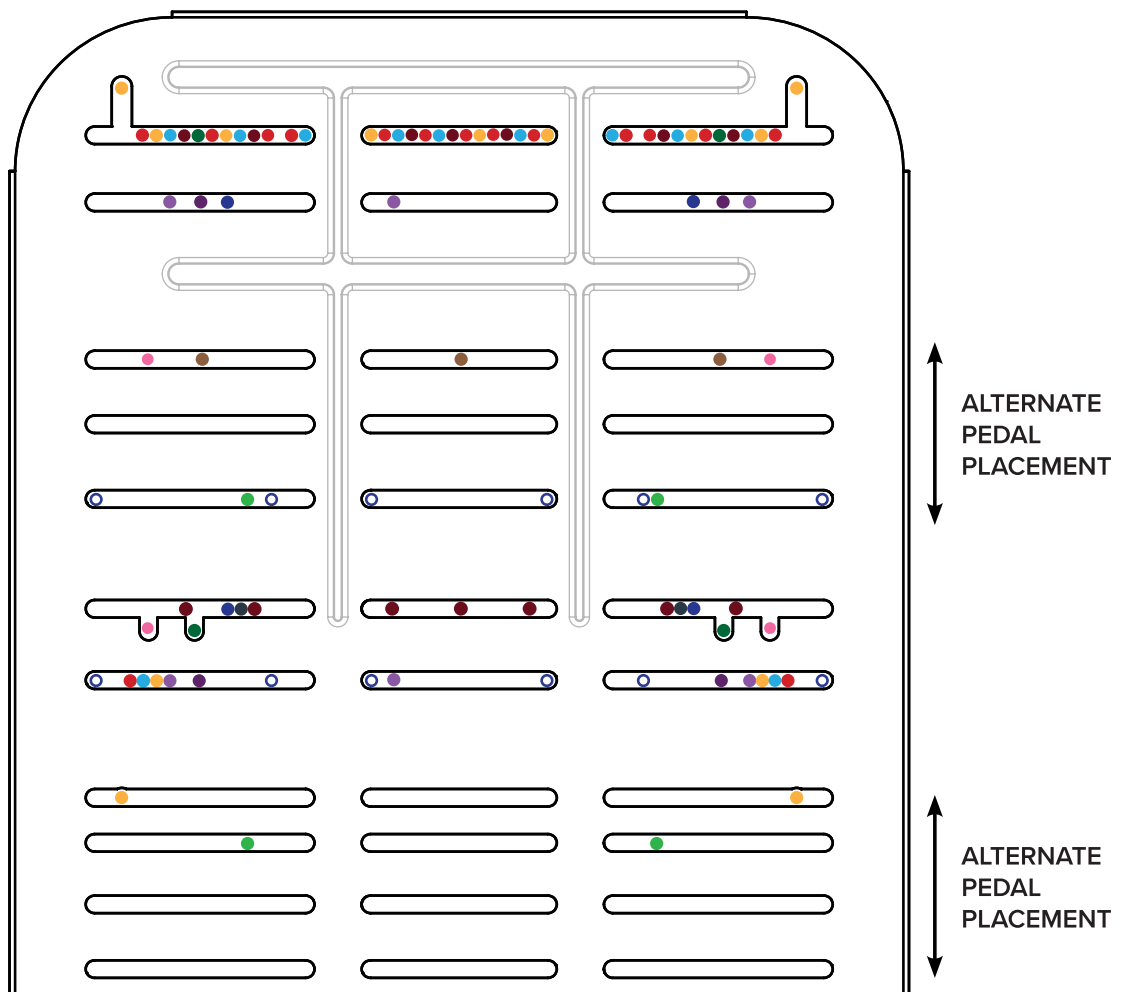


NOT TO SCALE



A)

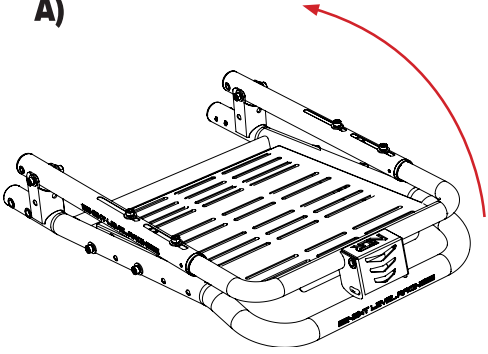


B)

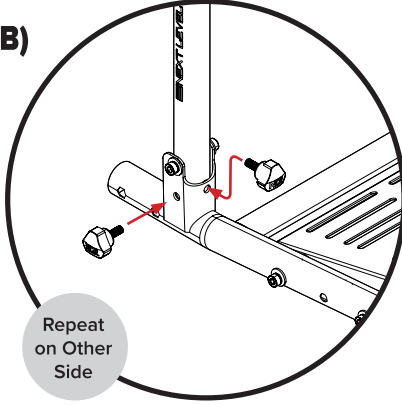


Repeat on Other Side

PARTS:

- 1 x Front Frame and Pedal Plate

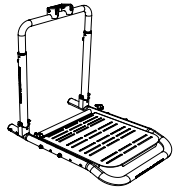



- 4 x M8 20mm Knobs



01

A) Unfold Front Frame into upright position.
B) Secure in place with M8 Knobs on the side and in the front.

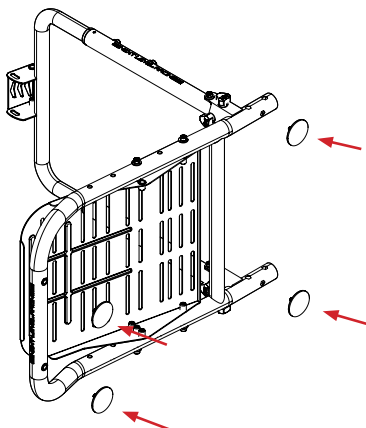


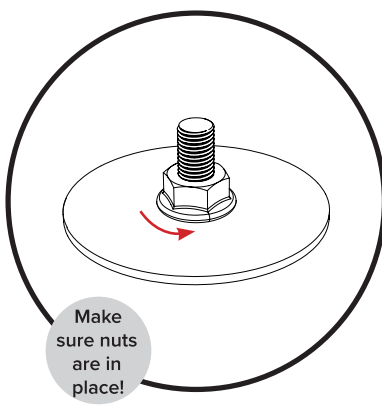

Make sure nuts are in place!

PARTS:


- 4 x Leveling Feet

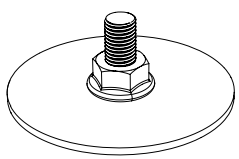


02

Lay Front Frame on side. Install Leveling Feet into the positions on bottom of Frame. Recommended to lay down on carpet or packaging to protect floors.

A)

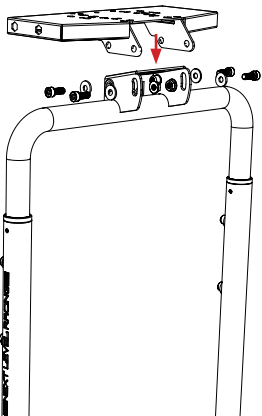


B)

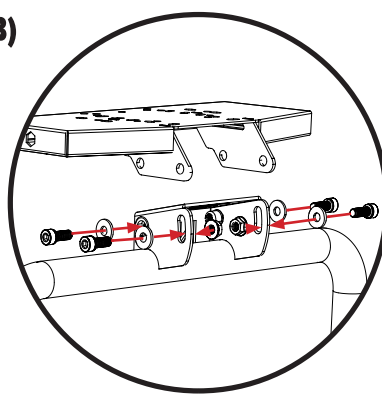

Make sure nuts are in place!

PARTS:

- 1 x Wheel Plate

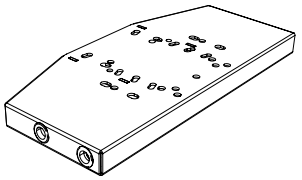

- 4 x M8 20mm Socket Head Bolts
- 4 x M8 Washers
- 2 x M8 Flange Nuts



03

A) Place Wheel Plate onto Support Plate so the mounting holes align.
B) Secure in place using M8 20mm Bolts, Washers and Flange Nuts.



Video Instruction: bit.ly/nlrbuild

A)

B)

C)

PARTS:

- 1 x Left and Right Seat Frame
- 1 x Rear Wheels
- 5 x M8 20mm Socket Head Bolts
- 1 x M8 50mm Socket Head Bolts
- 6 x M8 Washers
- 1 x M8 Flange Nut

04

A) Slot the Right Seat Frame onto the Left Seat Frame so that the mounting holes align.
 B) Align the Rear Wheels over the mounting hole and secure hand tight with M8 Bolts, and Washers.
 C) Secure the Rear Wheels with the remaining M8 20mm Bolts and Washers and tighten all Bolts.

Make sure nuts are in place!

PARTS:

- 2 x Leveling Feet

05

Lay Seat Frame on side. Install Leveling Feet into the positions on bottom of Frame. Recommended to lay down on carpet or packaging to protect floors.

A)

B)

Repeat on Other Side

PARTS:

- 8 x M8 20mm Socket Head Bolts
- 8 x M8 Washers

06



A) Slot the Seat Frame Assembly onto the Front Frame Assembly so the mounting holes align.
 B) Secure in place using M8 20mm Bolts, and Washers.

11




SEAT INSTALLATION

NOTE: Unzip the seat flap before folding. Only zip the flap down after unfolding. Zipping while folded may tear the fabric or cause damage.

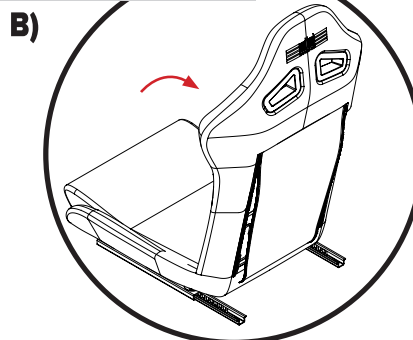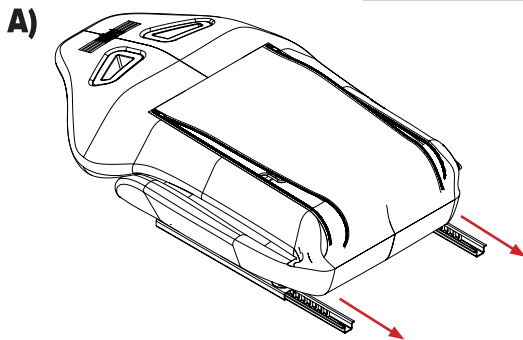



PARTS:

- 1 x Seat

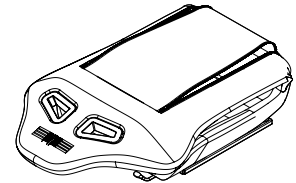


07

- A) Twist the Seat Slider Lever and slide the seat sliders all the way to the back.
B) Unfold the seat.

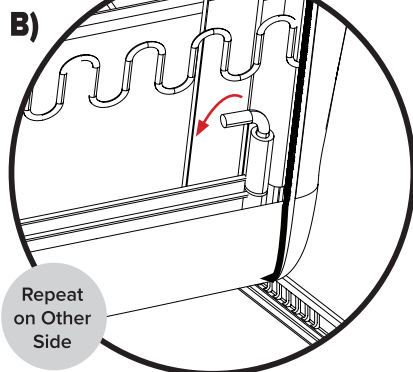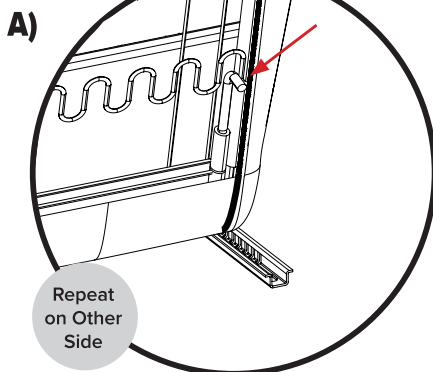



PARTS:

- 2 x Pins

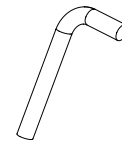

08

- A) Align the Pins with the Seat mounting tubes.
B) Insert the Pins and rotate to lock the unfolded seat in place.

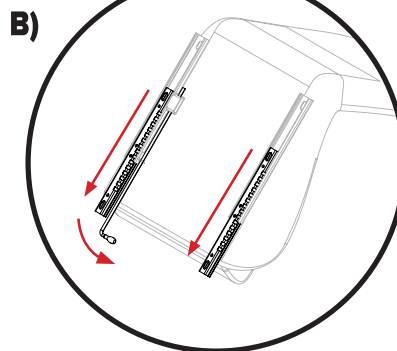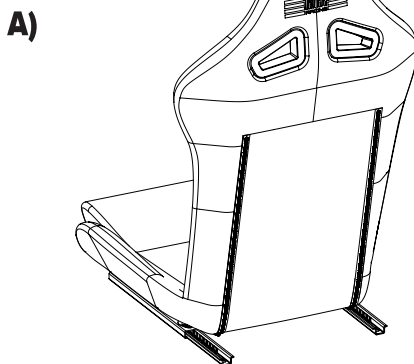


PARTS:


09

- A) Zip the seat flaps closed.
B) Twist the Seat Slider Lever and slide the seat rails forward all the way.



Video Instruction: bit.ly/nlrbuild

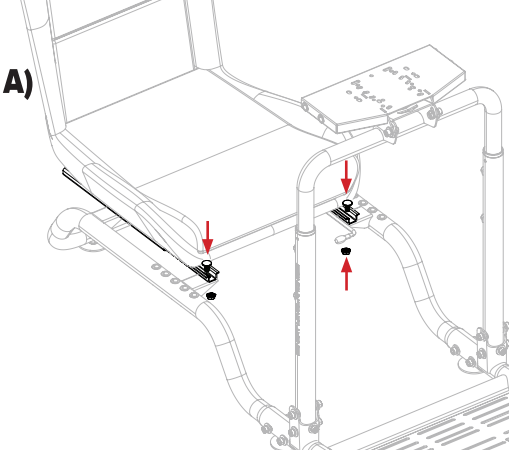
A) 

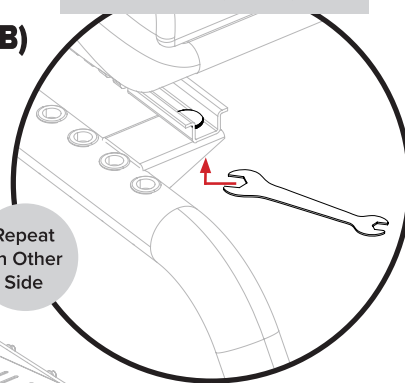B) 

NOTE: Use Wrench to tighten Flange Nuts.

PARTS AND TOOLS:


- 1 x 13mm Wrench
- 2 x M8 Square Neck Bolt
- 2 x M8 Flange Nuts




10

A) Align the front Seat Slider Mounting Holes on the cockpit Frame.


B) Secure with M8 Square Neck Bolts and tighten the Flange Nuts using the Wrench.

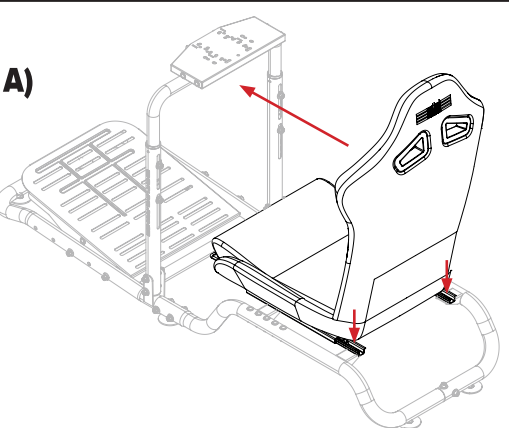A) 

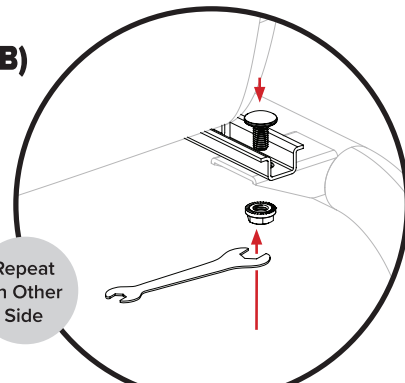B) 

PARTS AND TOOLS:

- 1 x 13mm Wrench
- 2 x M8 16mm Square Neck Bolt
- 2 x M8 Flange Nuts





11

A) Lift the Seat Slider Lever and slide the Seat all the way forward to access the rear mounting holes.

B) Secure with M8 Square Neck Bolts and tighten the Flange Nuts using the Wrench.

NOTE: Shifter Plate can also be mounted on left or right hand side of Seat Frame, depending on preference.

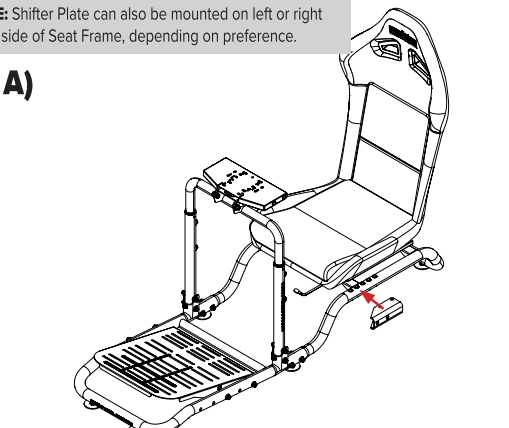A) 

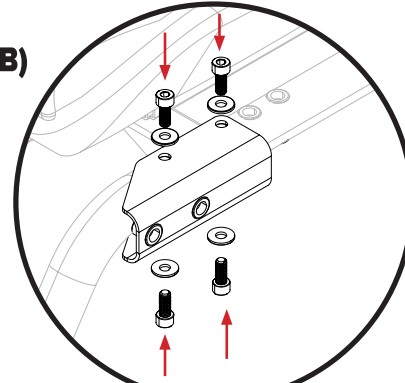B) 

PARTS:

- 1 x Shifter Frame Bracket
- 4 x M8 20mm Socket Head Bolts
- 4 x M8 Washers



12


A) Align the Shifter Frame Bracket mounting holes on the Cockpit Frame.

B) Secure in place with M8 20mm Bolts and Washers.




support@nextlevelracing.com

A)

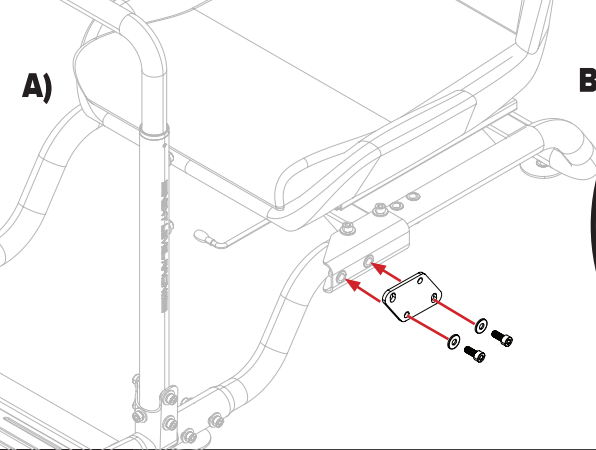


B)

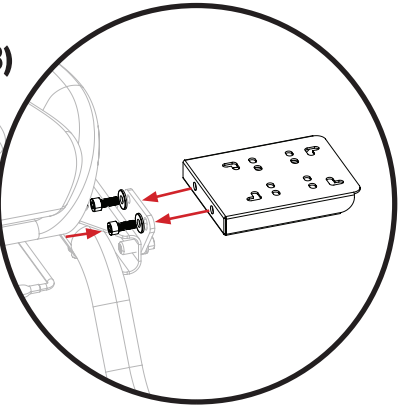


PARTS:

- 1 x Shifter Plate
- 1 x Shifter Plate Bracket
- 4 x 20mm Socket Head Bolts
- 4 x M8 Washers



13

A) Mount Shifter Plate Bracket to Seat Frame using M8 20mm Socket Head Bolts and Washers.
B) Mount Shifter Plate to Support Bracket using M8 20mm Socket Head Bolts and Washers.

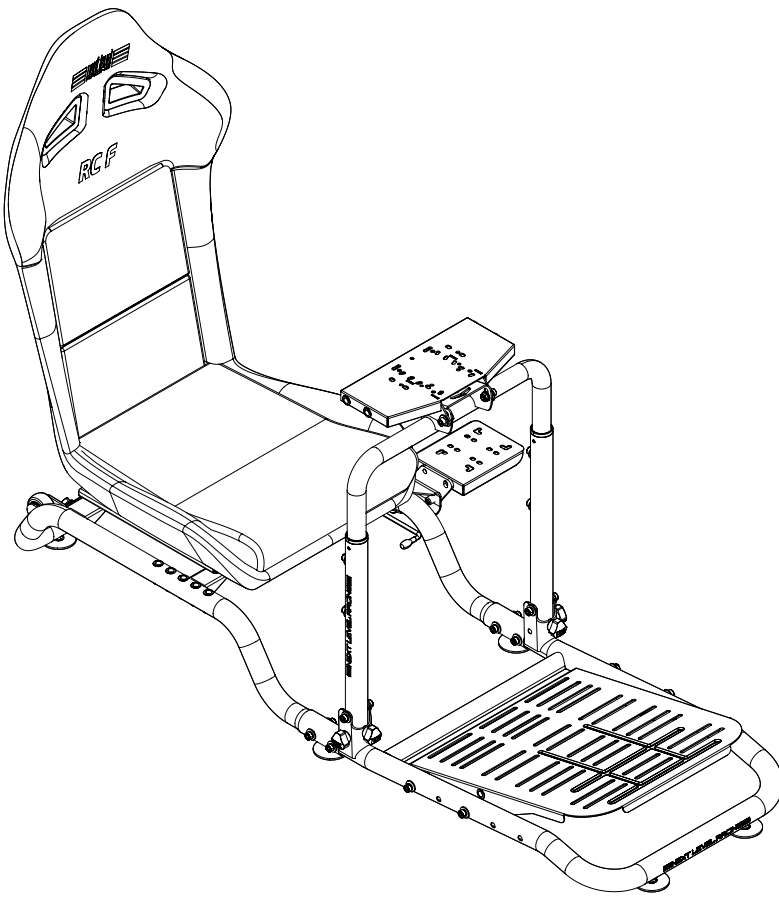

PARTS:

- NIL

14


Your Racing Cockpit Folding installation is complete.




Video Instruction: bit.ly/nlrbuild

PEDAL PLATE ADJUSTMENT

A)

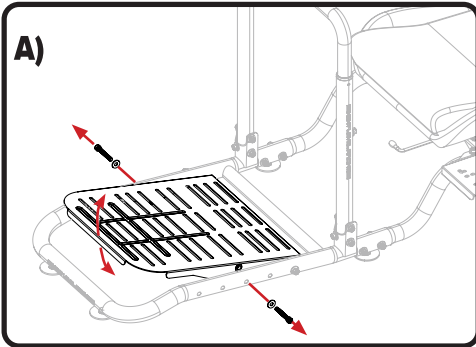


B)

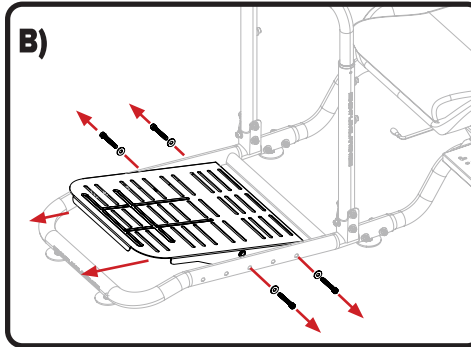

TOOLS NEEDED

- 6mm Allen Key

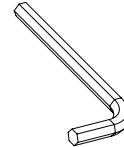



15

A) Adjust Pedal Plate angle by removing above Bolts, tilt plate to adjust angle. Replace Bolts.
B) Adjust Pedal Plate position by removing above Bolts, move plate to new position. Replace Bolts.

HEIGHT ADJUSTMENT




WARNING: Recommend to perform height adjustments with two people to avoid injury or damage.

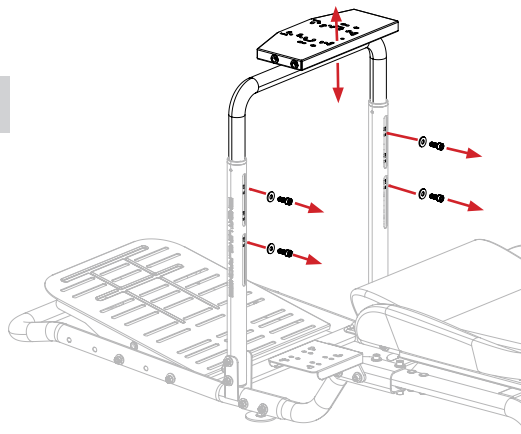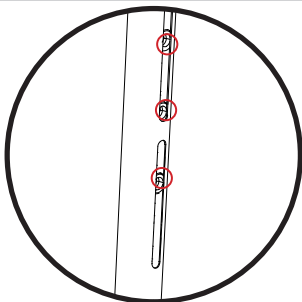

TOOLS NEEDED:


- 6mm Allen Key

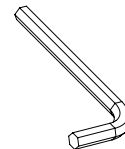

16


Loosen Bolts for minor adjustments using 6mm Allen key. For larger adjustments move Bolts to one of the other Bolt positions (circled).

WHEEL PLATE ADJUSTMENT

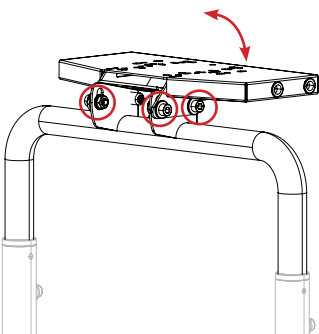


TOOLS NEEDED:

- 6mm Allen Key

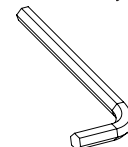

- 13mm Wrench (for M8 Flange Nuts)

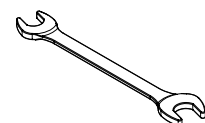

17


Loosen above Bolts with provided 6mm Allen Key and 13mm Wrench, adjust Wheel Plate to desired angle. Retighten Bolts with provided tools.




ALTERNATE SHIFTER INSTALLATION

NOTE: Shifter Plate can also be mounted on left or right hand side of Wheel Plate, depending on preference.

A)

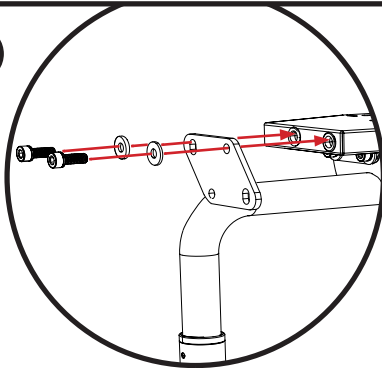


B)

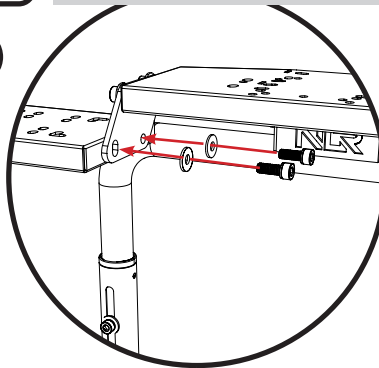


PARTS:


- 1 x Shifter Plate



- 1 x Shifter Plate Bracket



- 4 x 20mm Socket Head Bolts
- 4 x M8 Washers





18

A) (SKIP STEP 13) Mount Shifter Plate Bracket to Wheel Plate using M8 20mm Socket Head Bolts and M8 Washers. B) Mount Shifter Plate to Support Bracket using M8 20mm Socket Head Bolts and M8 Washers.

STORAGE

NOTE: Unzip the seat flap before folding. Only zip the flap down after unfolding. Zipping while folded may tear the fabric or cause damage.

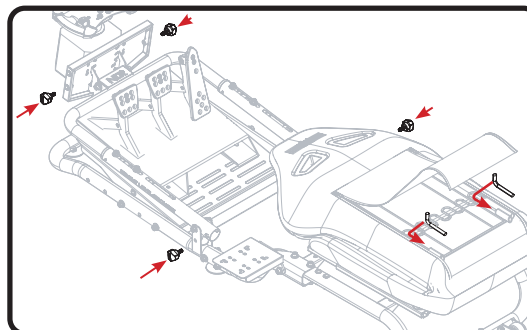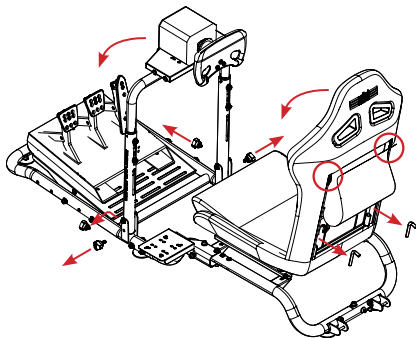


PARTS:

19

Unzip the seat flap and uninstall the Knobs from the Front Frame and Pins from the Seat, Fold the Front Frame and Seat, then reinstall the Knobs and Pins for storage.

PARTS:

- 2 x Straps (image Indicative)

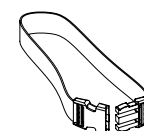

20

Secure the straps around the folded Front Frame and Seat so that the cockpit is secure before moving.



Video Instruction: bit.ly/nlrbuild

VERTICAL STORAGE



WARNING: Read Wall Bracket guide on page 5 before proceeding with Vertical Storage.

PARTS:

- 1 x Wall Bracket (screws not included)




- 1 x M8 55mm Knob



NOTE: Protect wall before mounting cockpit.

WALL

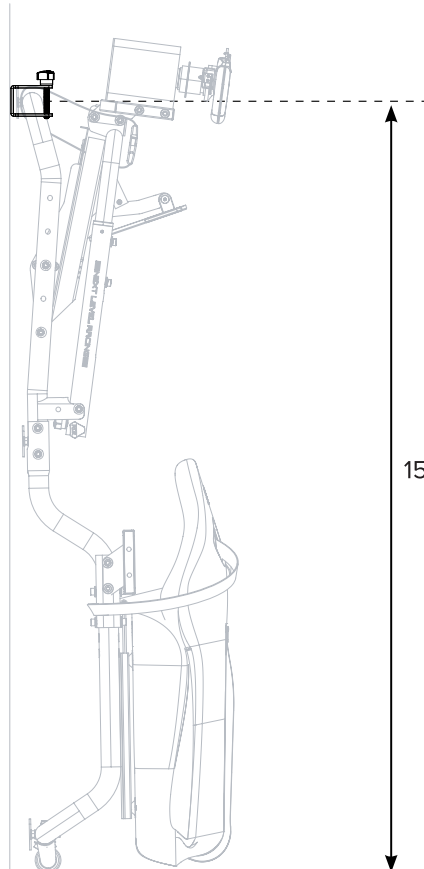

1500 mm

FLOOR

21

Mount the cockpit into the Wall Bracket, and secure with M8 Knob.

NOTES



support@nextlevelracing.com

DE - DEUTSCH

RC-F Bedienungsanleitung

Wir wissen, dass Sie begeistert sind, mit dem Rennen anzufangen! Nehmen Sie sich Zeit mit den Anweisungen und folgen Sie diesem Leitfaden, um Ihr Produkt zusammenzubauen. Sie bereiten sich auf den Erfolg vor, indem Sie dem Bedienungsheft folgen, um Ihr Produkt vollständig zu optimieren.

VOR-RENNEN-CHECKS

WARNUNG

- Bitte verwenden Sie keine Elektrowerkzeuge für den Zusammenbau, da zu viel Anziehen Teile beschädigen kann.
- Wenn Sie weitere Unterstützung benötigen, hören Sie bitte das Installationsvideo an oder kontaktieren Sie uns unter support@nextlevelracing.com
- Zwingen Sie keine Teile zusammen.
- Vermeiden Sie das Quergewinde von Schrauben.
- Vorsicht vor scharfen Kanten.
- Benutzen Sie die Sitzgelegenheiten nicht, wenn ein Teil gebrochen, zerrissen oder fehlend ist.
- Stellen Sie sicher, dass alle Montageanschlüsse sicher festgezogen sind, und überprüfen Sie sie regelmäßig auf Sicherheit und Stabilität.
- Sitze sind für Simulatoren und Esports konzipiert, nicht für den Straßenverkehr oder im Fahrzeug.

Wenn Sie Unterstützung bei Ihrem Produkt benötigen, wenden Sie sich bitte an unser freundliches Team unter: support@nextlevelracing.com

WARNUNG: ERSTICKUNGSGEFAHR

Kleine Teile, die nicht für Kinder unter 3 Jahren oder für Personen gedacht sind, die dazu neigen, ungenießbare Gegenstände in den Mund zu stecken.

SICHERHEITSWARNUNG ZUR VERTIKALEN LAGERUNG

DAS NICHTBEFOLGEN DIESER ANWEISUNGEN KANN ZU SCHWEREN VERLETZUNGEN, TÖTUNGEN ODER SACHSCHÄDEN FÜHREN.

ERWACHSENE AUFSICHT ERFORDERLICH: Die vertikale Lagerung muss ausschließlich von einem verantwortungsvollen Erwachsenen durchgeführt werden. Lassen Sie keine Kinder oder unbeaufsichtigten Personen das Cockpit aufbewahren. Sichern Sie den Perimeter: Lagern Sie das Cockpit nur vertikal in Bereichen mit wenig Befahren. Lagern Sie niemals in der Nähe von Kinderspielflächen oder Gehwegen.

KINDERSICHERHEIT: Lassen Sie niemals zu, dass Kinder im Cockpit klettern, hängen oder spielen, wenn sie vertikal gelagert sind. Schwere Quetschverletzungen oder Tod können auftreten, wenn der Rahmen kippt.

Gewichtsverteilung: Stellen Sie vor dem Heben sicher, dass Sitz und Raddeck vollständig eingeklappt sind. Überprüfen Sie, dass alle Einstellschrauben der Pedalplatten sicher festgezogen sind, um jegliche Bewegung oder Richtungsverschiebung während des vertikalen Übergangs zu verhindern.

Sicherheitsgurte aktivieren: Sowohl Sitz als auch Raddeck müssen mit den bereitgestellten Sicherheitsgurten gesichert werden, bevor der Rahmen in eine vertikale Position gebracht wird. Lagern Sie das Cockpit nicht vertikal, wenn Sicherheitsgurte beschädigt, fehlen oder nicht vollständig eingezogen sind.

Oberflächenanforderungen: Lagern Sie nur auf flachen, ebenen und massiven Böden. Bewahren Sie sie nicht auf dicken Teppichen, Teppichen oder unebenen Oberflächen auf, die dazu führen könnten, dass der Sockel rutscht oder "heraustritt".

Wandverankerung: Die Verwendung des bereitgestellten Sicherheitsankers wird dringend empfohlen, sobald das Cockpit vertikal gelagert wird.

STÄNDERBEFESTIGUNG PFLICHT: Die Wandhalterung muss direkt an einem massiven Holzbalken oder an einer Mauerwerk-/Backsteinwand befestigt werden. Verwende KEINE Trockenbaudübel, Kippschrauben oder nur Gipskartonbefestigungen. Gipskarton allein kann die dynamische Last nicht tragen, wenn der Rahmen zu kippen beginnt.

HARDWARE-VALIDIERUNG: Bei der Montage an Ziegel-, Beton- oder Metallständern wenden Sie sich an einen qualifizierten Fachmann, um geeignete Schwerlastbefestigungen auszuwählen.

Ausrüstungskontrolle: Stellen Sie sicher, dass alle Kabel, Pedale und Zubehörteile gesichert sind und keine Stolper-, Hängen- oder Zughindernisse verursachen, während das Cockpit vertikal gelagert ist.

GRÖSSENANFORDERUNG: Installieren Sie die Wandhalterung in der in diesem Handbuch angegebenen Höhe (typischerweise oberhalb des Schwerpunkts des Rahmens), um ein Über- oder Ausziehen zu verhindern.

Haftungsausschluss: Die mitgelieferte Wandhalterung dient ausschließlich als Sicherheitshilfe für die seitliche Sicherung und ist nicht dazu gedacht, irgendeine aufgehängte oder Eigenlast des Cockpits zu tragen, noch ersetzt sie die korrekte Einrichtung, Verriegelungsmechanismen oder das Einrasten des Sicherheitsgurtes.

Beim Einbau muss das Cockpit vollständig vom Boden gestützt bleiben, wobei die Wandhalterung ausschließlich zur Begrenzung seitlicher Bewegung verwendet wird. Unsachgemäße Installation, Verwendung an ungeeigneten oder nicht tragenden Wandstrukturen oder das Nichtbefolgen dieser Anweisungen können zu schweren Verletzungen oder Sachschäden führen. Der Benutzer ist dafür verantwortlich, sicherzustellen, dass die Montagefläche und die Befestigungsbeschläge strukturell ausreichend sind.

START



Video Instruction: bit.ly/nlrbuild

DE - DEUTSCH

- 01 – Siehe Bild. A) Vorderrahmen in aufrechte Position ausklappen. B) Sichern Sie mit M8 20mm Knöpfen an der Seite und M8 20mm Knöpfen vorne.
- 02 – Siehe Bild. Leg den vorderen Rahmen seitlich an. Setze Nivellierungsfüße in die Positionen am unteren Teil des Rahmens. Es wird empfohlen, auf Teppich oder Verpackung zu legen, um den Boden zu schützen.
- 03 – Siehe Bild. A) Stelle die Radplatte auf die Stützplatte, damit die Befestigungslöcher ausgerichtet sind. B) Sichern Sie sie mit M8 20mm Schrauben, Unterlegscheiben und Flanschnuttern.
- 04 – Siehe Bild. A) Setzen Sie den rechten Sitzrahmen auf den linken Sitzrahmen, sodass die Befestigungslöcher ausgerichtet sind. B) Die Hinterräder über dem Befestigungsloch ausrichten und mit M8-Schrauben und Unterlegscheiben fest befestigen. C) Sichern Sie die Hinterräder mit den verbleibenden M8 20mm Schrauben und Unterlegscheiben und ziehen Sie alle Bolzen fest.
- 05 – Siehe Bild. Sitzrahmen auf die Seite legen. Setze Nivellierungsfüße in die Positionen am unteren Teil des Rahmens. Es wird empfohlen, auf Teppich oder Verpackung zu legen, um den Boden zu schützen.
- 06 – Siehe Bild. A) Setzen Sie die Sitzrahmeneinheit auf die vordere Rahmenbaugruppe, damit die Befestigungslöcher ausgerichtet sind. B) Sichern Sie sie mit M8 20mm Bolzen und Unterlegscheiben.
- 07 – Siehe Bild. A) Drehen Sie den Sitzschieberhebel und schieben Sie die Sitzschieber ganz nach hinten. B) Den Sitz ausklappen. HINWEIS: Öffnen Sie die Sitzklappe vor dem Umklappen. Zieh die Klappe erst nach dem Entfalten zu. Ein gefaltetes Reißverschluss kann den Stoff zerreißen oder Schäden verursachen.
- 08 – Siehe Bild. A) Die Stifte mit den Sitzmontagerohren ausrichten. B) Die Stifte einsetzen und drehen, um den ungeklappten Sitz zu sichern.
- 09 – Siehe Bild. A) Falten Sie die Klettklappen wieder ein. B) Drehen Sie den Sitzschieberhebel und schieben Sie die Sitzschienen ganz nach vorne.
- 10 – Siehe Bild. A) Richten Sie die Befestigungslöcher des Vordersitzschiebers am Cockpitrahmen aus. B) Sichern Sie mit M8-Quadrathalsschrauben und ziehen Sie die Flanschnuttern mit dem Schraubenschlüssel fest.
- 11 – Siehe Bild. A) Heben Sie den Sitzschieberhebel an und schieben Sie den Sitz ganz nach vorne, um an die hinteren Befestigungslöcher zu gelangen. B) Sichern Sie mit M8-Quadrathalsschrauben und ziehen Sie die Flanschnuttern mit dem Schraubenschlüssel fest.
- 12 – Siehe Bild. A) Richte die Befestigungslöcher für den Schalthebelrahmen am Cockpitrahmen aus. B) Sichern Sie sie mit M8 20mm Schrauben und Unterlegscheiben.
- 13 – Siehe Bild. A) Die Schaltplattenhalterung am Sitzrahmen mit M8 20mm Steckkopfschrauben und Unterlegscheiben befestigen. B) Die Schalthebelplatte mit M8 20mm Steckkopfbolzen und Unterlegscheiben an die Halterung zu befestigen.
- 14 – Siehe Bild. Ihre Racing Cockpit Folding Installation ist abgeschlossen.
- 15 – Siehe Bild. EINSTELLUNG DER PEDALPLATTE: A) Einstellung der Pedalplatte durch Entfernen der oberen Schrauben und Neigungsplatte zur Einstellung des Winkels. Schrauben ersetzen. B) Die Position der Pedalplatte durch Entfernen der oberen Bolzen anpassen und die Platte in die neue Position verschieben. Schrauben ersetzen.
- 16 – Siehe Bild. HÖHENVERSTELLUNG: Lockere die Schrauben für kleinere Einstellungen mit 6mm Inbusschlüssel. Für größere Anpassungen werden die Bolzen auf eine der anderen Verschlusspositionen (eingekreist) gestellt. WARNUNG: Es wird empfohlen, mit zwei Personen Höhenanpassungen durchzuführen, um Verletzungen oder Schäden zu vermeiden.
- 17 – Siehe Bild. RADPLATTENEINSTELLUNG: Lockere oberhalb der Schrauben mit mitgeliefertem 6-mm-Inbusschlüssel und 13-mm-Schraubenschlüssel, stelle Radplatte auf den gewünschten Winkel ein. Schrauben mit bereitgestellten Werkzeugen neu anziehen.
- 18 – Siehe Bild. ALTERNATIVE SCHALTHEBELINSTALLATION: A) (SCHRITT 13 ÜBERSPRINGEN) Die Schaltplattenhalterung an der Radplatte mit M8 20mm Steckdosenkopfbolzen und M8-Unterlegscheiben montieren. B) Schalthebel mit M8 20mm Steckkopfbolzen und M8-Unterlegscheiben an die Halterung montieren. HINWEIS: Die Schalthebelplatte kann je nach Vorlieben auch auf der linken oder rechten Seite der Radplatte montiert werden.
- 19 – Siehe Bild. LAGERUNG: Reißverschluss der Sitzklappe öffnen und die Knöpfe am vorderen Rahmen sowie die Pins am Sitz abbauen. Falten Sie den vorderen Rahmen und den Sitz zusammen und setzen Sie dann die Knöpfe und Pins zur Aufbewahrung wieder ein. HINWEIS: Öffnen Sie die Sitzklappe vor dem Umklappen. Zieh die Klappe erst nach dem Entfalten zu. Ein gefaltetes Reißverschluss kann den Stoff zerreißen oder Schäden verursachen.
- 20 – Siehe Bild. Sichern Sie die Gurte um den gefalteten Vorderrahmen und den Sitz, damit das Cockpit vor der Bewegung sicher ist.
- 21 – Siehe Bild. VERTIKALES LAGERN: Befestigen Sie das Cockpit im Wandhalter und sichern Sie es mit dem M8-Knopf. WARNUNG: Lesen Sie den Wandhalter-Leitfaden auf Seite 5, bevor Sie mit der vertikalen Lagerung fortfahren. HINWEIS: Schützen Sie die Wand, bevor Sie das Cockpit montieren.