


TAKE RACING TO THE NEXT LEVEL

RACING COCKPIT ESSENTIAL

INSTRUCTION MANUAL

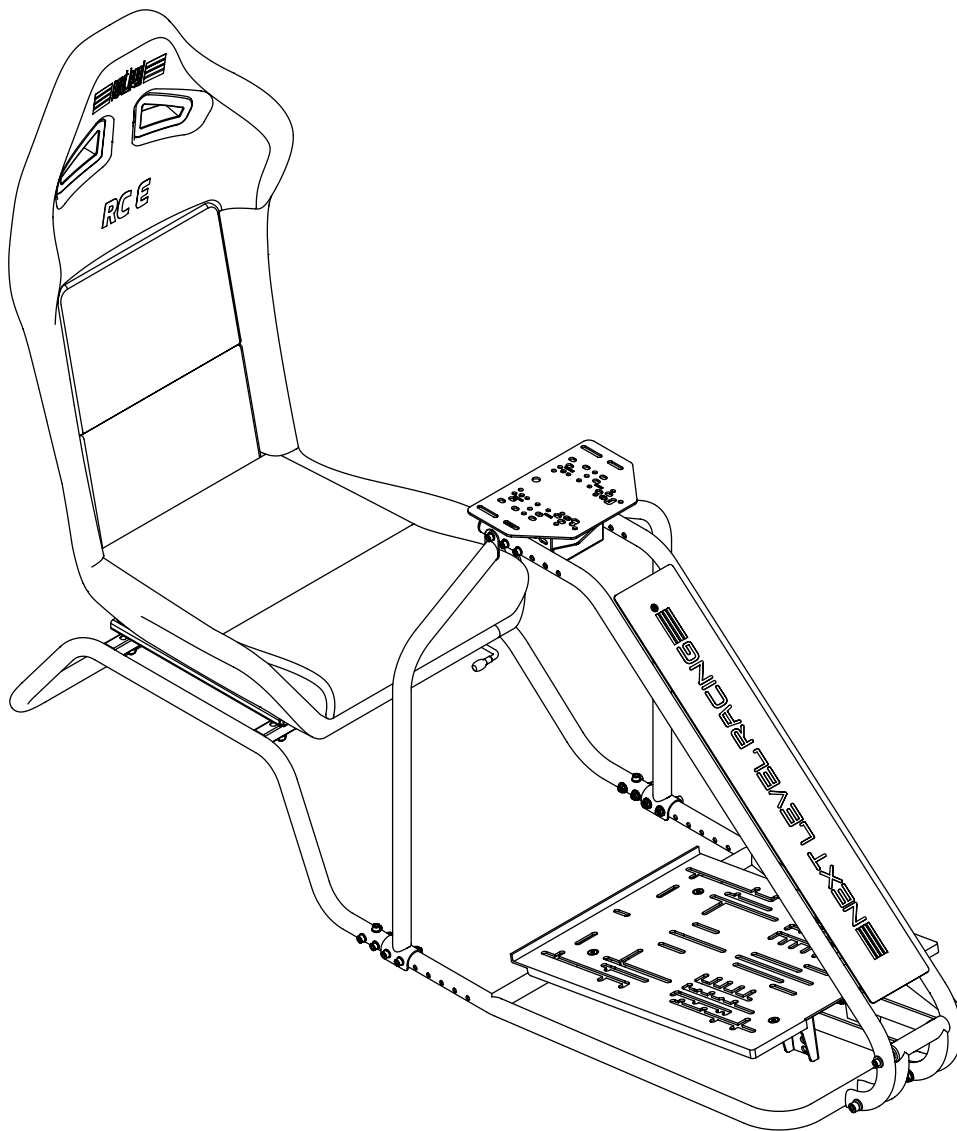

YOUR SIM RACING JOURNEY STARTS HERE

We know you're eager to start racing! Take your time with the instructions and follow this guide to assemble your product. You'll be setting yourself up for success by following the instruction booklet to fully optimize your product.



bit.ly/nlrbuild



**FOLLOW
US**



@next_level_racing



@nextlevelracingOfficial



@nextlvlracing



Next Level Racing



support@nextlevelracing.com

**TAKE RACING
TO THE NEXT LEVEL**

NEXTLEVELRACING.COM





support@nextlevelracing.com

PRE-RACE CHECKS

WARNING

- Please do not use power tools for assembly as over tightening can damage parts.
- If you require further support, consult the installation video or contact us at support@nextlevelracing.com
- Do not force parts together.
- Avoid cross threading bolts.
- Beware of sharp edges.
- Do not use the seating if any part is broken, torn, or missing.
- Make sure all assembly fittings are securely tightened and check them regularly for safety and stability.
- Seats are designed for simulators and esports, not for road use or in vehicle.



If you require any support with
your product please contact our friendly team at:
support@nextlevelracing.com



WARNING

CHOKING HAZARD - Small parts
not for children under 3 years or any
individuals who have a tendency to
place inedible objects in their mouths.



bit.ly/nlrbuild

**NLR-R016 RC ESSENTIAL SIMULATOR
COCKPIT**

**NLR-R016 RC ESSENTIAL SIMULATOR
COCKPIT INSTRUCTIONS**

Date of Document: March, 2026

Manufactured by:
Next Level Racing Simulations PTY LTD

21-23 Upton Street,
Bundall, QLD, 4215
Australia





















Video Instruction: bit.ly/nlrbuild

IN THE BOX


*NOT TO SCALE

NOTE: Some Items Come with Rust Resistant Coating

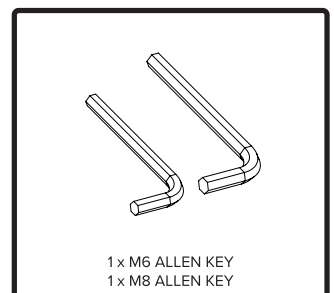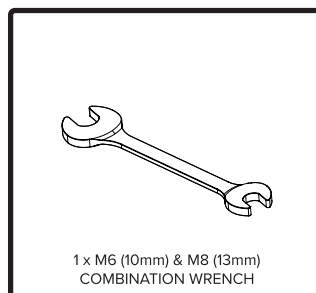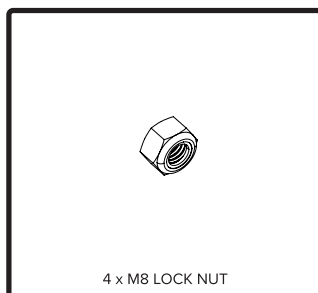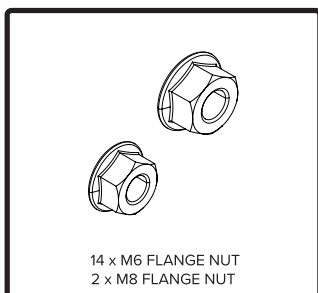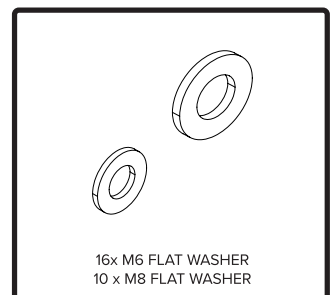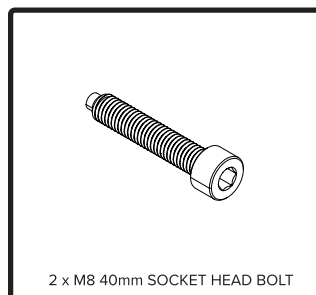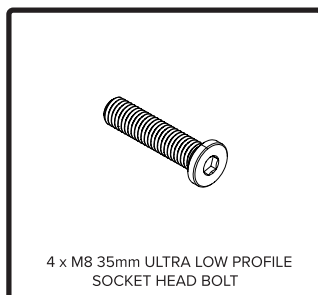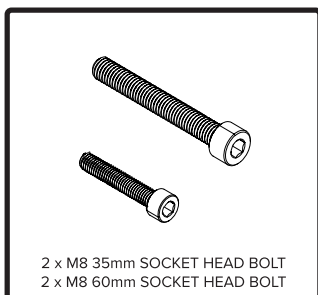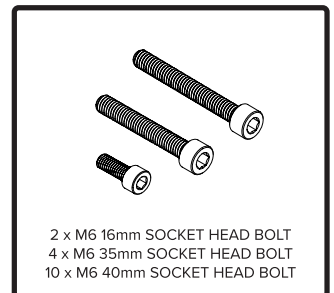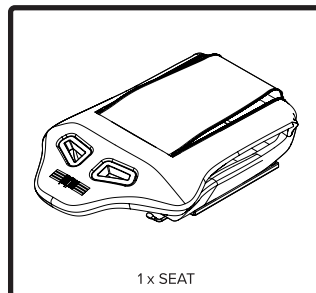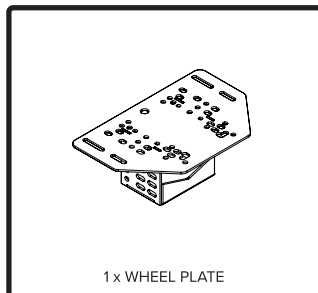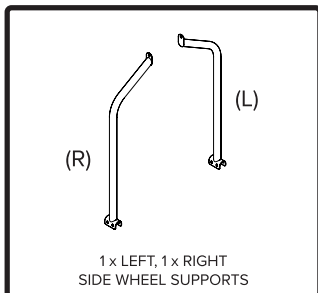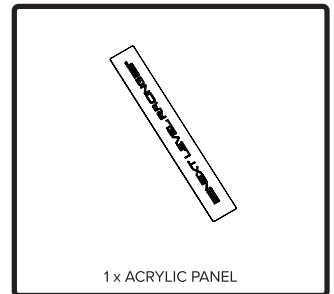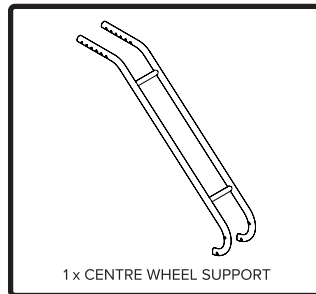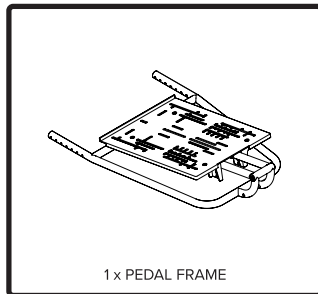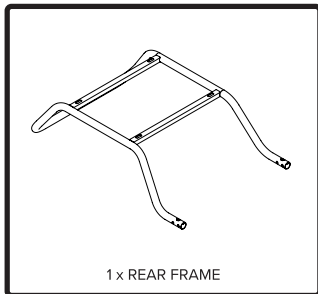



support@nextlevelracing.com



DOUBLE SIDED ADHESIVE TAPE

ELECTRONICS HARDWARE




8 x M6 FLAT WASHER

ELECTRONICS HARDWARE




8 x M6 16mm SOCKETHEAD BOLTS

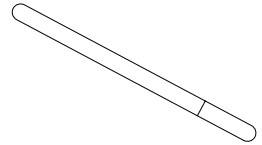

8 x VELCRO CABLE STRAP

FOR MOUNTING
CLAMPING WHEELBASES



2 X WHEEL CLAMP SPACERS

NOTE: Some Items Come with Rust Resistant Coating




Video Instruction: bit.ly/nlrbuild

MOUNTING LOCATIONS

WHEEL PLATE

● Asetek	La Prima / Forte / Invicta	● Simagic	Alpha Mini / Alpha /
● Fanatec	CSL DD / GT DD Pro / CS DD / DD /		Alpha EVO Sport / Alpha EVO /
	DD1 / DD2 / Podium Series		Alpha EVO Pro
● Hori	Racing Wheel Playstation / Xbox /	● Simucube	Bottom Mount / 3 Sport / 3 Pro /
	Nintendo (bolted)		3 Ultimate
● Hori	Force Feedback Racing Wheel	● SimXperience	Accuforce Pro V2
● Logitech	RS50	— Thrustmaster	T98 (clamp - <i>reversed wheelplate</i>)
● Logitech	G25 / G27 / G29 / G920 / G923 /	● Thrustmaster	T598 / T818
	G PRO	● Thrustmaster	T248 / T300 / TX / T-GT II /
			TS-PC Racer
● Moza	R3	● Turtle Beach	Velocity One
● Moza	R5	● Turtle Beach	KD3
● Moza	R9 / R12 / R16 / R21 / R21 Ultra /	● VNM	Premier / Elite / Supreme / Extreme
	R25 Ultra	● VRS Racing	DFP15
● PXN	VD4 / VD6 / VD10		
● Simagic	M10		

Recommended up to 13Nm

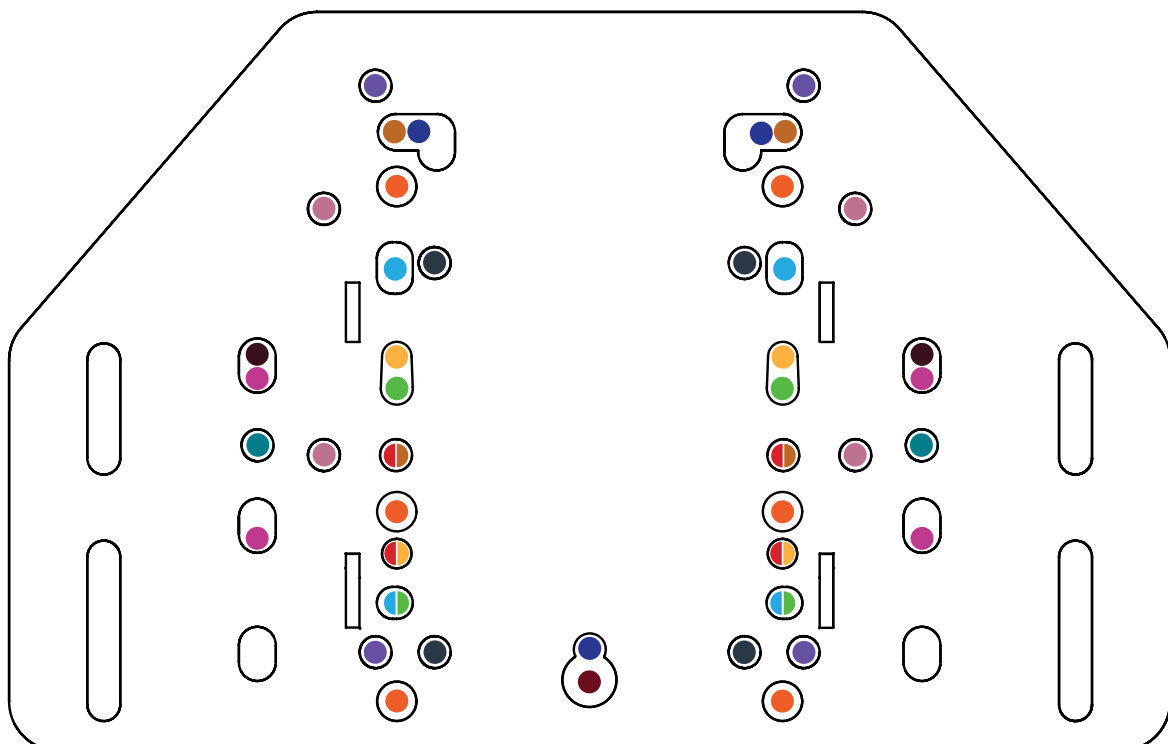

NOT TO SCALE




support@nextlevelracing.com

MOUNTING LOCATIONS

PEDAL PLATE


● Asetek	La Prima / Forte / Invicta	● PXN	A3
● B.J.	Pro Series (Universal Baseplate)	● Simagic	P500
● Fanatec	CSL	● Simagic	P1000 & P2000 Series (non-inverted)
● Fanatec	CSL Elite V2	● Thrustmaster	TLCM / T3PM
● Fanatec	ClubSport V3 (non-inverted)	● Thrustmaster	Raceline Pedals III & LTE
● Heusinkveld	Sprint / Ultimate (Baseplate)	● Thrustmaster	T3PA
● Logitech G	RS	● Thrustmaster	T300RS
● Logitech G	Series / G Pro	● Turtle Beach	Velocity One / KD3
● Moza	SR-P LITE / SR-P / SR-P 2	● VNM	Lite (2 pedals) / V1 (2 pedals)
● Moza	CR-P / CR-P 2	● VRS Racing	Direct Force Pro (2 pedals)
● Moza	CR-P 2		

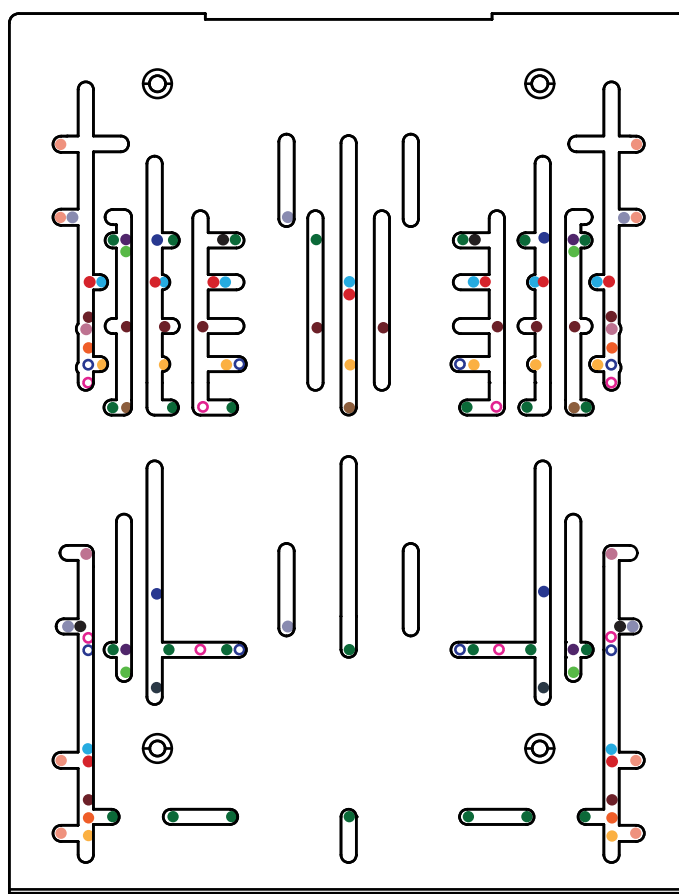


NOT TO SCALE



Video Instruction: bit.ly/nlrbuild

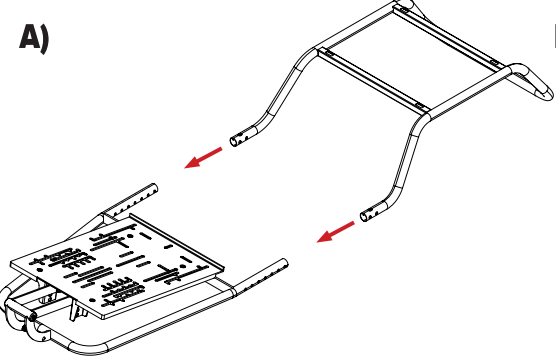A) 

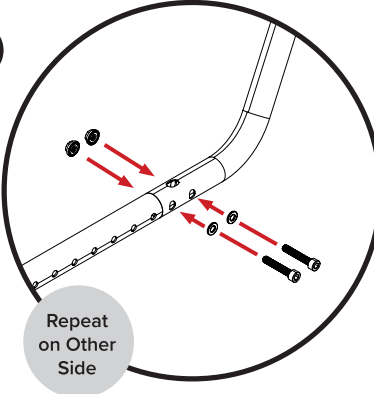B) 


PARTS:


- 1 x Pedal Frame
- 1 x Rear Frame
- 4 x M6 35mm Sockethead Bolts
- 4 x M6 Flange Nuts
- 4 x M6 Washers

01

A) Align the Pedal Frame with the Rear Frame.

B) Bolt through the side of Frame and secure with 2 x M6 Bolts, Washers and Flange Nuts on each side.

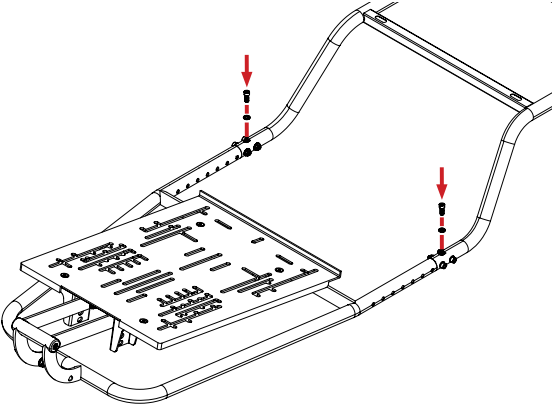

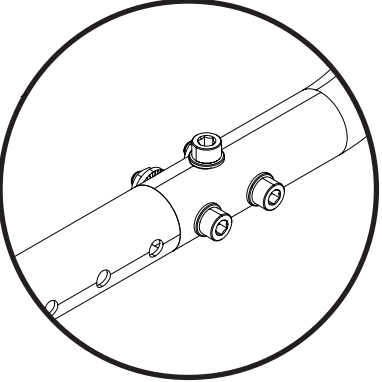



PARTS:

- 2 x M6 16mm Sockethead Bolts
- 2 x M6 Washers

02

Bolt through the top of the Frame Assembly and secure with 1 x M6 Bolt and Washer on each side.

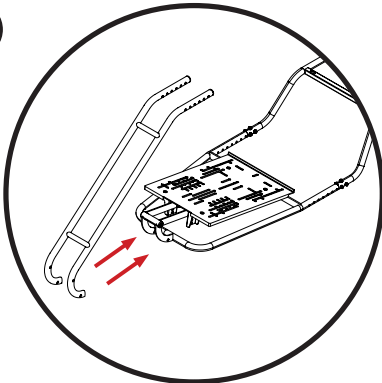A) 

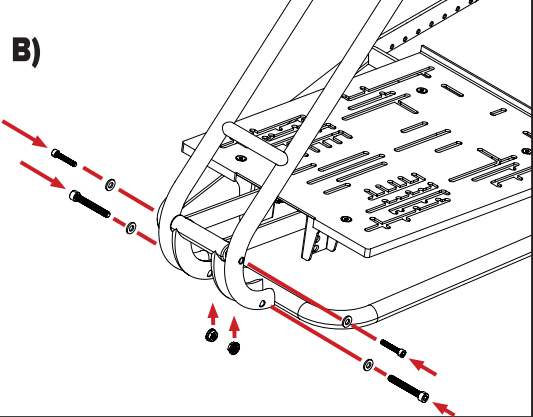B) 

PARTS:

- 1 x Centre Wheel Support
- 2 x M8 60mm Sockethead Bolts
- 2 x M8 35mm Sockethead Bolts
- 4 x M8 Washers
- 2 x M8 Flange Nuts


03

A) Align the Centre Wheel Support through holes with the Pedal Frame through holes.

B) Bolt through the lower holes with 2 x M8 60mm Bolts, Washers and Flange Nuts and bolt through the upper threaded holes with 2 x M8 35mm Bolts and Washers.



SIDE WHEEL SUPPORT ADJUSTMENT

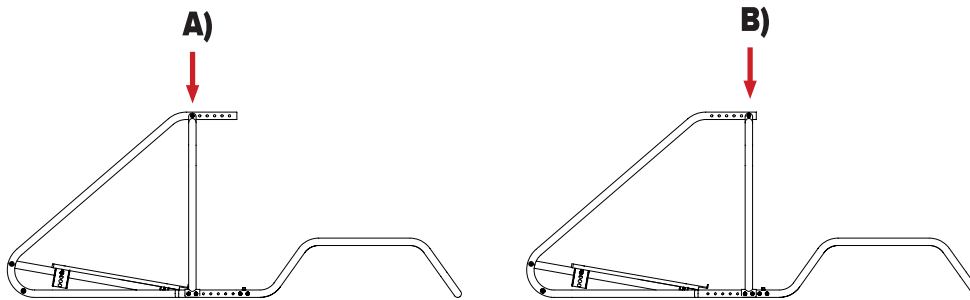


PARTS:

- NIL

04

A) Suggested Side Wheel Support position for users 120cm - 160cm tall.
B) Suggested Side Wheel Support position for users 160cm+ tall.

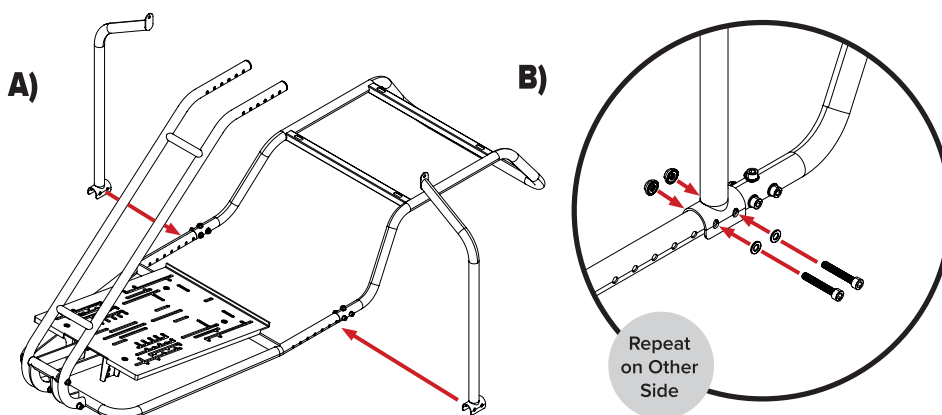


PARTS:

- 2 x Side Wheel Supports (L&R)
- 4 x M6 40mm Sockethead Bolts
- 4 x M6 Flange Nuts
- 4 x M6 Washers

05

A) Align the Side Wheel Supports with the Pedal Frame through holes at desired horizontal position.
B) Bolt through and secure with 2 x M6 Bolts, Washers and Flange Nuts on both sides.

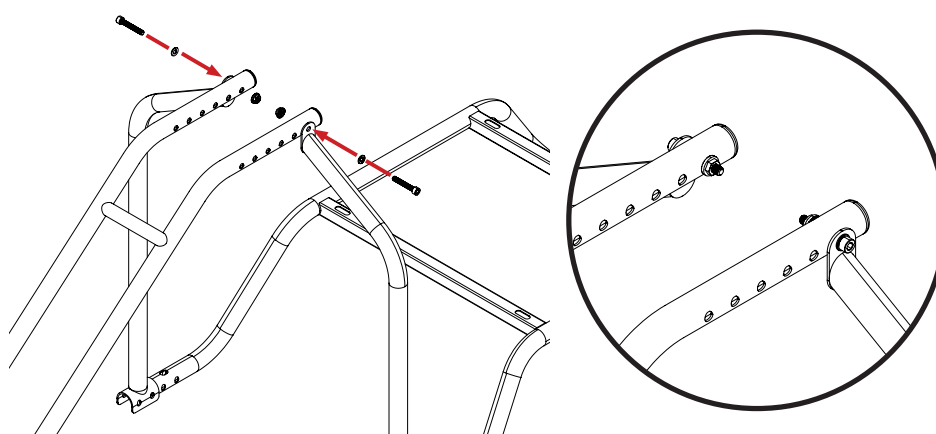

PARTS:


- 2 x M6 40mm Sockethead Bolts
- 2 x M6 Flange Nuts
- 2 x M6 Washers


06

Align through holes on the Centre Wheel Support with the Side Wheel Support through holes. Bolt through and secure with M6 Bolt, Washer and Flange Nut on each side.



Video Instruction: bit.ly/nlrbuild

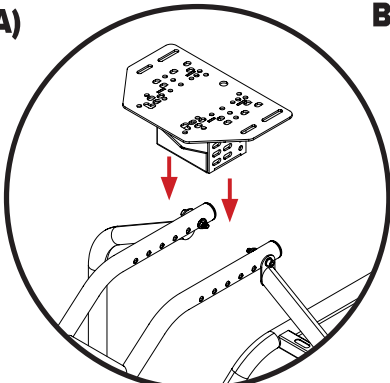A) 

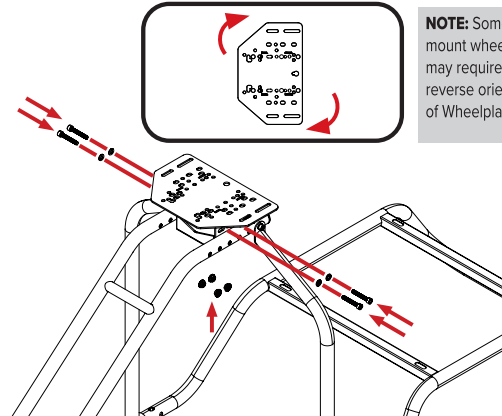B) 

NOTE: Some clamp mount wheelbases may require reverse orientation of Wheelplate.


PARTS:


- 1 x Wheel Plate
- 4 x M6 40mm Sockethead Bolts
- 4 x M6 Flange Nuts
- 4 x M6 Washers

07

A) Align the Wheel Plate with the Centre Wheel Support and adjust to desired position.
B) Bolt through and secure with 2 x M6 Bolts, Washers and Flange Nuts on each side.

SEAT INSTALLATION

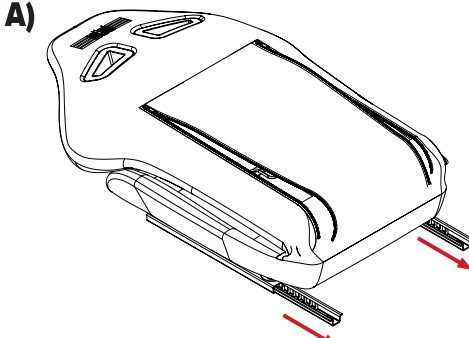A) 

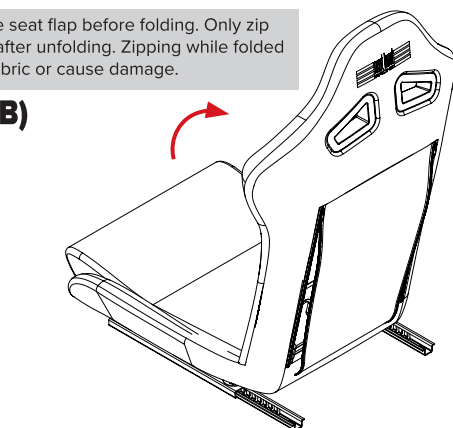B) 


NOTE: Unzip the seat flap before folding. Only zip the flap down after unfolding. Zipping while folded may tear the fabric or cause damage.


PARTS:

- 1 x Seat

08

A) Twist the Seat Slider Lever & slide the Seat Slider Rails all the way back.
B) Place the Seat on a flat stable surface & unfold the Seat.

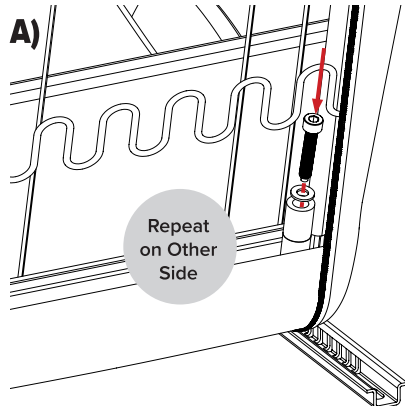A) 

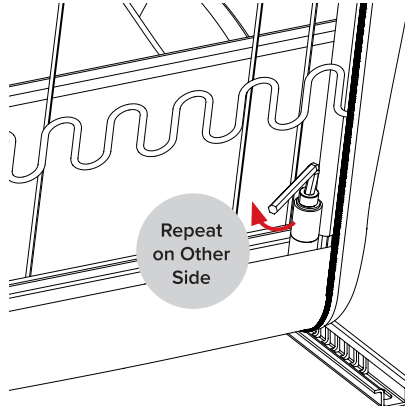B) 

PARTS:


- 2 x M8 40mm Socket Head Bolts
- 2 x M8 Washers

09


A) Underneath the unzipped flap at the back of the seat, insert an M8 40mm Socket Head bolt through M8 Washer & into the threaded tube within the locking area, located within the back of the Seat.
B) Secure Seat back rest in the upright position with Allen Key. Repeat on other side.



A)

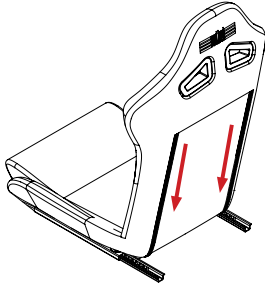

B)

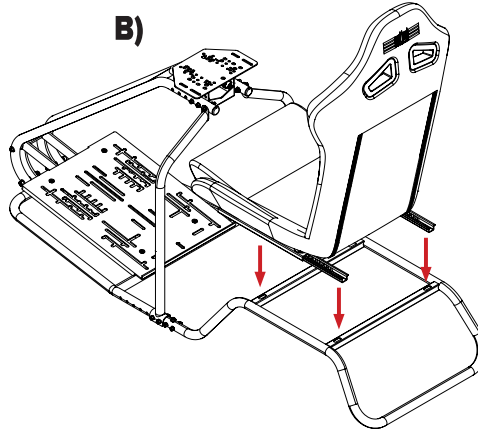


PARTS:

- NIL


10

A) Close zipped flap at the back of the seat.
B) Align the back Seat Slider mounting holes down onto the Seat Frame.

A)

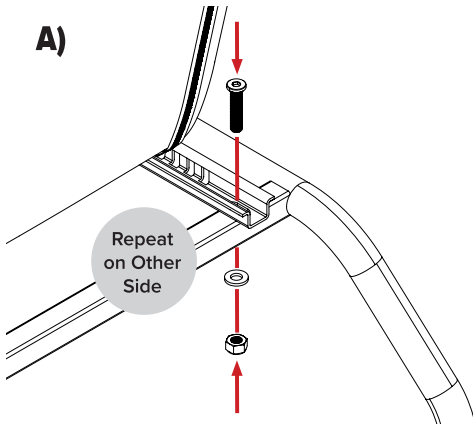

B)

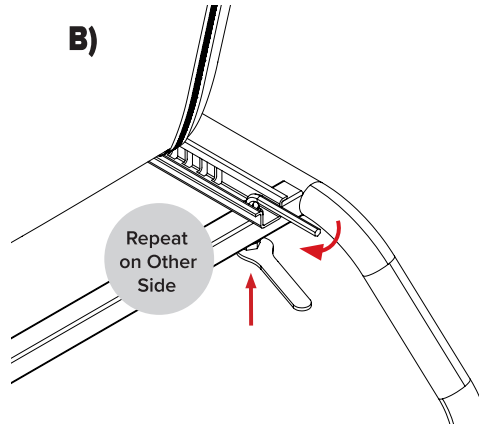

PARTS:

- 2 x M8 35mm Ultra Low Profile Sockethead Bolts



- 2 x M8 Washers



- 2 x M8 Lock Nuts



11

A) Align 2 x M8 Bolts and Washers with the through holes on the underside of the Rear Frame.
B) Bolt through and secure the Seat to the Frame with 2 x M8 Lock Nuts.

PARTS:


- NIL


12

Twist the Seat Slider Lever & slide the Seat all the way back, exposing the front Seat Slider mounting holes to be aligned.



Video Instruction: bit.ly/nlrbuild

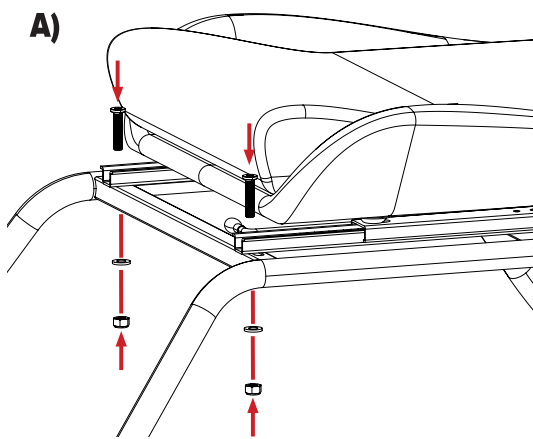A) 

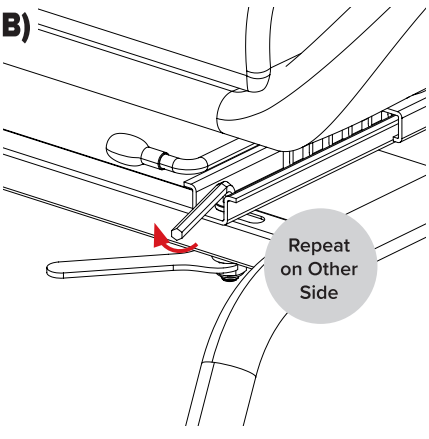B) 

PARTS:


- 2 x M8 35mm Ultra Low Profile Sockethead Bolts
- 2 x M8 Washers
- 2 x M8 Lock Nuts


13

A) Align 2 x M8 Bolts and Washers with the through holes on the underside of the Rear Frame.

B) Bolt through and secure the Seat to the Frame with 2 x M8 Lock Nuts.

ACRYLIC PANEL INSTALLATION

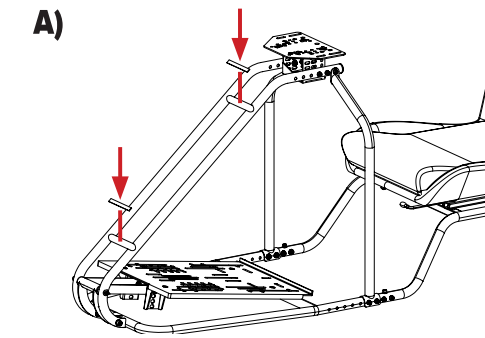A) 

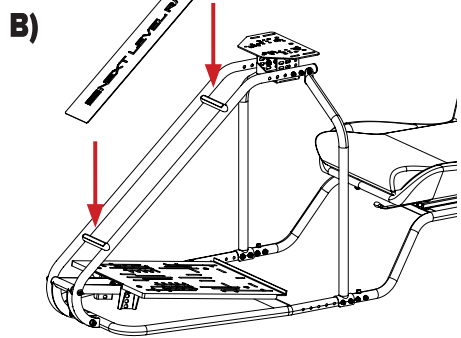B) 


PARTS:

- 2 x Double Sided Adhesive Tape
- 1 x Engraved Acrylic Panel

14

A) Use two strips of double-sided adhesive and stick them to the front of Centre Wheel Support.

B) Attach the Engraved Acrylic Panel to the Adhesive Strips on Centre Wheel Support.

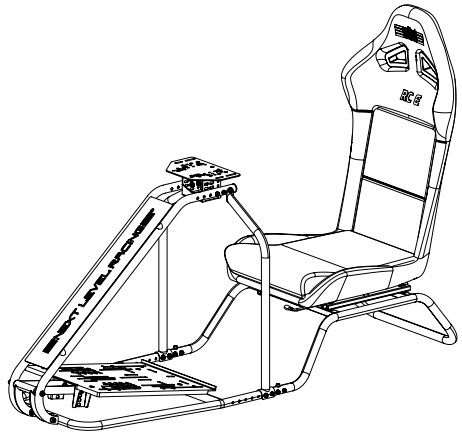

PARTS:



- NIL

15

Your Racing Cockpit Essential installation is complete.



WHEEL PLATE ADJUSTMENT

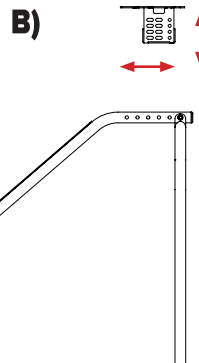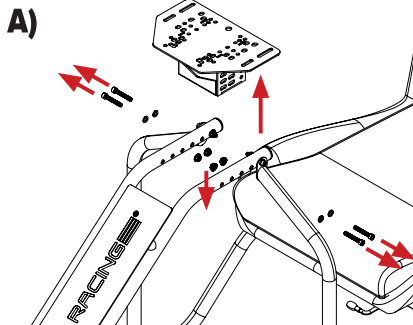



PARTS:

• NIL

16

A) Remove the Wheel Plate by uninstalling 4 x M6 Bolts, Washers and Flange Nuts.
B) Adjust Wheel Plate to desired angle and position. Replace the Bolts, Washers and Nuts.

PEDAL PLATE ADJUSTMENT

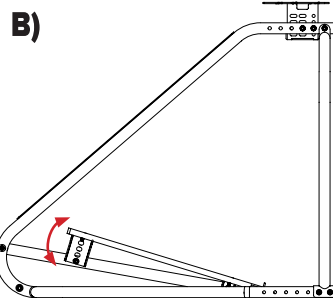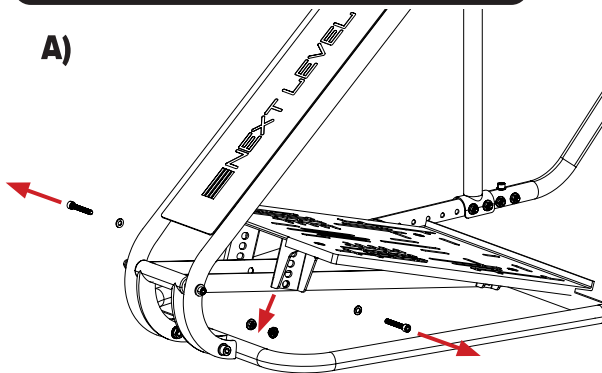


PARTS:

• NIL

17

A) Adjust the Pedal Plate angle by removing the above bolts.
B) Tilting the plate to adjust angle. Replace bolts to secure in place.

ALTERNATIVE: FLAT PEDAL PLATE ADJUSTMENT

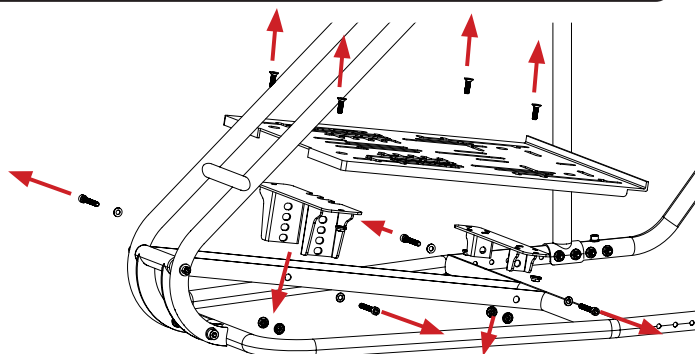

PARTS:


• NIL

18

Uninstall the above bolts to remove the Pedal Plate, Angle Bracket, Hinge Bracket.



Video Instruction: bit.ly/nlrbuild

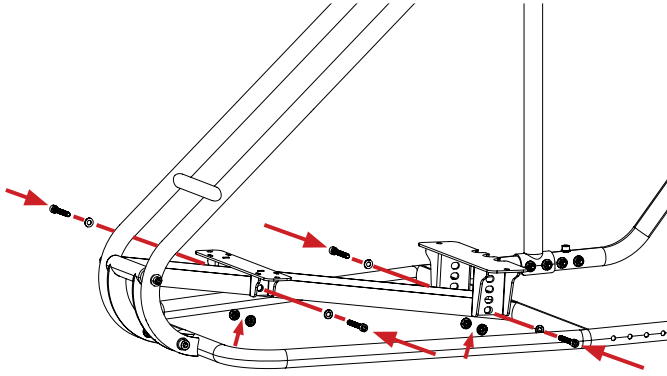


PARTS:

- NIL

19

Change the position of the Hinge Bracket and the Angle Bracket as shown above. Replace the Bolts.

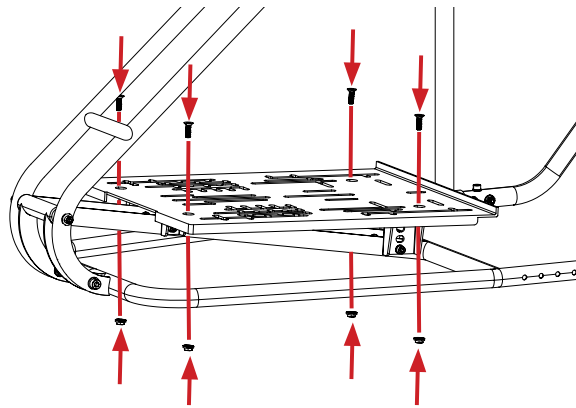

PARTS:

- NIL

20

Reinstall the Pedal Plate with the uninstalled Bolts.



Video Instruction: bit.ly/nlrbuild

DE

Racing Cockpit Essential Instruction Manual

VOR-RENNEN-CHECKS

WARNUNG

- Lesen und verstehen Sie dieses Handbuch und die Sicherheitsanweisungen, bevor Sie dieses Produkt verwenden.
- Bitte verwenden Sie keine Elektrowerkzeuge für den Zusammenbau, da zu viel Anziehen Teile beschädigen kann.
- Wenn Sie weitere Unterstützung benötigen, konsultieren Sie das Installationsvideo oder kontaktieren Sie uns unter support@nextlevelracing.com
- Zwingen Sie keine Teile zusammen.
- Vermeiden Sie das Quergewinde von Schrauben.
- Vorsicht vor scharfen Kanten.
- Benutzen Sie die Sitzgelegenheiten nicht, wenn ein Teil gebrochen, zerrissen oder fehlend ist.
- Stellen Sie sicher, dass alle Montageanschlüsse sicher festgezogen sind, und überprüfen Sie sie regelmäßig auf Sicherheit und Stabilität.
- Falten/bewegliche Teile stellen eine Klemmgefahr dar. Achten Sie beim Anpassen darauf, Verletzungen zu vermeiden.
- Sitze sind für Simulatoren und Esports konzipiert, nicht für den Straßenverkehr oder im Fahrzeug.

Wenn Sie Unterstützung bei Ihrem Produkt benötigen, wenden Sie sich bitte an unser freundliches Team unter: support@nextlevelracing.com

WARNUNG: ERSTICKUNGSGEFAHR

ERSTICKUNGSGEFAHR – Kleine Teile, die nicht für Kinder unter 3 Jahren oder für Personen gedacht sind, die dazu neigen, ungenießbare Gegenstände in den Mund zu stecken.

ANLEITUNG

START

Jeder Schritt entspricht einem Bild auf den vorangegangenen Seiten. Beziehen Sie sich bei Bedarf auf sie.

RENN-COCKPIT UNVERZICHTBARE MONTAGE

- 01 - A) Pedalrahmen mit dem hinteren Rahmen ausrichten. B) Durch die Seite des Rahmens schrauben und mit 2 M6-Schrauben, Unterlegscheiben und Flanschmuttern auf jeder Seite sichern.
- 02 - Schrauben Sie oben durch die Rahmenbaugruppe und sichern Sie mit jeweils 1 M6-Schraube und Unterlegscheibe auf jeder Seite.
- 03 - A) Die Durchgangslöcher der mittleren Radstütze mit den Durchgangslöchern des Pedalrahmens ausrichten. B) Durch die unteren Löcher mit 2 x M8 60mm Schrauben, Unterlegscheiben und Flanschmuttern schrauben und durch die oberen Gewindelöcher mit 2 x M8 35mm Schrauben und Unterlegscheiben schrauben.
- 04 - ANPASSUNG DER SEITENRADPLATTENSTÜTZE: A) Empfohlene Seitenradstützposition für Nutzer 120 cm bis 160 cm Höhe. B) Vorgeschlagene Position der Seitenradstütze für Nutzer 160 cm+ in der Höhe.
- 05 - A) Die Seitenradstützen mit dem Pedalrahmen durch Löcher in der gewünschten horizontalen Position ausrichten. B) Durchschrauben und sichern mit 2 M6-Schrauben, Unterlegscheiben und Flanschmuttern auf beiden Seiten.
- 06 - Durchgangslöcher an der mittleren Radstütze mit den Seitenradstützlöchern ausrichten. Schrauben Sie durch und sichern Sie mit M6-Schraube, Unterlegscheiben und Flanschmutter auf jeder Seite.
- 07 - Die Radplatte mit der mittleren Radstütze ausrichten und auf die gewünschte Position einstellen. B) Durchschrauben und sichern mit 2 M6-Schrauben, Unterlegscheiben und Flanschmuttern auf jeder Seite. HINWEIS: Bei einigen Lenkradbasisstationen mit Klemmhalterung kann eine umgekehrte Ausrichtung der Radplatte erforderlich sein.
- 08 - SITZMONTAGE: A) Drehen Sie den Sitzschieberhebel und schieben Sie die Sitzschieberschienen ganz nach hinten. B) Den Sitz auf eine ebene, stabile Fläche stellen und den Sitz ausklappen.
- HINWEIS: Öffnen Sie den Reißverschluss der Sitzklappe vor dem Zusammenfallen. Schließen Sie den Reißverschluss erst nach dem Aufklappen. Das Schließen im gefalteten Zustand kann den Stoff reißen oder Schäden verursachen.
- 09 - A) Unter der geöffneten Klappe an der Rückseite des Sitzes wird eine M8 40mm Steckschlüsselschraube durch die M8-Unterlegscheibe und in das Gewinderohr im Verriegelungsbereich eingesetzt, das sich am Rücken des Sitzes befindet. B) Sitzlehnenlehne mit Inbusschlüssel in aufrechter Position befestigen. Wiederhole auf der anderen Seite.
- 10 - A) Geschlossene Reißverschlussklappe an der Rückseite des Sitzes. B) Richten Sie die Befestigungslöcher des Rücksitzschiebers auf den Sitzrahmen aus.
- 11 - A) Richten Sie 2 x M8-Schrauben und Unterlegscheiben mit den Durchgangslöchern an der Unterseite des hinteren Rahmens aus. B) Durchschrauben und den Sitz mit 2 M8-Sicherungsmuttern am Rahmen befestigen.
- 12 - Drehen Sie den Sitzschieberhebel und schieben Sie den Sitz ganz nach hinten, sodass die vorderen Befestigungslöcher freigelegt werden.
- 13 - A) Richten Sie 2 x M8-Schrauben und Unterlegscheiben mit den Durchgangslöchern an der Unterseite des Heckrahmens aus. B) Durchschrauben und den Sitz mit 2 M8-Sicherungsmuttern am Rahmen befestigen.
- 14 - INSTALLATION VON ACRYL-PANEELEN: A) Verwenden Sie zwei Streifen doppelseitigen Klebmittels und kleben Sie sie an die Vorderseite der mittleren Radstütze. B) Das gravierte Acrylpanel an den Klebestreifen an der mittleren Radstütze befestigen.
- 15 - Ihre Installation des Racing Cockpit Essential ist abgeschlossen.
- 16 - RADPLATTENEINSTELLUNG: a) Entfernen Sie die Radplatte durch Entfernen von 4 M6-Schrauben, Unterlegscheiben und Flanschmuttern. B) Radplatte auf den gewünschten Winkel und die gewünschte Position einstellen. Ersetzen Sie die Schrauben, Unterlegscheiben und Muttern.
- 17 - EINSTELLUNG DER PEDALPLATTE: A) Den Winkel der Pedalplatte durch Entfernen der oben genannten Schrauben anpassen. B) Die Platte neigen, um den Winkel anzupassen. Schrauben ersetzen, um sie zu befestigen.
- 18 - ALTERNATIVE EINSTELLUNG DER FLACHEN PEDALPLATTE: Lösen Sie die oben genannten Schrauben, um die Pedalplatte, die Winkelhalterung und die Scharnierhalterung zu entfernen.
- 19 - Ändern Sie die Position der Scharnierhalterung und der Winkelhalterung wie oben gezeigt. Ersetze die Schrauben.
- 20 - Pedalplatte mit den abmontierten Bolzen wieder einsetzen.
- Für Fragen, Informationen oder technische Unterstützung wenden Sie sich bitte an unser Team bei support@nextlevelracing.com